

THANK YOU FOR YOUR PURCHASE!



 
Product instructions made easy

Scan to watch a step-by-step instructional video, or visit <https://byjasco.com/57338I>.



Register your Philips product

Get exclusive, web-only deals and more! Scan here, or visit byjasco.com/deals.



Need more accessories?

For additional Philips doorbell receivers, push buttons and more, visit our website!
byjasco.com/chimes



Like our product?

Leave us a review on Amazon.com or your favorite retailer website!



Having issues and need support?

Call **1-844-816-0320**
Monday-Friday, from 7AM-8PM Central Time.

MADE IN CHINA

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips NV. and are used under license.

This product has been manufactured by and is sold under the responsibility of Jasco Products Company, and Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114, USA is the warrantor in relation to this product.

This product has a 1-year limited warranty. Visit www.philips.com/support for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320, M-F, 7AM-8PM Central Time.

For product patent information, visit www.byjasco.com/patents.

User manual

Having issues and need support?

Call our U.S.-based experts Monday-Friday, 7AM–8PM Central Time
1-844-816-0320



100% recyclable

Separate paper from plastic before recycling

byjasco.com/recycle
paper made from 25% post consumer waste

FCC INFORMATION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important note: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

If the doorbell does not work:

- Make sure the push button is pressed down and held for at least one second.
- Verify battery installation is correct (check polarity).
- Replace the batteries in the push button.
- Test a new location for the push button.
- Ensure doorbell is within 150 feet from the decoy camera push button.*
- Ensure decoy camera push button is not mounted on metal, near metal studs or near the floor.
- Test a new location for the doorbell.
- If the doorbell and push button still do not operate, repeat the electronic pairing process of the push button to the doorbell listed below:
- To clear settings, press and hold the melody selection button on the top side of the doorbell while installing the third battery until you hear "ding dong," then release the melody selection button.
- Press and hold the melody selection button again, until you hear the double beep to alert you the doorbell is ready to pair with the decoy camera push button. Release the melody selection button.
- After 10 seconds, a double beep indicates the doorbell and push button are paired.
- Press the decoy camera push button to test.

***Functional range may be adversely affected by one or more of the following factors: weather, radio frequency interference, low transmitter battery or obstructions between the transmitter and receiver.**

NOTE: This is a decoy video doorbell and will not record video or take pictures. Once batteries are installed, the LED ring turns on when the doorbell is pressed — fresh batteries typically operate the product more than one year.

IV. MELODY SELECTION SETTING

To select a doorbell melody:

- Push the melody selection button on top of the square battery-operated doorbell receiver housing.
- Press and release the melody selection button until you hear the desired melody. The last melody played is your selected doorbell melody.

32 Melody playlist:

1	Ding Dong-1	12	William Tell
2	Westminster	13	Turkish
3	Knocks	14	March-1
4	Ding Dong-2	15	March-2
5	Ding Dong-3	16	Happy
6	Cuckoo	17	March-3
7	Bell	18	Christmas
8	Airport Notice	19	Waltz
9	For Elise	20	Four
10	Jingle Bells-1	21	Freude
11	Memory-1	22	Swans
12	Dances	23	Whistling
13	Hungarian	24	Sonata
14	Memory	25	Moscow
15	Childhood	26	Nights
16	Jingle Bells-2	27	
17	Freude	28	
18	Swans	29	
19	Whistling	30	
20	Sonata	31	
21	Moscow	32	
22	Nights		
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			

To select a volume setting:

- Press and release the volume button to adjust the sound level.

III. MOUNTING INSTRUCTIONS

Doorbell (receiver)

This doorbell receiver is designed to be portable and can be used up to 150 ft. from the decoy camera push button. It can also be mounted on a wall using the rear-facing keyhole slot. Not for use in wet locations.

Decoy camera push button (transmitter)

NOTE: Avoid mounting on metal surfaces, as it may reduce range of transmission. Do not mount in an area exposed to direct rain. Push buttons are typically mounted at the same height as the doorknob or handle between 36-44 in. above the floor.

Mounting with tape

- Clean the nonmetal mounting location for the push button with a mixture of 50% water and 50% isopropyl alcohol.
- Remove protective backing from one side of the adhesive pad and attach it to the mounting plate of the push button.
- Remove protective backing from the other side of the adhesive pad and press the mounting plate to the cleaned mounting location. Hold in place for a few seconds to secure the bond.

Mounting with screws

- Hold the mounting plate of the decoy camera in the selected location with the arrow on the mounting plate pointing up.
- Installation options:
 - A) Brick or concrete — use a 15/64 in. drill bit to drill two holes through the mounting plate and into the mounting surface. Insert the included 7.5x24 mm anchors.
 - B) Wood — use a drill or screwdriver to install the screws directly into the wood.
- Insert two included 3x20 mm screws, then tighten them. (Fig. 4)
- Press down the decoy camera onto the mounting plate firmly, then secure it with the included Phillips-head 3x10 mm screw at the bottom side of the decoy camera.



CAUTION

- BATTERIES MAY LEAK HARMFUL LIQUIDS OR IGNITABLE MATERIALS OR EXPLODE CAUSING INJURY AND PRODUCT DAMAGE
- DO NOT MIX OLD AND NEW OR OTHER BATTERY TYPES
- REPLACE ALL BATTERIES AT THE SAME TIME
- REPLACE EXHAUSTED BATTERIES IMMEDIATELY
- REMOVE BATTERIES IF PRODUCT IS TO BE UNUSED FOR EXTENDED OF TIME

Doorbell (receiver)

- Remove the battery cover.
- Install 3 AA batteries (not included).

Push button (transmitter)

- Remove mounting plate by loosening the Phillips screw at the bottom of the decoy security push button. (Fig. 1)
- Install 3 AAA batteries (not included).
- Secure the mounting plate to the bottom of the decoy camera using the attached Phillips-head screw.

The doorbell and push button are electronically paired during production. Once the batteries are installed in the push button and doorbell receiver, press the push button to ensure the doorbell operates correctly.

If the doorbell chime does not chime when the batteries are installed and the push button is pressed, see troubleshooting section.

The decoy camera's motion sensor has a 120-degree detection angle and up to 12ft. detection range.

NOTE: To conserve battery life, the motion-activated path light automatically turns off 15 seconds after motion is NOT detected.

Manual de usuario

¿Tiene problemas y necesita ayuda?

Llame a nuestros expertos en los EE. UU., de lunes a viernes, de 7 a. m. a 8 p. m. (hora estándar del centro)

1-844-816-0320

PRECAUCIÓN

- LAS PILAS PUEDEN DESPRENDER LÍQUIDOS NOCIVOS O MATERIALES INFLAMABLES QUE PUEDEN CAUSAR DAÑO AL USUARIO O AL PRODUCTO
- NO MEZCLE TIPOS DE PILAS NUEVAS Y VIEJAS O DE OTRO TIPO
- CAMBIE TODAS LAS PILAS AL MISMO TIEMPO
- CAMBIE LAS PILAS COMPLETAMENTE GASTADAS DE FORMA INMEDIATA
- RETIRE LAS PILAS SI EL PRODUCTO SE VA A UTILIZAR PARA MUCHO TIEMPO

GRACIAS POR SU COMPRA

Registre su producto Philips

Para ofertas exclusivas, que solo encontrará en Internet y más! Escanee o visite <https://byjasco.com/573381>

Escanee para ver un video instructivo

byjasco.com/chimes

Para ver más receptores, botones táctiles y muchos más productos Philips, visite nuestro sitio web.

¿Necesita más accesorios?

¿Le gusta nuestro producto?

¿Tiene problemas y necesita ayuda?

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

Manual de usuario

¿Tiene problemas y necesita ayuda?

Llame a nuestros expertos en los EE. UU., de lunes a viernes, de 7 a. m. a 8 p. m. (hora estándar del centro)

1-844-816-0320

PRECAUCIÓN

- LAS PILAS PUEDEN DESPRENDER LÍQUIDOS NOCIVOS O MATERIALES INFLAMABLES QUE PUEDEN CAUSAR DAÑO AL USUARIO O AL PRODUCTO
- NO MEZCLE TIPOS DE PILAS NUEVAS Y VIEJAS O DE OTRO TIPO
- CAMBIE TODAS LAS PILAS AL MISMO TIEMPO
- CAMBIE LAS PILAS COMPLETAMENTE GASTADAS DE FORMA INMEDIATA
- RETIRE LAS PILAS SI EL PRODUCTO SE VA A UTILIZAR PARA MUCHO TIEMPO

GRACIAS POR SU COMPRA

Registre su producto Philips

Para ofertas exclusivas, que solo encontrará en Internet y más! Escanee o visite <https://byjasco.com/573381>

Escanee para ver un video instructivo

byjasco.com/chimes

Para ver más receptores, botones táctiles y muchos más productos Philips, visite nuestro sitio web.

¿Necesita más accesorios?

¿Le gusta nuestro producto?

¿Tiene problemas y necesita ayuda?

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

Manual de usuario

¿Tiene problemas y necesita ayuda?

Llame a nuestros expertos en los EE. UU., de lunes a viernes, de 7 a. m. a 8 p. m. (hora estándar del centro)

1-844-816-0320

PRECAUCIÓN

- LAS PILAS PUEDEN DESPRENDER LÍQUIDOS NOCIVOS O MATERIALES INFLAMABLES QUE PUEDEN CAUSAR DAÑO AL USUARIO O AL PRODUCTO
- NO MEZCLE TIPOS DE PILAS NUEVAS Y VIEJAS O DE OTRO TIPO
- CAMBIE TODAS LAS PILAS AL MISMO TIEMPO
- CAMBIE LAS PILAS COMPLETAMENTE GASTADAS DE FORMA INMEDIATA
- RETIRE LAS PILAS SI EL PRODUCTO SE VA A UTILIZAR PARA MUCHO TIEMPO

GRACIAS POR SU COMPRA

Registre su producto Philips

Para ofertas exclusivas, que solo encontrará en Internet y más! Escanee o visite <https://byjasco.com/573381>

Escanee para ver un video instructivo

byjasco.com/chimes

Para ver más receptores, botones táctiles y muchos más productos Philips, visite nuestro sitio web.

¿Necesita más accesorios?

¿Le gusta nuestro producto?

¿Tiene problemas y necesita ayuda?

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

Manual de usuario

¿Tiene problemas y necesita ayuda?

Llame a nuestros expertos en los EE. UU., de lunes a viernes, de 7 a. m. a 8 p. m. (hora estándar del centro)

1-844-816-0320

PRECAUCIÓN

- LAS PILAS PUEDEN DESPRENDER LÍQUIDOS NOCIVOS O MATERIALES INFLAMABLES QUE PUEDEN CAUSAR DAÑO AL USUARIO O AL PRODUCTO
- NO MEZCLE TIPOS DE PILAS NUEVAS Y VIEJAS O DE OTRO TIPO
- CAMBIE TODAS LAS PILAS AL MISMO TIEMPO
- CAMBIE LAS PILAS COMPLETAMENTE GASTADAS DE FORMA INMEDIATA
- RETIRE LAS PILAS SI EL PRODUCTO SE VA A UTILIZAR PARA MUCHO TIEMPO

GRACIAS POR SU COMPRA

Registre su producto Philips

Para ofertas exclusivas, que solo encontrará en Internet y más! Escanee o visite <https://byjasco.com/573381>

Escanee para ver un video instructivo

byjasco.com/chimes

Para ver más receptores, botones táctiles y muchos más productos Philips, visite nuestro sitio web.

¿Necesita más accesorios?

¿Le gusta nuestro producto?

¿Tiene problemas y necesita ayuda?

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.

byjasco.com/deals.