

Magnetic Window Alarm

Indoor Use Only

- 120dB alarm sounds when magnetic contact is broken
- On/Off switch and low battery push button hidden in compartment
- Indicator for armed/disarmed status
- Easy to install - no wiring necessary

GAP BETWEEN ALARM AND MAGNETIC SENSOR

Alarm is activated when switched ON and gap between alarm and magnetic sensor is greater than 0.5 ".

BATTERY TEST AND INSTALLATION

The GE Magnetic Window Alarm requires (4) LR44 button batteries (included). Average battery life for typical usage is up to one year.

1. Slide cover off the battery compartment located on the front of the main unit.
2. Push the 'Battery Test' push-button in the battery compartment. If the green light illuminates, the battery is still good. If it fails to illuminate, replace all batteries.
3. Insert (4) LR44 button batteries noting polarity.
4. Replace battery compartment cover.

IMPORTANT: Remove batteries before storing the Alarm for extended periods. Batteries corrode over time and may cause permanent damage to the unit. Different types of batteries or new and used batteries should not be mixed. Depleted batteries should be removed and disposed of properly.

INSTALLATION

Using the double sided adhesive tape provided, mount the alarm and magnetic sensor on window, door, or cabinet to be protected, placing one of the units on the part of the fixture that opens (window) and the other unit on the stationary part of the fixture (frame). Mount so that when the window, door or cabinet is closed, the gap between the alarm and sensor is no more than 0.5 " (preferably less).

OPERATION

1. To arm the unit, slide cover off the battery compartment located on the front of the main unit. Toggle ON/OFF switch to the ON position. The window on the housing will become red. Replace battery compartment cover. Whenever the protected window, door or cabinet is opened (causing the alarm to be separated from the magnetic sensor by more than 0.5 "), the alarm siren will sound continuously until disarmed.
2. To disarm the unit, slide cover off the battery compartment. Toggle ON/OFF switch to OFF Position. Make sure the window, door or cabinet is closed before rearming.

NOTE: To test, a cloth can be used to cover the alarm to reduce risk of hearing damage.

CARE AND MAINTENANCE

To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

 
Pressure Activated Door Stop Alarm

Indoor Use Only

- Great travel alarm - hotel rooms, apartments
- 120dB alarm sounds when alarm is activated



- On-off switch activates and deactivates alarm
- Low-battery indicator light

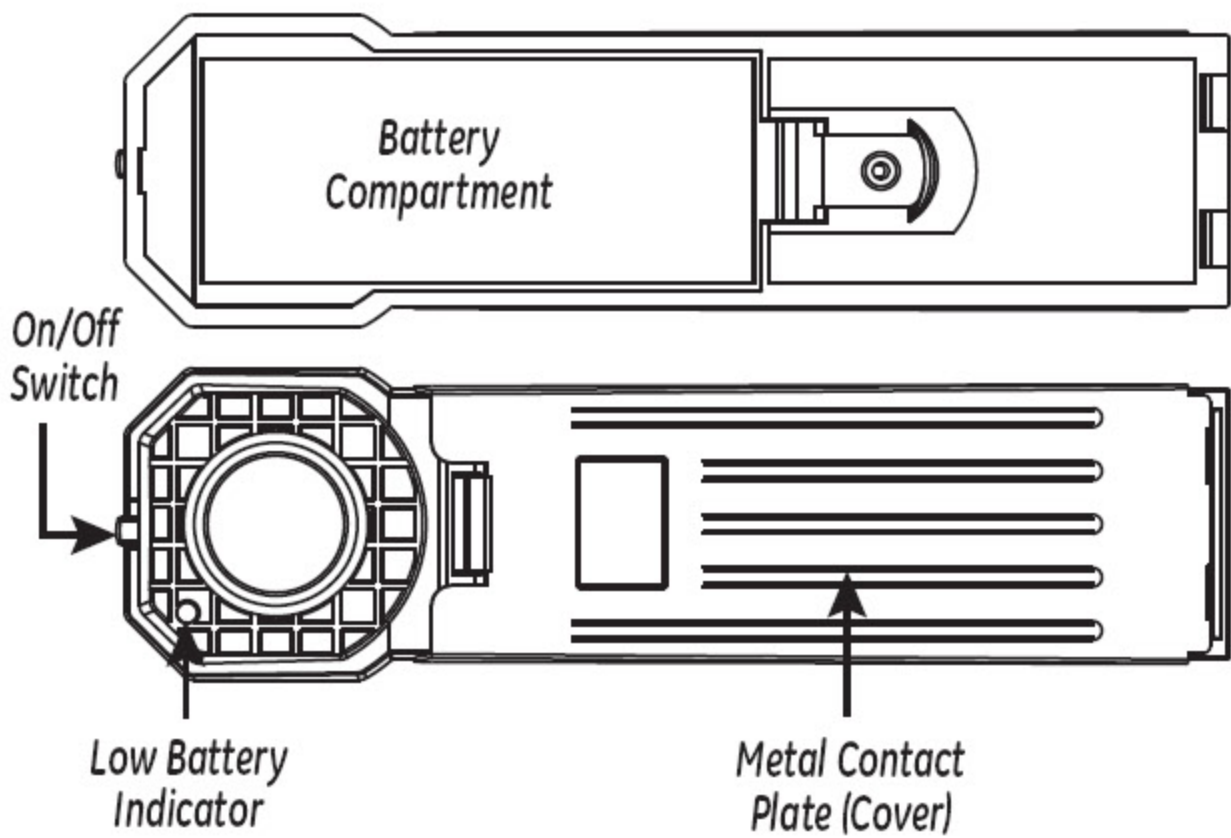

BATTERY INSTALLATION

 
The door stop alarm requires one 9V battery. When the Low-Battery Indicator illuminates, batteries need replacing.

1. Toggle On/Off switch to the 'OFF' position to prevent unintentional triggering.
2. Remove screw on the bottom of the door stop and battery compartment cover.
3. Fit 9V battery to the connecting leaf, making sure the terminal polarities are correct.
4. Replace cover.

IMPORTANT: Remove batteries before storing the Alarm for extended periods. Batteries corrode over time and may cause permanent damage to the unit. Depleted batteries should be removed from the unit and disposed of properly.

TESTING THE ALARM

1. Toggle the On/Off switch to 'ON'.
2. Quickly but firmly tap down and release the metal on the cover unit. A quick siren chirp indicates proper operation. NOTE: A cloth can be used to cover the alarm to reduce risk of hearing damage.
3. Toggle the On/Off switch to 'OFF'.

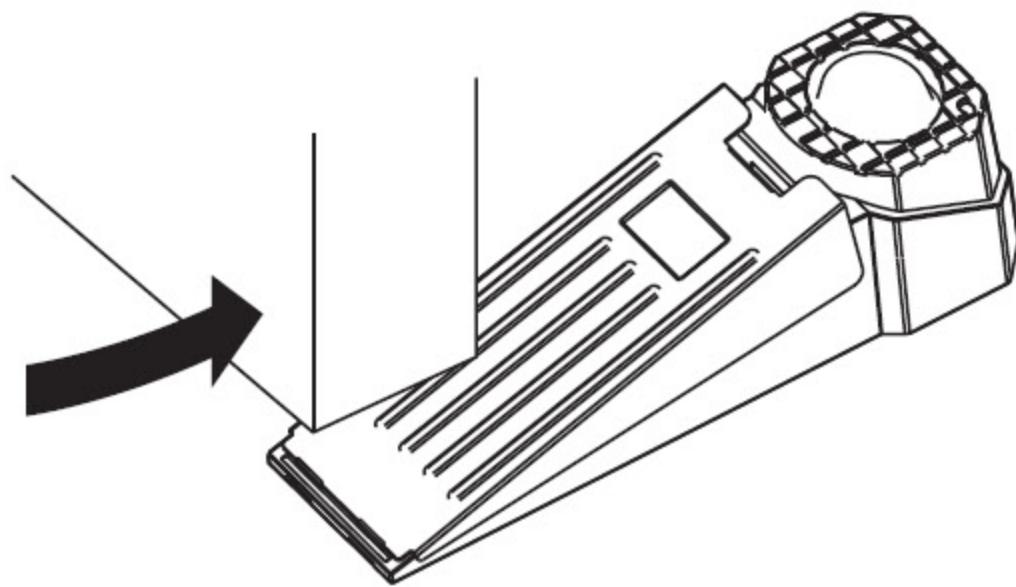

INSTALLATION: Insert door wedge at the base of the door as shown in the diagram, with the pointed edge under the door gap. The alarm is properly installed if the alarm sounds and the metal contact plate is depressed when the door is opened. Make sure the non-skid pads on the bottom of the alarm are in firm contact with the floor.

OPERATION

1. Toggle the On/Off switch to 'ON' to activate alarm.
2. Toggle the On/Off switch to 'OFF' to deactivate alarm.

CARE AND MAINTENANCE To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

 
Personal Security Alarm

- 120dB alarm sounds when pin is removed
- Handy security alarm and light goes everywhere with you



BATTERY INSTALLATION

Before using your Personal Key Chain Alarm, remove the insulation tape between the alarm housing and the battery compartment. The Alarm requires (4) LR44 batteries (included). Test the batteries by the pushbutton

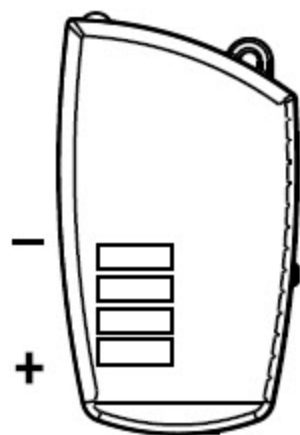

on the left side of the unit. Replace the batteries if the red light does not illuminate. Average battery life for typical usage is up to 6 months.

1. Access the battery compartment by removing the three screws on the back of the unit and separating the front and back halves of the alarm.
2. Insert (4) LR44 button batteries noting polarity.
3. Replace back of the alarm and secure with screws.

IMPORTANT! Remove batteries before storing the Alarm for extended periods. Batteries corrode over time and may cause permanent damage to the unit. Do not mix different battery types or new and used batteries. Depleted batteries should be disposed of properly.

OPERATION OF ALARM, LIGHT

1. To activate siren, hold alarm in one hand and pull on cord with the other, pulling metal pin out of alarm body.
2. To stop the siren, reinsert the metal pin back into the alarm body.
3. To use light, press and hold button on left side of unit.

90 DAY LIMITED WARRANTY: Jasco Products Company warrants this product to be free from manufacturing defects for a period of ninety days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company
311 N.W. 122nd
Oklahoma City, OK. 73114



45216-2 3/31/06

User's Manual

Instrucciones

Easy to Install

Portable Security Kit

*Equipo Portátil de Seguridad
fácil de instalar*

DO NOT USE IN WET LOCATIONS

**NO EMPLEE ESTOS PRODUCTOS
EN LUGARES MOJADOS**

GE is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 311 N.W. 122nd Street, Oklahoma City, OK 73114.
www.jascoproducts.com