

PHILIPS

Audio/Video

SRP6320R/27

Roku® + TV universal remote



This product and its sellers are not affiliated with Roku®. There is no endorsement or sponsorship by non-affiliated brands provided or implied. All brand names and products listed/shown are trademarks of their respective owners.

See reverse for easy-to-follow instructions and exclusive deals.

Thank you for your purchase!



Product instructions made easy

Scan to watch a step-by-step instructional video or visit byjasco.com/54464i



Register your Philips product

Get exclusive, web-only deals and more! Scan here or visit byjasco.com/deals

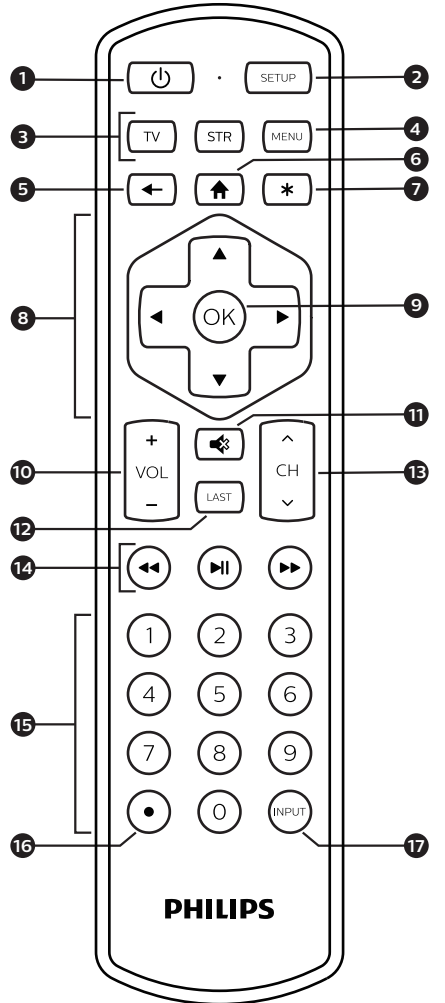 
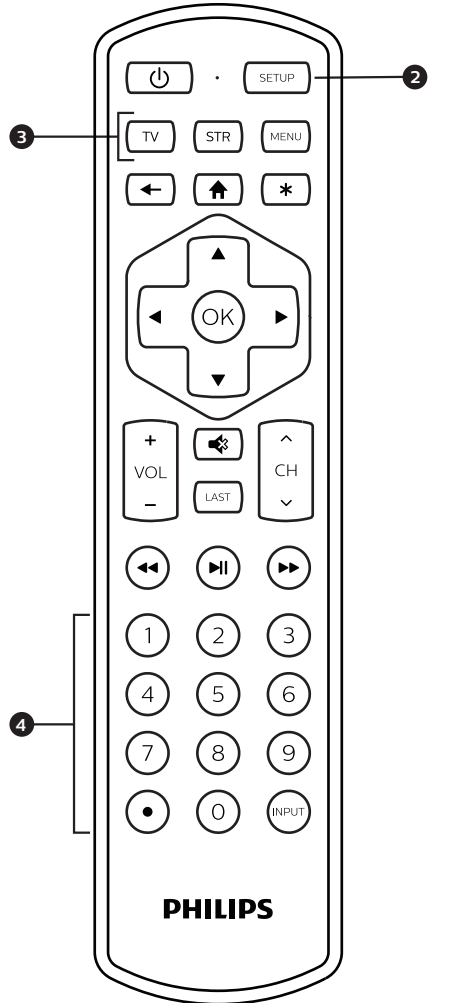 
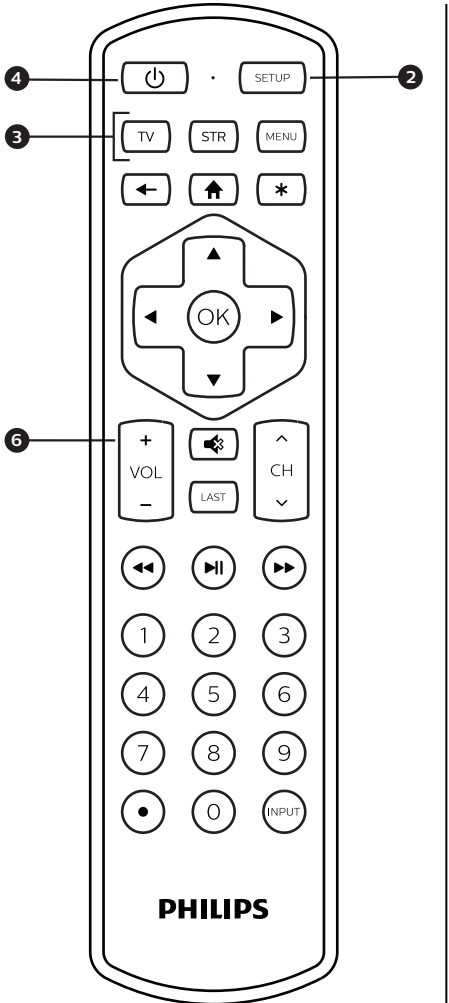 
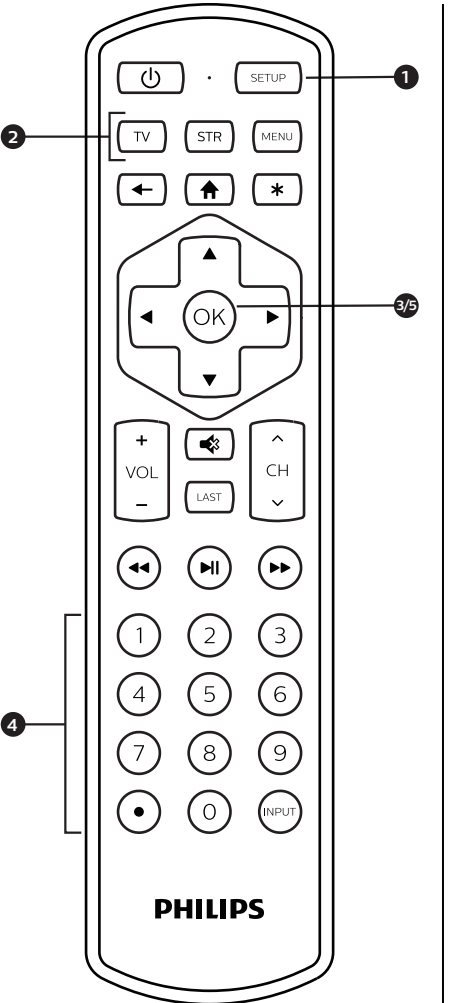 
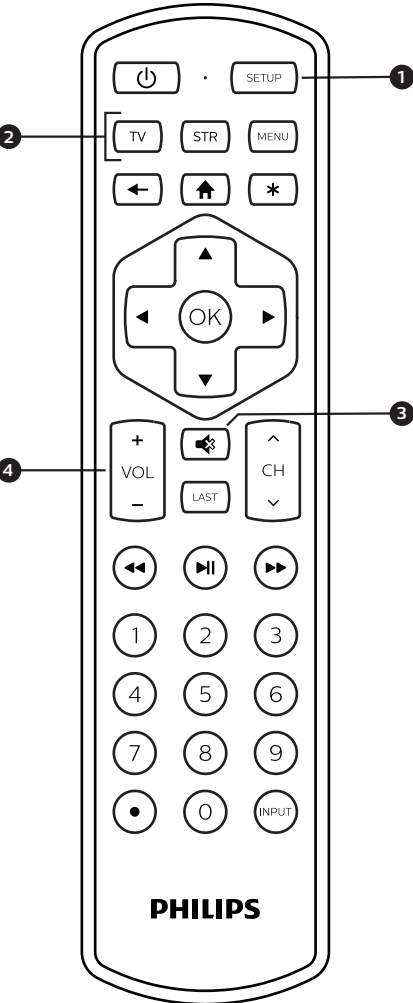 


Need more remote control devices?
For additional Philips remote controls, visit our website! byjasco.com/remotes

Like our product? Leave a review on your favorite retailer website or amazon.com

Having problems? Let us know how we can help. Call 1-844-816-0320 between 7AM-8PM, M-F, Central Time.

Setup	Button Functions	Direct Code Entry	Auto Code Search	Code Identification	Primary Audio Control
Preprogrammed for immediate use with Samsung TVs and Roku boxes, simply insert two (2) AA batteries (not included) and you're ready to enjoy your favorite shows. Alkaline batteries are recommended for this remote. Battery Installation - Press and slide battery cover downward to remove. - Insert the batteries, making sure to match the (+) (-) polarity inside the compartment. - Slide battery cover back into place. Note: If your remote is not operating properly, replace the batteries with new ones. Battery Precautions - Do not mix old and new batteries. - Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries. - Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations. Battery Saver Your remote automatically turns off if the buttons are held down for more than 8 seconds. This saves battery life if your remote gets stuck in a place where the buttons remain depressed (e.g., between sofa cushions). Code Saver You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.					
	Power – Turns TV ON/OFF Setup – Used to program the remote Device buttons – Select the device to control Menu – Displays on-screen menu Back – Returns to previous menu/screen Home – Returns to the home screen to access streaming features Options (*) – Displays additional options Up/down/left/right menu navigation OK – Selects menu items Volume up/down Mute – Mutes sound Last – Returns to previous channel Channel up/down Rewind, play/pause, fast forward Numbers – Enter numbers for direct channel selection Dot (.) – For direct entry of digital channels, e.g., 4.1 Input – Selects video input or Guide on cable and satellite receivers	This remote is preprogrammed for use with Samsung TVs and Roku boxes. For programming other devices, direct code entry is quick, easy and recommended. - In the Code List (included with remote), circle the 4-digit codes for the type and brand of device you wish to control. - Press and hold down SETUP until the remote's red light turns on. - Press and release the chosen device button (e.g., TV). The red light will blink once and remain on. - Enter the first 4-digit code circled in Step 1. The red light will turn off. - Point the remote at the device and test the buttons. If they don't work as expected, repeat Steps 2-5 with the next circled code. - Repeat the process for each device you wish to control. Programming notes - Some codes may operate only a few device functions, so test other codes for more functionality. - Trouble finding a code? Program the remote using the auto code search method. - Keep your device codes for future reference.	Auto code search cycles through all codes in the remote to find one for your device. Before you begin, read through the steps below to familiarize yourself with the auto code search process. - Manually turn on the device you wish to control. (Use the direct code entry method for devices without ON/OFF capability.) - Press and hold down SETUP until the remote's red light turns on. - Press and release the chosen device button (e.g., TV). The red light will blink once and remain on. - Point the remote at the device and press POWER. The red light will blink and then remain on after cycling through 10 codes. Did the device turn off? YES – Go to Step 5. NO – repeat Step 4 to test the next 10 codes. - Manually turn on the device. - Point the remote at the device and press VOL+. The red light will blink once and remain on. Did the device turn off? YES – Press and release the same device button pressed in Step 3. Then go to Step 7. NO – Repeat Step 6 until the device turns off. Wait 3 seconds between each VOL+ button press. - Use the remote to turn on the device. Test the remote's buttons. If they don't work as expected, repeat Steps 2-7. - Repeat the process for each device you wish to control.	Code identification lets you retrieve the 4-digit code used to program each of your device buttons. - Press and hold down SETUP until the red light turns on. Then, release it. The red light will remain on. - Press the device button for the code you seek. - Press OK. - On the number pad, press 1 and count how many times the red light blinks. This is the first digit in your code. Repeat the process by pressing 2, 3 and 4 for the remaining digits. - Press OK to exit this mode.	Primary audio control lets you select an audio device to control the volume no matter which component you're operating, like your TV. Enabling Primary Audio Control - Press and hold SETUP until the red light remains on. - Press the device button for the audio component you wish to use. - Press the MUTE button. - Press VOL+. The red light will blink twice and turn off. Disabling Primary Audio Control - Press and hold SETUP until the red light remains on. - Press the device button programmed for primary audio control. - Press the MUTE button. - Press VOL-. The red light will blink twice and turn off. MADE IN CHINA The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license. This product has been manufactured and is sold under the responsibility of Jasco Products Company, and Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 is the warrantor in relation to this product. This product comes with a 90-day warranty. Visit www.philips.com/support for warranty details. Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320 between 7AM-8PM, M-F, Central Time.
	Reset to Factory Settings - Press and hold SETUP until the red light stays on. - Press and release the MUTE button. - Press and release 0 (zero). The red light will blink twice.	Combo Devices Some combo devices (e.g., TV/VCR, DVD/VCR, etc.) require use of a separate mode button for each part of the combo device. For example, if you have a TV/DVD combo, you might need to set up a TV code under the TV button and a separate DVD code under the DVD button to control each component.			

FCC Statement		Preparación		Funciones de los Botones		Entrada directa de código		Búsqueda automática de códigos		Identificación de Códigos		Control de audio primario	
Suppliers Declaration of Conformity Model #: SRP6320R/27 Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. ICES-3(B)/NMB-3(B).		Preprogramado para uso inmediato con su caja Roku, simplemente inserte dos (2) pilas AA (no incluidas) y estará listo para disfrutar sus programas favoritos. Se recomiendan pilas alcalinas para este control remoto. Instalación de las pilas 1. Presione y deslice la tapa de las pilas hacia abajo para retirarla. 2. Inserte las pilas asegurándose de que coincidan con la polaridad (+) (-) dentro del compartimiento. 3. Vuelva a colocar la tapa del compartimiento de las pilas. Nota: Si su control remoto no funciona correctamente, reemplace las pilas por otras nuevas. Precauciones con las pilas • No coloque pilas nuevas con pilas viejas. • No mezcle pilas alcalinas, estándar (carbono-zinc) o recargables (Ni-Cd, Ni-MH, etc.). • Retire siempre las baterías viejas, con poca carga o agotadas de inmediato y recíclelas o deséchelas de acuerdo con las reglamentaciones locales y nacionales. Ahorro de energía Su control remoto se apaga automáticamente si los botones se mantienen presionados durante más de 8 segundos. Esto prolonga la vida útil de las pilas si su control remoto se atasca en un lugar donde los botones permanecen presionados (por ejemplo, entre los cojines del sofá). Protector de códigos Tiene hasta 10 minutos para cambiar las pilas en su control remoto sin perder los códigos que programó.											
Declaración de la FCC		Solución de Problemas		1. En la Lista de códigos (incluida con el control remoto), encierre en un círculo los códigos de 4 dígitos para el tipo y la marca del dispositivo que desea controlar. 2. Mantenga presionado SETUP hasta que se encienda la luz roja del control remoto. 3. Presione y suelte el botón del dispositivo elegido (p. ej., TV). La luz roja parpadeará una vez y permanecerá encendida. 4. Ingrese el primer código de 4 dígitos que encerró en un círculo en el Paso 1. La luz roja se apagará. 5. Apunte el control remoto al dispositivo y pruebe los botones. Si no funcionan como esperaba, repita los pasos 2 a 5 con el siguiente código encerrado en un círculo. 6. Repita el proceso para cada dispositivo que desee controlar. Notas sobre la programación • Algunos códigos pueden operar solo unas pocas funciones del dispositivo, así que pruebe otros códigos para obtener acceso a más funcionalidades. • ¿Problemas para encontrar un código? Programe el control remoto con el método de búsqueda automática de códigos. • Guarde los códigos de su dispositivo para futuras consultas.									
Restablecer a la Configuración de Fábrica													
1. Mantenga presionado SETUP hasta que la luz roja se mantenga encendida. 2. Presione y suelte el botón SILENCIO. 3. Presione y suelte el botón 0 (cero). La luz roja parpadeará dos veces.		Algunos dispositivos combinados (por ejemplo, TV/VCR, DVD/VCR, etc.) requieren el uso de un botón de modo distinto para cada componente del dispositivo combinado. Por ejemplo, si tiene un dispositivo combinado para TV/DVD, es posible que deba configurar un código de TV con el botón TV y un código de DVD distinto con el botón DVD para controlar cada componente.											