



Thank you for your purchase!

Instructions made easy



Read instructions or watch easy-to-follow video.

Scan code or visit byjasco.com/70513i

Register your product



Receive exclusive deals and register your product.

Scan code or visit byjasco.com/deals



Like our product?

Leave a review on your favorite retailer website or amazon.com.



Having Problems?

Let us know how we can help.


Call 1-800-654-8483 between 7AM-8PM, M-F, Central Time.



Discover innovative lighting solutions at enbrightenme.com.

enbrighten Basics

 USB-Powered LED Curtain Lights User Manual

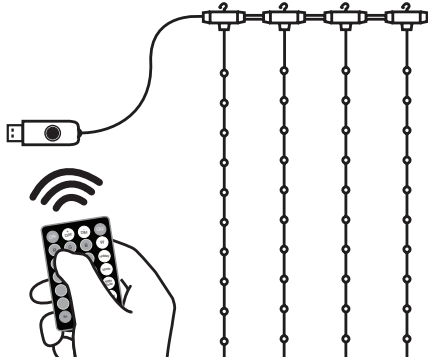

IMPORTANT: BEFORE INSTALLING, READ ALL SAFETY INSTRUCTIONS LISTED AT THE END OF THIS MANUAL.

See reverse for easy-to-follow instructions and exclusive deals.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light doesn't work	Wont'turn on	Check the USB plug and socket for dirt or foreign matter, and ensure the plug is inserted firmly in place.
Remote doesn't work	Incorrect USB power	USB power supply must be 5V @ 1A minimum for proper operation. Excessive voltage may lead to product damage
Remote doesn't work	Remote battery	Replace CR2025 battery diagram on back of remote.

Contact our U.S.-based Consumer Care at 1-800-654-8483 between 7AM-8PM, M-F, Central Time


⚠WARNING

- **RISK OF ELECTRIC SHOCK** RECEPTACLE OUTLETS USED FOR POWERING CURTAIN LIGHTS SHALL COMPLY WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES. CONSULT LOCAL ELECTRICAL IF UNSURE OF COMPLIANCE REQUIREMENTS.
- DO NOT SUBMERSE
- DO NOT USE IN WET LOCATIONS.
- DO NOT INSTALL IN LOCATIONS WHERE CURTAIN LIGHTS CAN BE STEPPED ON.
- ENSURE CURTAIN LIGHTS ARE UNPLUGGED FROM POWER DURING INSTALLATION
- ALLOW CHILDREN TO PLAY WITH THEM!
- NOT INTENDED FOR USE NEAR OPEN FLAMES OR ABOVE STOVES, COOK TOPS, SINKS OR OTHER HEAT PRODUCING APPLIANCES, SUCH AS COFFEE MAKERS, TOASTERS OR TOASTER OVENS.
- USE INDOORS OR IN PROTECTED OUTDOOR LOCATIONS ONLY.

INSTALLATION


STEP 1: HANG CURTAIN LIGHTS

Use the built-in hooks to hang the curtain lights in your preferred indoor or covered outdoor location. Ensure the 13ft. USB power cord is within reach of a power source.

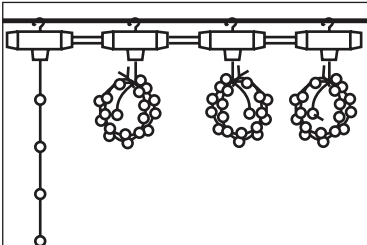


STEP 2: UNTIE LED STRINGS AND POWER CORD

Carefully untie and straighten out each LED string and the USB power cord.

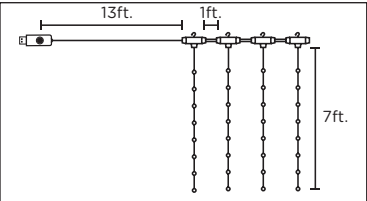

NOTE: Point the remote directly at the USB controller to avoid extra IR interference.

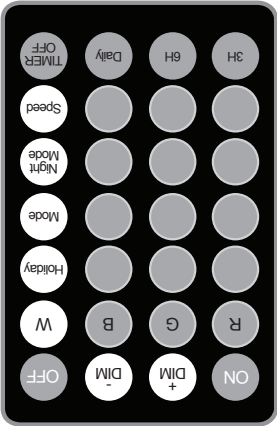

SPEED BUTTONS: Increase/decrease speed (4x)

3H/6H BUTTONS: Light turns off after three or six hours

— lights will flash once to confirm timer is active

DAILY BUTTON: Light stays on for six hours, turns off

for 18 hours — lights will flash once to confirm timer

is active

TIMER OFF BUTTON: Deactivates 3H, 6H or Daily —

lights will flash twice to confirm timer cancellation

COLOR BUTTONS: Choose from 16 solid colors

HOLIDAY BUTTON:

1. July 4th

2. Holiday

3. Mardi Gras

4. Valentine's Day

5. Autumn

6. Spring

7. St. Patrick's Day

MODE BUTTON:

1. Pulse

2. Flash

3. Strobe

4. Fade

NIGHT MODE BUTTON:

1. Solid amber

2. Pulse amber

Suppliers Declaration of Conformity | Model # 70513 | Jasco Products Co., 10 E. Memorial Rd., OK 73114. This device complies with Part 15 of the FCC and Industry Canada license exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **FCC NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. CAN ICES-3(B)/NMB-3(B)


70513 v1 9/22
MADE IN CAMBODIA
Distributed by Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, OK 73114.
This Jasco product comes with a 1-year limited
warranty. Visit www.byjasco.com for
Questions? Contact our U.S.-based Consumer
Care at 1-800-654-8483 between 7AM-8PM,
M-F, Central Time.

[illegible]

HECHCO EN CAMBOYA
Distribuido por Jasco Products Company LLC,
1010 E. Memorial Rd., Oklahoma City, OK 73114,
Estados Unidos de América. Para más información sobre
la garantía, visite www.bylasco.com.
¿Tiene preguntas? Póngase en contacto con
nuestro servicio de atención al consumidor de
EE. UU. al 1-800-654-8578, de lunes a viernes,
de 7 a. m. a 8 p. m. (hora estándar del centro).

PASO 1: CUELQUE LA CORTINA DE LUCES

 Utilice los ganchos incorporados para suspender la cortina de luces en el lugar que prefiera, ya sea dentro de la casa o fuera en un área cubierta. Asegúrese de que el cable de alimentación USB de 4 m (13 ft) esté dentro del alcance de una fuente energía.

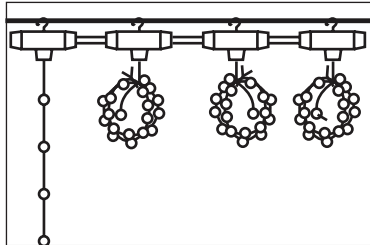

ADVERTENCIA


RIESGO DE DESCARGA ELÉCTRICA

- Los trabajos de mantenimiento y reparación de las cortinas de luces deben cumplir con todos los códigos eléctricos locales y nacionales.
- Consulte con un electricista local si no está seguro sobre los requisitos normativos.
- No usar cerca de acuñarios.
- No usar en lugares húmedos.
- No suministrar.
- No instalar cerca de aparatos de calefacción.
- No instalar las cortinas de luces en áreas en las que sea probable pisarlas.
- Asegúrese de que las cortinas de luces estén desconectadas durante la instalación.

RIESGO DE INCENDIO

- No permitir que los niños jueguen con ellas.
- No permitir que las cortinas de luces se pongan en contacto con ellas.
- No usar cerca de aparatos que produzcan calor, como cafeteras, freidoras y parrillas eléctricas.
- No usar cerca de áreas abiertas o exteriores protegidas.
- No usar solamente en áreas interiores o exteriores protegidas.
- No usar cerca de aparatos que produzcan calor, como cafeteras, freidoras y parrillas eléctricas.
- No permitir que los niños jueguen con ellas.
- No permitir que las cortinas de luces se pongan en contacto con ellas.
- No usar cerca de aparatos que produzcan calor, como cafeteras, freidoras y parrillas eléctricas.
- No usar cerca de áreas abiertas o exteriores protegidas.
- No usar solamente en áreas interiores o exteriores protegidas.

Problema	Causa Posible	Solución
La luz no funciona	No enciende	Verifique que el conector USB y el puerto USB no estén sucios ni contengan material extraño, y que el conector encaje bien.
	Alimentación USB incorrecta	La fuente de alimentación USB debe ser de 5 V a un 1 A como mínimo para el funcionamiento correcto. Una tensión de alimentación superior a la normal puede provocar daños en el producto.
El control remoto no funciona	Pila del control remoto	Reemplazae la pila CR2025 teniendo en cuenta los polos. Consulte el diagrama en la parte posterior del control remoto.

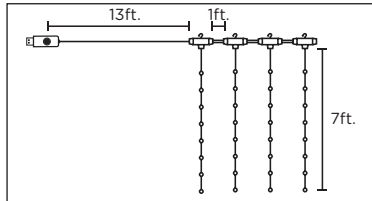

Velocidad (4x)

