

Code List – Lista de Códigos

TV	
ABEX.....	0401
ADC.....	1431,1661
ADMIRAL.....	0371,0681
.....	1441,1661,4991
ADVENT.....	3261,0631
.....	0871,2891,4931,0581
AFFINITY.....	2361,2381
AIKO.....	1011,4321
AIWA.....	0411,0931,4731,4801
AKAI.....	0191,5891,5901
.....	5911,5921,6041,3215,0331
.....	4151,4461,5141,5171
AOC.....	4261,1961
APEX.....	2521,6081,6101,0045
.....	4841,0191,1891,0425,0431
.....	0671,1025,1105,5111,0245
ARIA.....	4101
ARIO.....	1891
ATVIO.....	6281,2371
AUDIOVOX.....	2191,2451
.....	4031,4051,4521
AURIA.....	1221,2121,1171,1411
AVENTURA.....	0141
AXION.....	0881
BANG & OLUFSEN.....	1591
BENQ.....	1741,1761,2221,3871
BLUESKY.....	3511,3921
BROKSONIC.....	0371,0211
.....	0851,1631,4951
CELERA.....	0191
CETOMER.....	0001,1631,2901,2961
CHANGHONG.....	4841
CITIZEN.....	0001,0961
.....	1221,1661,1941,2191,4321
COBY.....	3351,2521,2511,2531
.....	5091,5191,2541,2551
CONTEX.....	5411
CRAIG.....	6321,6311,1941,2191
CURTIS.....	2121,2141
.....	2361,2371,5411,1881,1891
CURTIS MATHES.....	0351,1551
.....	5351,5371,0001,0261,1221
.....	1661,4011,4941
CYBERVISION.....	3511
DAEWOO.....	1561,0001
.....	0591,0721,0831,0971,1221
.....	1231,1251,1431,1501,1521
.....	1551,1941,2181,4321,4681
DELL.....	0981,1401
.....	3441,2041,3601,3811
DEVANT.....	6211
DISH NETWORK.....	5491
DISNEY.....	0371,1101,5391
DURABRAND.....	0371,0141
.....	0861,0921,1381,2271,2291
.....	5121
DYNEX.....	3141,5311
.....	3161,6521,0371,2891
ELECTROHOME.....	0001,1221
.....	1921,2151,3431

1

ELECTRON.....	2121
ELEKTRA.....	1661
ELEMENT.....	5421,1091
.....	1651,5361,5341,2401,5471
.....	5831,5841,6021
EMERSON.....	2761,5761
.....	5231,5221,5831,5561
.....	5421,0141,0201,2891
ENVISION.....	4731,1651
.....	1411,5401
.....	0001,0071,1221,3751,4261
EOD.....	1171,1411
ESA.....	0141,1381
FAVI.....	2141
FISHER.....	5001,1261
.....	1531,1581,1911,3481
FLUID.....	2401,2421,2431
FUJITSU.....	0901,1711
.....	4241,4341,6501
FUNAI.....	0445,0141,0931
.....	1711,1941,2191,4731,4761
GATEWAY.....	0501
GE (GENERAL ELECTRIC).....	4921,0141
.....	0191,1001,0001,0041,0051
.....	0261,3451,0361,0791,1221
.....	1921,1951,2151,3431,4011
GFM.....	0141,5831
GOLDSTAR.....	0001,0611
.....	0761,0931,1181,1221,1501
.....	1911,4731
GPX.....	4701,6371
.....	6361,6351,6341,6331
GVISION.....	4871
HAIER.....	6151,5321
.....	6141,0921,1161,2141,0671
.....	0861,3831,4851
HANNSPREE.....	5451,5461,5291
HELLO KITTY.....	5391
HEWLETTPACKARD.....	3491,4881
HISENSE.....	6161,1651
.....	6251,6171,2081,5331,2211
.....	2141,5341,0001,0671,4391
HISENSE (ROKU TV).....	6251
HITACHI.....	6301,1041
.....	6171,4331,0925
HITACHI (ROKU TV).....	6171
HONEYWELL TV.....	6141
HKC.....	5721
HP (HEWLETT PACKARD).....	3491
HYUNDAI.....	4651
ILO.....	5171,1381,0371,3215
.....	1141,2391,3691
.....	4231,5031,5141
INFINITY.....	4791
INFOCUS.....	3421
INITIAL.....	4231,4821,5031,5041
INSIGNIA.....	2891,0371
.....	6381,6171,2271,0141,6481
.....	0581,0871,0921,2241,6181
.....	2921,3761,4371,4721,4761
.....	5051,5061,5181
INSIGNIA(ROKU TV).....	6381,6171

2

.....	0001,0321,0961,1021,3451
.....	1221,1671,1801,2151,2941
.....	3431,3931
PHILIPS.....	0181,6241
.....	6221,5741,6261,6051,0201
.....	0911,3981,4261
PHILIPS-MAGNAVOX.....	0681,0911
.....	2321,4791,4991
PIONEER.....	0401,1221
.....	1981,0001,1371,1511,1841
.....	4021,4661
PIVA.....	2411,5021
PLANAR.....	4251
POLAROID.....	2401,5541
.....	6491,4631,0191,5411,1961
.....	0581,6101,2271,2311,2451
.....	5131
PORTLAND.....	0001,0251
.....	1011,1081,1221,1551
PRIMA.....	0381,0581
.....	0631,0871,2451
PROSCAN.....	2131,5881,
.....	6391,5421,5781,1651,2361
.....	4771,2761,4191,0221,1731
PROTON.....	0001,0391
.....	0641,1221,1911,2231,4211
.....	4221,4271
PROTRON.....	3731,4301
PROVIEW.....	2401,2421,2431
PULSAR.....	0001,1771,1781
QUASAR.....	3551,1091
.....	0051,1491,1571,3451,2151
.....	3431,5201
RADIO SHACK.....	0001,0341
.....	0931,1001,1221,1571,1701
.....	1911,1941,2191,4731,4921
RCA.....	0131,1001
.....	2851,2361,1731,4921
.....	3431,2481,2121,2131
.....	0691,3571,2381
REALISTIC.....	0001,0341
.....	0931,1001,1221,1571,1701
.....	1911,1941,2191,4731
RIVIERA.....	6531
ROKU TV.....	6171,6001
RUNCO.....	1771,1781,1841
SAMPO.....	0001,0121
.....	0391,0501,1221,1911,4221
SAMSUNG.....	5791,5801,3301
SANSUI.....	2891,5241
.....	5411,1631,0211,1381,5851
.....	5861,5871,6051,6061,6071
.....	5551
SANYO.....	1161,5261,2891,5251
SCEPTRE.....	4071,3521,1071,5321
.....	4101
SCOTCH.....	0001,1221
SCOTT.....	3215,0001
.....	0021,0281,1221,1711,1941
.....	2191,5141
SEIKI.....	1263,5751,6091
SHARP.....	6011,5341

3

DVD (Cont')	
CYBERHOME.....	0175,4155
.....	1015,1585,2045
CYBERVISION.....	3595
.....	0435,0725
DAEWOO.....	0065,0345
.....	1115,1285,1385
DENON.....	1075,1265,3315
DENZEL.....	0765
DESAY.....	0215,0865
DIAMOND VISION.....	0455,0855
.....	1485,3755
DIGITREX.....	0245
DIGIX.....	0125
DISNEY.....	3815
DRIVE.....	3535
DUAL.....	0005,0435
.....	0515,0605,0765,3035
DURABRAND.....	0205,0435
.....	0955,2685,2935,3515,3525
.....	3885,3925,3945
DYNEX.....	2255,4235,2455
DVD 2000.....	1415
EIGERVISION.....	3615
ELEMENT.....	4305
ELTA.....	0055,0235
EMERSON.....	0975,0205
.....	0445,1185,3745,3815,3855
.....	3885,1612
ESA.....	0515
ESCIENT.....	2845
FARENHEIT.....	1205
FISHER.....	0405,2645
FUNAI.....	0445,0795
.....	3745,3815,3855,0412
GE (GENERAL ELECTRIC).....	0915
.....	1105,3895
GOLDSTAR.....	0205,3885
GO-VIDEO.....	0075,0255
.....	0415,0565,0665,1275,1315
.....	1385,1495,3735,3765
GPX.....	4345,2695
.....	4265,4295,4355,4475,4395
.....	0135,0495
GRADIENTE.....	0215,3635,3645
GREENHILL.....	1105,3895
HAAZ.....	1295,1465
HAIER.....	0315,4015,2215
HARMAN KARDON.....	0585
HD-DVD.....	2795,2835,2965
.....	3685,3695,3705,3885,3905
HELIOS.....	2275
HELLO KITTY.....	4195
HITACHI.....	0025,0545
.....	0565,0765,0925,1245,3765
HITEKER.....	0245
HUMAX.....	1505
ILO.....	1035,1945,3285
INFINITY.....	0575
INITIAL.....	1105,1945
.....	2735,3895,3935
INSIGNIA.....	0205,4205

4

.....	0355,1435,3795,3985
ONN.....	4525,4535,4545
OPTIMUS.....	0025,1245,2975
ORION.....	0015,3495
ORITRON.....	0215,1935
PACIFIC.....	0435
PANASONIC.....	4175,2965
.....	4005,2395,2595,2605,0165
JBL.....	0385,0545,0595,1075,1195
.....	1215,3105,3775,3975
PHILCO.....	3605
PHILIPS.....	2615,2415
.....	0745,2765,2625,4105,0105
.....	0265,0445,0735,1045,1055
.....	1225,1395,1615,2665,2705
.....	2775,2945,3165,3705,3715
.....	3745,3795,3815
PHILIPS-MAGNAVOX.....	4105,0735
.....	0745,1055,1225,1615,2945
PIONEER.....	4485,0025
.....	0525,0775,0875,0985,1245
.....	1595,1705,2675,2855,2895
.....	2975,3695,3905
PIVA.....	1805
POLAROID.....	0185,0685
.....	1025,1485,3665,3825
POLK AUDIO.....	4105,0735
.....	0745,1395,2945,3795
PORTLAND.....	0235,5445
POWER ACOUSTIK.....	3575
PROLINE.....	0215
PROSCAN.....	0915,1135
PROSONIC.....	0485
PROTRON.....	0305
PYLE.....	2515,1155
RADIO SHACK.....	0955,0995
.....	1165,1645,2905,3945
RCA.....	0915,0146,2465
.....	0215,0955,1105,1135,1165
.....	1645,2755,2905,3895,3945
REGENT.....	1345,3925
REOC.....	1295
RIO.....	0205,3885
RJ TECHNOLOGY.....	1825,2715
ROSEN.....	1175,3035
ROTEL.....	0395
SABA.....	0995
SAMPO.....	0575
SAMSUNG.....	4125,2485
.....	2345,3085,2725,2285,2325
.....	4095,0075,0255,0565,1305
.....	1535,1725,2185,2995,3555
.....	3765,3865,4451
SANSUI.....	0015,0695,3495
SANYO.....	2215,2205
.....	2495,0095,0405,2225,2235
.....	2245,2645,3945
SEARS.....	0015,0445
.....	3495,3745
SEG.....	0765
SELECTRON.....	1855,1885
.....	1915,1955,1995,2035,2075

5

Blu-ray Player Reproductor Blu-ray	
BLACK WEB.....	4555
DENON.....	4035
FUNAI.....	3815
HITACHI.....	0925
HP (HEWLETT PACKARD).....	4085
INSIGNIA.....	4205,0975,2365
JVC.....	2385
LG.....	4285,2635,2335
MARANTZ.....	2055
MAGNAVOX.....	2305,0445,3855,2425
MEMOREX.....	2375
ONKYO.....	2355
OPPO.....	4045,4365,4375,4385
PANASONIC.....	2965,4175,2395
PHILIPS.....	4515,2415
PIONEER.....	4055,4495
RCA.....	0146,0915
SAMSUNG.....	2345,2725
.....	0075,4125,2325,4095
SANYO.....	2215
SHARP.....	4115,2315
SHERWOOD.....	4225,4065
SONY.....	2305,4165,4275
SYLVANIA.....	1731,2405
.....	4215,3875,3855,0445,3745
.....	3815,1612,1672
SYMPHONIC.....	0445,0975
.....	3745,3815,3855,1612
TASCAM.....	0395
TCL.....	2435
TEAC.....	0025,0955,1245,3885,3945
TECHNICS.....	1075
TECHWOOD.....	1625,1985,2945,3845
TERAPIN.....	1705
TEVION.....	0435,0605
.....	0725,0785,1125,1295,1465
THETA DIGITAL.....	0025,1245
TIVO.....	1505,0985
TOSHIBA.....	2135,2435
.....	4145,2295,2475,2545,0015
.....	0115,0735,1735,1745,2145
.....	2175,2835,3065,3075,3325
.....	3495,3795,0682
TREDEX.....	1355
TRUTECH.....	1385,2045,3655
UNITED.....	0955,3945
VENTURER.....	0955,3065,3945
VIZIO.....	4135,2265
.....	4405,4415,4425,4435,4445
WESTINGHOUSE.....	2865
WHARFEDALE.....	0575,1455
WHITE-WESTINGHOUSE.....	3815
XBOX.....	0915
XENIUS.....	0725
YAMAHA.....	4105,0745
.....	1055,1075,1095,1225,2785
.....	2945,3005
YAMAKAWA.....	0765,0775,1865
ZENITH.....	0205,0635
.....	3785,3795,3885,0562

6

DVD	
YAMAHA.....	0001,0251
.....	1221,1571,3551
ZENITH.....	6021,5281
.....	1181,0001,1781,0061
.....	0931,1031,1221,1251
.....	1631,1661,2171,2291
.....	3501,4321,4731,4751
.....	4791,4941,5211

4

DVD	
ACESONIC.....	3135
AIWA.....	0235,3285,3565
AKAI.....	4255
ALLEGRO.....	3725,3885
AMES.....	1275
AMW.....	0645,0825
ANABA.....	1375
APEX.....	1405,1025
.....	0245,0045,0425,0615,0845

CBL SAT DVR Cable Satélite DVR	
ABC	0004,1034
ADB	1933
AMINO	2063
ARCHER	0264,0334,0474,1044
ARRIS GATEWAY	1274
AT&T	0674,1963
	2093,0844,0514,1272
BELL	1963,5491
	2103,2073,0173,2083,0984
BELL EXPRESSVU	0073,0173
	0343,0433
BELL SOUTH	0254,1924
BRIGHT HOUSE	1394,1914,0694
BUCKEYE	1233
CABLE ONE	1384,1764
CABLEVIEW	0264
CABLEVISION	1434,1404
	0514,0654,0694,1523
CENTURY	1723,0474
CHANNEL MASTER	0283,0393,0483
CHAPPARAL	0573,0653
CHARTER	0714,1304
	1404,0824,1523,0514,0664
	0684
CHARTER COMMUNICATIONS	1274
CHARTER DIGITAL	1264
CISCO	1444,2804
	1454,1464,1474,1484,1494
	2413
COGECO	1294,0514
COLOR VOICE	0534,0604
COMCAST	1404,1544
	1554,1283,0824,0514,0684
COMTRONICS	0014,0084
CONTEC	0144,1054
COX	2784,2794,2804
	1474,1444,1454,1464,1484
	1494,1324,1404,1364,0824
	0514
COX DIGITAL CABLE	1404,0514
	0734
DIGITAL STREAM	1203,1194
DIGIWAIVE	1923,1953
DIRECTV	1504,0983
	1514,1173,2814,2403
DISH NETWORK	2083,2073
	2423,0173,1003,1013
DISHPRO	0073,0403,0493,0603
DRAKE	0023,0293,0733
DREAMBOX	1553,2113,2123
DX ANTENNA	0383,0753
ECHOSTAR	0073,0173
	0343,0403,0493,0783
EMTEC	4411,4441
ENTONE	2043,2053
EXPRESSVU	0073,0173,0343,0433
FORTEC STAR	0083,0183
	0263,0373,0463,0473
FRONTIER	1283,2033

7

TV/DVD COMBO (Cont') Combinación TV/DVD (Cont')	
AUDIOVOX	[4031 & 4481]
	[4051 & 1135],4521
AXION	[0881 & 1335]
BROKSONIC	0015,0211
COBY	3475
DAEWOO	[1561 & 0665]
DIAMOND VISION	[1611 & 0855]
	0455
DURABRAND	[2291 & 3885],0205
EMERSON	0412,0445
FUNAI	0412,0445
GPX	0135
HAIER	0315,1257
ILO	[3215 & 3285],1945
INITIAL	0994,1945,2735
INSIGNIA	[1241 & 0285]
	[2891 & 3335],0412,0445,2805
	2815,3305
JVC	1685,3015
KAWASAKI	0325
KONKA	1425,1605
LASONIC	[1611 & 0855]
LIQUIDVIDEO	[0881 & 1335]
MAGNAVOX	0445,0552,0412
MAXENT	3361
MEMOREX	0015,0211
NEXXTECH	1201,2005
PANASONIC	0412,0552
	0595,1195,1346,3401
PHILIPS	0181,2615
	3371,[1381 & 0702],0412,0445
PIVA	1805
SAMSUNG	1535
SANSUI	0015,0211
SEARS	0015,0211
SHARP	[1291 & 3115]
SOVA	[3631 & 4431]
SUPERSONIC	0135
SYLVANIA	0412,[1381 & 0702]
	0445
SYMPHONIC	0412,0445
TOSHIBA	0015,0115,0211,3075
TRUTECH	4551
WESTINGHOUSE	[3711 & 2865]

TV/VCR COMBO Combinación TV/VCR	
ADMIRAL	0302,1682
AIWA	0432,0752
AKAI	0032,1592
BROKSONIC	[0851 & 0462]
	[0851 & 0892],0942,1631
CURTIS MATHES	0652,1522
DAEWOO	1092
DURABRAND	[2291 & 0182]
ELECTROHOME	0032,1592
EMERSON	[0851 & 0462]
	[0851 & 0892],0032,0192,0232
	0332,0432,0942,1092,1172
	1432,1592,1631

	1404,0684,0824,1523
	0514
FUJITSU	0673,0763
GC ELECTRONICS	0334
GE (GENERAL ELECTRIC)	0333
	0543,0643,0723,0803,0874
	1373,1383,0384
GEMINI	0123,0204,0344
GENERAL INSTRUMENT (GI)	1034
	1864,0013,0093,0163,0193
	0323,0453,0633,0833,0893
	0953,0963,1583,1603,0004
	0044,0074,0314,0374,0514
	0594,0634,0794,0814,0884
	0894
GEOSATPRO	2003
GO VIDEO	1883
HAMLIN	0414,0484,0544
HITACHI	0303,1153
	0443,0623,1103,0594
HNS	1153
HTS	0173
HUGHES	0593,1343
HUGHES NETWORK SYSTEMS	0303
	0443,0563,0593,0703,1343
HUMAX	1505
ILICO	1354,1404,1523
ILO	1035
INSIGHT	1284,1314
JERROLD	0004,0074
	0194,0314,0324,0444,0514,0594
	0794,0814,1034
JVC	0433,0783,1145
KENWOOD	0413
KNOLGY	1424,1344,1284,1564
LG	0303,1103,1153,2925
LITEON	1035
MAGNAVOX	0203,0533
	0783,0094,1064
MEDIACOM	1284,1584
MEDIA ONE	1784,1794
MEDION	1035
MEMOREX	0154
MICROVAL	1423
MINISUBISHI	1534,0303
	0443,0623,1153
MOTOROLA	2093,0374
	1283,0453,1593,1603,1863
	0004,0074,0194,0314,0514
	0594,0634,0684,0794,0814
	0824,0844,0884,0894,0914
	1034
MOVIE TIME	0224,1074
MOXI	1274
MYRIO	1884
NEOSAT	1413
NET	1543,1713
NEW WAVE	1274
NORSTAT	0683
NOVAPLEX	0834,0854
NOWTV	1473
NSC	0224,1074

7

FISHER	0602,1712
FUNAI	0432
GE (GENERAL ELECTRIC)	1482
GOLDSTAR	0432,1181
GRADIENTE	[2291 & 0182]
HITACHI	0432
INFINITY	0622
JVC	0452,4201
LG	0432,1181
LXI	0432
MAGNAVOX	0302,0412,0622,1682
MEMOREX	0602,0942,1631,1712
MITSUBISHI	0032,1592
OPTIMUS	0122,1062
PANASONIC	0122,1062
PHILIPS	0412,0622
PHILIPS-MAGNAVOX	0302,0622
	1682
QUASAR	0122,1062
RADIO SHACK	0432,1482
RCA	[1691 & 0242],1482
REALISTIC	0432
SAMSUNG	0652,1522,1535
SANSUI	0942,1631
SANYO	0602,1712
SHARP	0302,0332,1682
SONY	0972,1292,1652
SYLVANIA	0312,0432
SYMPHONIC	0432
TOSHIBA	1402,0652,0902,1522
WHITE-WESTINGHOUSE	0432
ZENITH	[2291 & 0182],0302
	0332,0432,0452,0622,0652
	0942,1092,1181,1522,1631
	1682

TV/VCR/DVD COMBO Combinación TV/VCR/DVD	
BROKSONIC	1525
DIAMOND VISION	0455
MAGNAVOX	0445,0412
PANASONIC	0595
PHILIPS	0445,0412
SAMSUNG	1535
SEARS	0445,0412
SUPERSCAN	0445,0412
SYLVANIA	0445,0412
TOSHIBA	0115,3075

DVD VCR COMBO Combinación DVD/VCR	
ALLEGRO	[3885 & 0182]
APEX	0852,1025
BROKSONIC	0015,0211,0695
CINEVISION	[0205 & 0182]
DAEWOO	1385
DIAMOND VISION	0455
DURABRAND	[0205 & 0182]
EMERSON	0412,0432,0445
FISHER	[0405 & 0475]
FUNAI	0412,0432,0445
GO-VIDEO	0255,0415,0565,1385

OAK	0144,0354,1054
OMEGASAT	1983
ONKYO	1243
ORASAT	1973
ORION	1523
PACE	0053,0133,1363,1593,1673
PANASONIC	0213,0223
	0304,0394,0954,1014,0545
	1272
PANSAT	1993,0033,0883,1403
PARAGON	0154,0284
PHILIPS	0203,1633
	1753,0303,0443,0533,0623
	0703,0783,0094,0344,0424
	0474,0494,0554,1064,1084
	1094,1104,0092,0252,1052
	1492,1502,1542
PHILIPS-MAGNAVOX	0203,0533
	0783,0064,0104
PINNACLE	1493,1823,1833
PIONEER	0024,1404
	1853,0274,0614,0924,0532
POLAROID	4561
PRIMESTAR	1253,0323
	0633,1563
PROSAT	0813,1333
PROSCAN	0333,0643
	0723,0803,1383
PULSAR	0154
QUASAR	0154
RADIO SHACK	0064,0104
	0114,0964
RCA	0416,0333
	0363,0543,0643,0723,0803
	1373,1383,1873,0244,0394
	0474,1014,0915
RCN	0824,0514
REALISTIC	0273,0843,1643,0334
REGAL	0544
REGENCY	0214
REMBRANDT	0594
REPLAYTV	1272
ROGERS	1344,1404,1523
RUNCO	0154
SAMSONIC	1433
SAMSUNG	1213,0043
	0233,1113,1123,1763,2671
	0014,0024,0924,4451
SCIENTIFIC ATLANTA	1414,1254
	1203,0124,1324,1364,1404
	1523,1444,1454,1464,1474
	1484,1494,0134,0164,0234
	0574,0714,0834,0864
SEIKI	1263
SHARP	1853
SHAW	0514,2734
SHAW DIRECT	2734
SIERRA I II III	0653
SIGNAL	0014
SIGNATURE	0594
SKY NETWORK	0053,0133

7

HITACHI	[0925 & 0432]
INSIGNIA	0562,[0205 & 0182]
LG	2025,0692,0755,1145
LV	4285,0562,0635
MAGNAVOX	0445,[0105 & 1642]
	0412,1045
MEDION	0455
NEXXTECH	0955,1025
PANASONIC	0552,0595
PHILIPS	0342,[0105 & 1642]
	0412,0445,1045,1372
PIONEER	1775
POLAROID	1025
RCA	[0915 & 0162]
RIO	[0205 & 0182]
SAMSUNG	2485,1725,0255,1662
SANSUI	0015,0211,0695
SANYO	2215,[0405 & 0472]
SEARS	0015,0211
SONY	2865,0832
SYLVANIA	0795,[0702 & 1392]
	0412,0432,0445,1612,1672
SYMPHONIC	[1612 & 1392],0412
	0432,0445,0975
TECHWOOD	1985
TOSHIBA	0115,0682,0735,3075
TRUTECH	1385
ZENITH	[0205 & 0182]

VCR	
EMERSON	0452,0032
	0102,0182,0192,0232,0322
	0332,0412,0432,0462,0602
	0702,0742,0752,0772,0882
	0892,0912,0922,0942,0992
	1032,1092,1102,1112,1172
	1432,1562,1592,1631,1712
GE (GENERAL ELECTRIC)	0242
	0102,0162,0612,1112,1482
JVC	0012,0392
	0452,0532,0602,0692,1212
	1712,2025
MAGNAVOX	0312,0432
	0342,0105,0142,0162,0172
	0302,0412,0482,0622,0792
	0862,1112,1642,1682
MEMOREX	0052,0102
	0182,0302,0432,0482,0592
	0602,0792,0942,0992,1112
	1631,1682,1712
ORION	0322,0942,1562,1631
PANASONIC	0162,0122
	1062,1112,1272,1642
RCA	0062,1702
	0102,0162,0182,0212,0242
	0352,0582,0612,0642,0782
	0812,0915,1112,1132,1142
	1222,1452,1482,1572
SAMSUNG	0255,0102
	0292,0652,0812,0872,0882
	1522,1535,1662
SANSUI	0211,0322

7

	1363,1593,1673,1743,1753
	1783,1793
SL MARX	0014
SONIC BLUE	1272
SONY	0113,0353
	0773,1162,1302,2865,2985
	3055
SPECTRUM	1254,0824
	1274,2093,0374,1444
	1414,2434
SPRUCER	0394,1014
STANDARD	0364
STAR SIGHT	0863,0244
STAR TRAK	0423,0184
STAR CHOICE	2734,0163
	0323,0633,1563,1583
STARCOM	0314
STARGATE	0014
STS	0383,0583,0663
SUDDENLINK	1774
SUPER GUIDE	0513
SUREWEST	1854,1954
SYLVANIA	0985,2855
TANDY	0974
TELEVIEW	0014
TELSAT	1723
TELUS	1943
TEXSCAN	0364
THOMSON	1834,0803,1753
TIME WARNER	1254,0824
	1424,1404,0514,0694,1523
TIVAX	1293
TIVO	1223,0704
	0754,0764,0092,0252,0353
	0985,1052,1162,1492,1502
	1505,1542,1745
TOCOM	0004,0444
TOSHIBA	0504,0634,0934,1034
	0063,0143
	0303,0443,0623,0713,0743
	0973,1133,0154,1735,1745
	2145,3325
TV86	0224,1074
TVA	1703
ULTIMATE TV	0333,0553,0873
UNIDEN	0693,0823,0863
UNIKA	0264,0334,0474
UNITED	1663
UNIVERSAL	0054,0264