




# Portable Door Chime Kit Installation Instructions


**Required tools:** 1/16" drill bit, Small flat-blade screwdriver and Phillips screwdriver (not included).

The wireless door chime kit has two components:

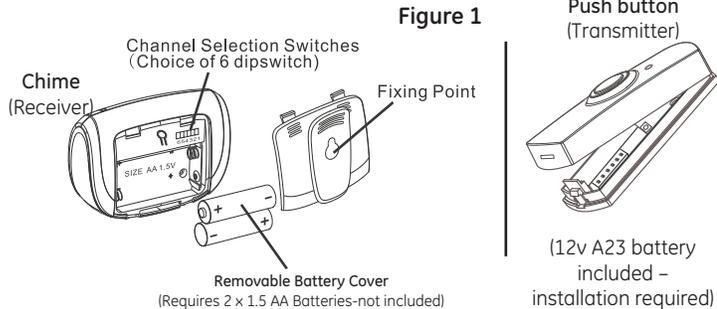

## House Code Setting

In most cases, you will not need to change the factory settings for the house code. If your chime activates intermittently, or does not work at all, you may be able to solve the problem by changing your house code setting. When changing the house code setting, you must configure the switches exactly the same in the push button and chime.

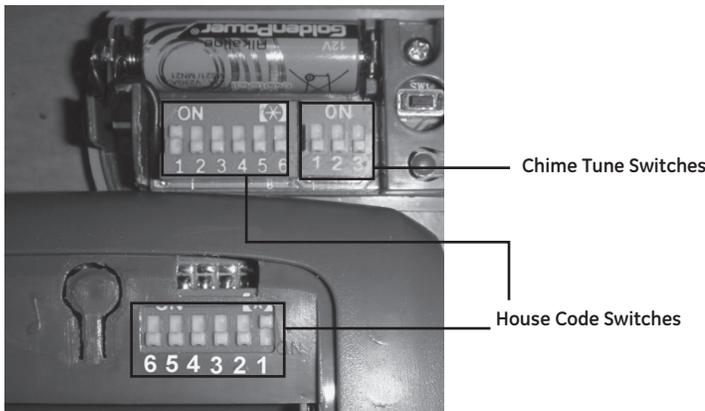

## Chime Tune Setting

There are 8 selectable tunes. The desired tune can be selected by changing the 3 dipswitches located inside the battery compartment of the push button. Select desired chime sound from the table below.

### Chime Sound Table

Position	1	2	3
Ding Dong	UP	UP	UP
Westminster	DOWN	UP	UP
Knocks	UP	DOWN	UP
Jingle Bells	DOWN	DOWN	DOWN
Souvenir d'enfance	DOWN	DOWN	UP
Turkish March	DOWN	UP	DOWN
Fur Elise	UP	UP	DOWN
The First Noel	UP	DOWN	DOWN

## Push Button Mounting Instructions:


NOTE: Avoid mounting on metal surfaces, as it may result in a reduced range of transmission. Do not mount in an area exposed to direct rain. Push buttons are typically mounted at the same height as the door knob or handle (between 36" and 44" above the floor).

## Permanent Mounting Instructions

- To remove the back cover, push a flat head screwdriver into the slot at the bottom of the transmitter. Back cover will release.
- Remove red battery tab from battery compartment.
- Before mounting, choose a mounting location that is no further than 150 feet

from the chime unit location. Place push button where you would like to mount and test with the chime as close to its final location as possible. If it works, continue with mounting the button. If it does not work, see TROUBLESHOOTING.

- Remove battery.
- Hold the back plate of the push button in the selected location with the arrow on the back of the back plate pointing up.
- Using the 1/16" drill bit, drill a hole through the back plate of the push button (See Figure 2 — Mounting Hole Location) and into the surface of the selected location.
- Secure with the two screws provided.
- Re-install included battery, noting polarity.
- Press front housing onto back cover.
- Test operation. If chime does not work, see TROUBLESHOOTING.

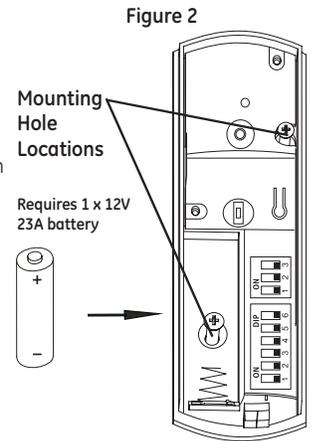

## Troubleshooting

If the chime does not work:

- Make sure push button switch is pressed down and held for at least 1 second.
- Verify battery installation is correct, noting polarity.
- Try fresh batteries.
- Make sure chime is no further than 150 feet away from push button.
- Ensure push button is not mounted on metal, near metal studs, or near the floor.
- Try a new location for the chime.
- Check house code settings on the push button and chime to ensure the channel selection switches are configured the same.

Functional range may be adversely affected by one or more of the following factors: weather, radio frequency interference, low transmitter battery and obstructions between the transmitter and receiver.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For technical support, contact Jasco Products Company at 1-800-654-8483 between 7:30AM—5:00PM CST. or [www.jascoproducts.com](http://www.jascoproducts.com).



MADE IN CHINA / HECHO EN CHINA  
GE is a trademark of General Electric Company and is under license by Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114.

This Jasco product comes with a 1-year limited warranty. Visit [www.jascoproducts.com](http://www.jascoproducts.com) for warranty details and product registration.