




Wireless Alarm System

Keychain Remote

User's Manual

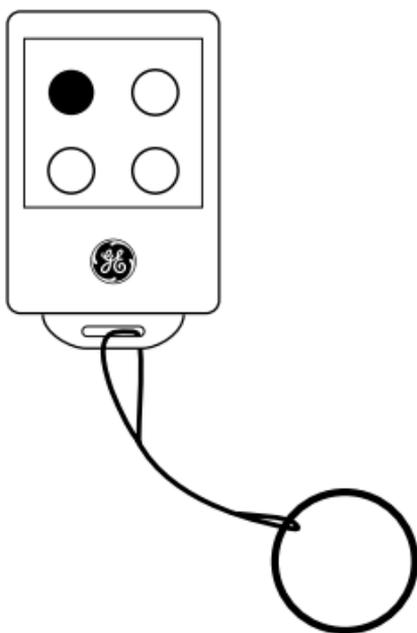

Control all sensors, accessories
and Remote Access Devices
from one location

Table of Contents

Important Safeguards	4
Introduction	4
Activating the Battery	5
Assigning a Keychain Remote to a Device	5
Operating Keychain Remote	6
Low battery	7
Changing the Keychain Remote Battery	7
To Replace a Keychain Remote	8
To Remove a Keychain Remote	8
F.A.Q.'S	9
FCC Warning	10

Before connecting or operating the Keychain Remote, please read these instructions carefully and save this manual for future reference.

Congratulations

The GE Choice Alert™ Wireless Alarm System is one of the most affordable and expandable wireless alarm systems available. You'll discover that the system offers many features typically found in custom installed Alarm systems. The Choice Alert system is reliable and easy-to use. With Choice Alert you can select from a line of Sensors, Accessories and Remote Transmitters; start small and expand as you need, or create a system that meets all your needs.

The Choice Alert System is protected by Priority Code Selection technology which provides increased security and trouble-free wireless connections. It also guarantees the Control Center will only respond to signals from your Sensors and Remote Transmitters in and around your home, and prevents anyone from tampering with your system.

This user manual explains in simple steps how to install, use and care for your new Choice Alert Keychain Remote.

If you have any questions or would like additional information please visit our web site www.jascopeproducts.com, or contact our Tech Support at 1-800-654-8483.


Important Safeguards

PreCautions

1. Do not attempt to disassemble the Keychain Remote, unless described in the user's manual. There are no user serviceable parts.
2. Handle with Care – Avoid striking or shaking. Improper use or storage could damage the Keychain Remote. Modifying or tampering the device or its internal components can cause a malfunction and void the Keychain Remote's warranty.
3. If you feel the Keychain Remote or any part of the Choice Alert system is not operating correctly or as described, please contact Technical Support for assistance **(1-800-654-8483)**.

Introduction

The Keychain Remote allows you to wirelessly operate the Choice Alert Control Center. With this remote, you will be able to arm and disarm the system, or immediately activate the alarm using the panic button.

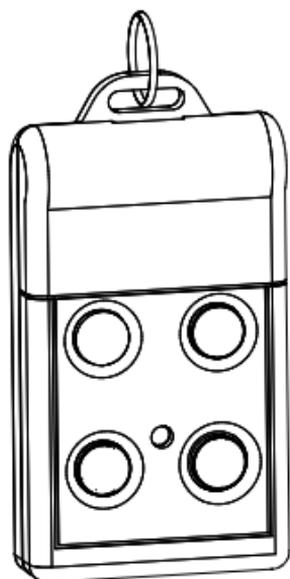


Activating the Battery

The Keychain Remote is packaged with the battery installed, but not activated. To activate the battery, remove the battery door by pushing down and sliding the door outward. Remove the yellow battery isolation strip. When removed, the Keychain Remote will be active. Replace battery cover.

Assigning a Keychain Remote to a Device Location

The Control Center is designed to store up to four Remote Transmitters, such as the Keychain Remote. In order to ensure that the Keychain Remote will operate only with your Control Center, it must be assigned to one of the four device locations in the Control Center.

1. Press and hold the **Learn** button on the Control Center. You will hear a short beep, followed by a long continuous beep. Release the **Learn** button. The Control Center is now in Learn mode.

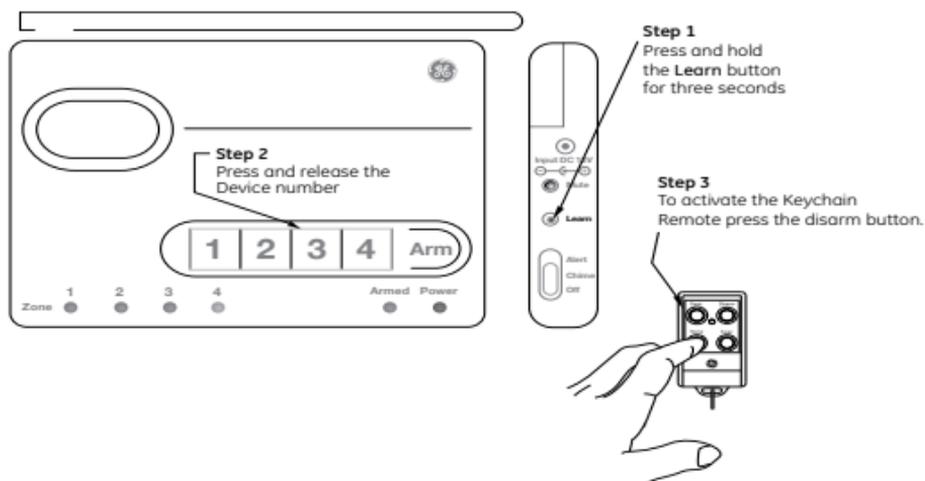

2. On the Control Center press and release the button (1,2,3 or 4) for the device number you want to assign the Keychain Remote. The LED indicator for that device number will begin to flash.

3. Press and hold the Disarm button on the Keychain Remote. The Control Center will sound a long beep and the LED will stop flashing. This confirms the Keychain Remote has been assigned to the selected device number. Release the Disarm button.


Operating the Keychain Remote

Away - Press and hold the 'Away' button on the Keychain Remote to arm the system in the Arm Away mode. The Armed LED light will begin flashing and the Control Center will begin beeping. Release the "Away" button.

Home - Press and hold the 'Home' button on the Keychain Remote to arm the system in the Arm Home mode. The armed LED will light on the Control Center. Release the "Home" button.

Disarm* - Press and hold the 'Disarm' button on the Keychain Remote to disarm the system instantly, or stop the siren if sounding. The Arm LED will turn off on the Control Center. Release the "Disarm" button.

Panic* - Pressing the 'Panic' button will cause the siren to sound instantly. Press the Disarm button to stop the siren. When the siren stops, release the "Disarm" button.


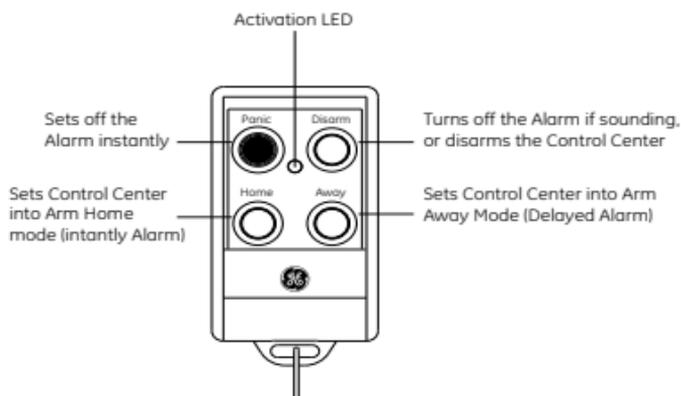


*NOTE (1): The Keychain Remote will transmit up to 100ft from the Control Center. However, like all wireless devices, this distance is subject to conditions of the home; the number of walls and appliances between the Remote Keychain and the Control Center can reduce the signal transmission distance. Using a signal repeater can extend the distance.

*NOTE (2): The Keychain Remote will transmit up to 100Ft from the Control Center. When pressing the Panic or Disarm buttons, there will be up to 3 seconds delay before the Control Center can receive another command. The Control Center must complete transmitting activation signals (3 seconds) before it can receive a new command.

Low Battery

Under normal operation, the battery should last up to 24 months. When the battery reaches a low level, the transmission distance will be reduced and the remote may not operate the Control Center. This means the battery should be replaced

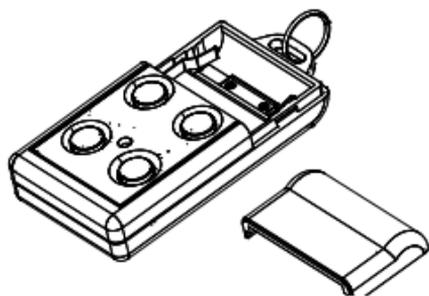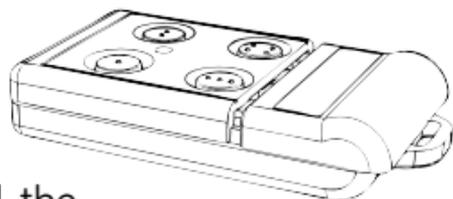

Changing the Keychain Remote Battery.

The Keychain Remote uses a (Alkaline, Type "23AE", "12V") battery.

To replace the battery:

1. To remove the battery door press down slightly and slide the door outward.

2. Replace the old battery with a new "12V" battery, noting polarity.
3. Replace Battery cover.

Description	Battery Type	Battery Life*
Control Center	(4) "AAA"	24 months
Keychain Remote	(1) "23AE(12V)"	24 months

*maximum potential life based upon usage and location

To replace a Keychain Remote

If the Keychain Remote is lost or broken, you can either replace it with another Keychain Remote or remove it completely from the Control Center. To replace a Keychain Remote (with another Keychain Remote or any of the remote transmitters) simply assign the new Keychain Remote to the specific device number. The new remote will automatically replace the previous remote.

To remove a Keychain Remote

CAUTION: Removing a Keychain Remote from the Control Center will also erase any sensors in the associated zone. Sensors will have to be added back to the zone (Refer to sensor manual or Control Center manual for specific instructions).

To remove a Keychain Remote (or any remote transmitters) from device number location in the Control Center, press and hold the 'Learn' button and the device number together on the Control Center until the Control Center sounds two beeps. Release buttons.

This indicates the device number location and zone have been erased.

***NOTE:** Some early production Control Center products were designed to allow replacement only. In this situation you will only be able to replace the remote device with another. Contact Tech Support at 800-654-8483 option 4 to determine if your Control Center is an early production model.

WARNING!

Risk of personal injury

- Prolonged exposure to alarm siren may cause permanent hearing loss

Battery Warnings!

- Remove batteries before storing the Alarm or Remote Transmitter for extended periods
- Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage
- Do not mix old and new or other battery types
- Replace all batteries at the same time
- Replace fully discharged batteries immediately
- Remove batteries if product is to be unused for extended periods of time

Keychain Remote F.A.Q.'S

Q. I bought a Keychain Remote and the Control Center will not recognize it. Why?

A. First, make sure that the battery is new and has been correctly installed, paying attention to polarity symbols ("+", "-"). Confirm that the Keychain Remote has been correctly assigned to a device.

Q. If I assign the Keychain Remote to Zone 4, will it still arm and disarm the alarm system?

A. Yes. When assigning the Keychain Remote (or other remote

access device), it is being assigned to a device number, not a zone. You can assign up to 4 different remote transmitters; only one Keychain Remote can be assigned to a device number.

Q. I've tried several times to erase a keychain remote from the device number memory but it still remains - What can I do?

A. If you are unable to completely erase a remote from the device number memory, you may have an older, early production Control Center. Early production versions only allowed for replacement of one remote transmitter with another.

Contact Tech Support 800-654-8483 for any questions.

FCC Warning

Any unauthorized changes or modifications to the equipment would void the user's warranty and may conflict with both state and federal laws. The Choice Alert system complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- 1)** The Choice Alert system may not cause harmful interference.
- 2)** The Choice Alert system may accept any interference received including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

WARNING

Limitations of Alarm Products

This product should be tested periodically to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, or other adverse events. However, JASCO is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. JASCO makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning, or that it will prevent any personal injuries, property damage, or other losses. Like any alarm product, including expensive commercial systems, it may be bypassed, it is subject to compromise, and it may fail to warn for a variety of reasons, including, but not limited to: improper installation or positioning; improper maintenance; tampering; dead or improperly installed batteries; sensing limitations; component failures; receivers; intrusions may be outside of a product's designed range and certain environmental conditions may impact performance and audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.



is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114.

This Jasco product comes with a 1 year limited warranty. Visit www.jascoproducts.com for details.