





45250

Lithium Polymer Add On Battery Pack for 45233, 45234, 45236

Thank you for purchasing the GE 45250 Lithium Polymer Add on Battery Pack. Please review these instructions carefully before attempting to use the battery pack with your camera.

This Rechargeable Lithium Polymer Battery will power the 45233, 45234 or 45236 wireless cameras for approximately 5 hours on a single charge. Using the camera with battery in the night vision mode, usage is reduced to ~2 hrs. To order additional batteries please visit www.jascopeproducts.com/batteryoffer or call our Customer Support department at 1-800-654-8483 option 3, Monday–Friday, 8 a.m.–5 p.m. CST.

1. Before using your battery with your wireless camera insure the battery has a full charge.
2. A red light on the back of the battery indicates that it is charging properly. When it is fully charged the light will change to green.
3. Use ONLY the AC adapter supplied with your camera to charge the battery.
4. Your battery is rated to be charged approximately 500 times before replacing.

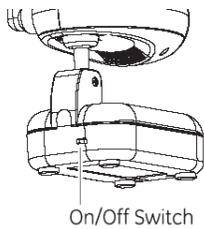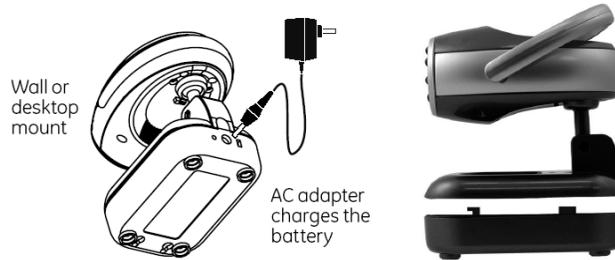


Desktop Mount

1. Slide the camera onto the locking pins of the battery pack.
2. Place camera in desired location on a flat surface.
3. Set switch on battery to "ON" position.
4. Adjust antenna and camera angle as desired.

Wall Mount

1. Wood screws with a flat head no larger than 3/16" in diameter are required to ensure screw heads fits inside of battery mount. (Screws and anchors not included)
2. Drill two holes in the desired mounting location the same width as the mounting holes on the battery.
 - a. Install two wall anchors into the holes. Insert screws into wall anchors.
 - b. Or screw directly into a wall stud if anchors are not desired.
3. Make sure the screw heads protrude slightly from the wall to allow the camera to mount.
4. Secure camera to the wall by fitting the mounting slots on the back of the camera onto the screw heads in the wall.
5. Set the ON/OFF switch on the battery to "ON" position. Slide the camera onto the locking pins of the battery pack.
6. Adjust antenna and camera angle as desired.

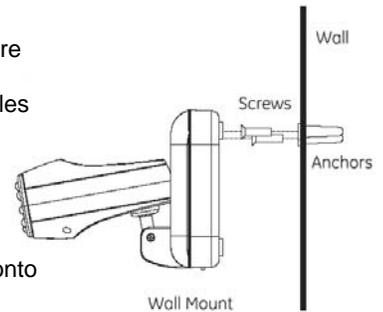

TROUBLE SHOOTING

1. Check all connections. Make sure camera(s) & monitor are powered ON and battery is properly attached to camera.
2. Ensure camera(s) & monitor are set to correct channel(s).
3. Make sure camera(s) is within range of monitor or receiver.
4. Make sure rechargeable battery is charged.

When battery has reached its end of life dispose according to your local or state regulations

WARRANTY

ONE-YEAR LIMITED WARRANTY: Jasco Products Company warrants this product to be free from manufacturing defects for a period of one year from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to: Jasco Products Company, 10 E Memorial Road, Oklahoma City, OK 73114



is a trademark of General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114 www.jascopeproducts.com

