 


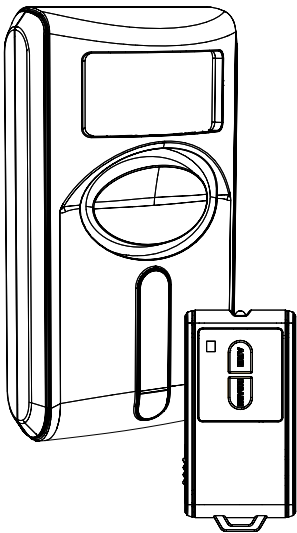

Personal Security
**Motion Sensor
with Remote**
User Manual

 


Do not use in wet locations




Motion Sensing Alarm

With Remote Control

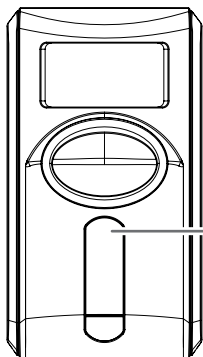


Motion Sensing Alarm

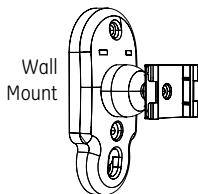 

Wall
Mount

Indicator Light

 Keychain
Remote

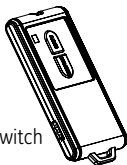

Alarm/Chime Switch

Low Battery Indicator

The Motion Sensing Alarm has a low battery indicator light. If the batteries need to be replaced, the indicator light will flash slowly. Average battery life for typical usage is up to one year.

INSTALLING BATTERIES

The Remote Controlled Motion Sensing Alarm requires 3 AA Alkaline batteries (not included).

Installing Batteries in the Alarm

The battery compartment is located on the back of the unit.

1. Remove the battery compartment screw and slide off cover in the direction of the open arrow.
2. Insert (3) AA batteries (not included) . Take care to note the polarity diagram inside the battery compartment.
3. Replace the cover and secure screw.

Installing batteries in the remote control

 
The Remote Control requires a CR2032 battery (included). Average battery life for typical usage is one year.

1. Slide off battery compartment cover

located on the back of the remote control.

2. Insert a 2032 battery noting polarity inside the battery compartment.
3. Replace cover.

Battery Compartments

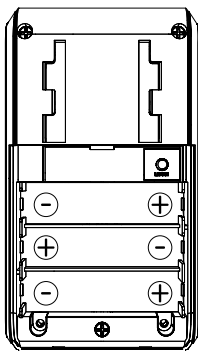

Learn
Button



 
Remote

LINKING THE REMOTE TO THE ALARM

Make sure you have installed the batteries before proceeding.

1. Remove the battery compartment screw and slide off cover in the direction of the open arrow. Locate LEARN button.

Battery Compartment

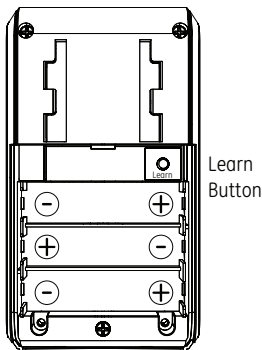


2. Press the LEARN button.

-
3. Immediately point the remote control towards the front of the alarm unit and press the ARM button. The alarm will sound a single short tone, and the light will stop flashing to confirm the remote has been linked to the alarm. The alarm unit will now respond to the remote.
 4. Replace cover to the battery compartment of the main unit and secure screw. The alarm is now in standby mode.
NOTE: Additional remotes can be added to the system by following the same programming procedure.

INSTALLATION


The unit is designed to be wall mounted with the ball and socket mount (included). The ball and socket mount will provide the flexibility to aim the motion sensor in a particular direction.

 1. Choose your desired location, such as the corner of the room. This will provide maximum coverage. **NOTE:** The sensor has a 15-20 ft. detection zone, with approximate angles of 110° horizontal \times 70° vertical. Recommended installation height is 6 to 8 feet.

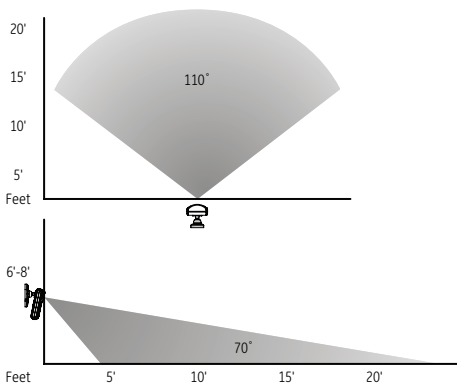

2. Secure ball and socket mount to the

 wall using either the provided wall anchors or by screwing directly into a wall stud. Once installed securely on the wall, slide insert bracket of mount into the back of the unit and lock in place. The mount will click when secured to the alarm.

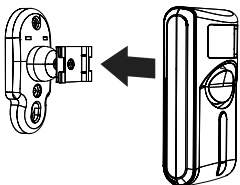

OPERATING IN THE ALARM MODE

1. Locate the ALARM/CHIME switch on the side of the remote.



2. Slide switch to ALARM mode.

Arming the Alarm

1. Point the remote control at the front of the alarm and press the ARM button. The alarm will sound a tone and the red indicator light will flash. There will be a 45 second exit delay before the unit is armed. The delay allows time for you to leave the protected area without triggering the alarm.
2. When motion is detected, the alarm unit will sound a short tone and a red light will flash. The alarm will activate in 30 seconds. The siren will sound for 30 seconds (unless disarmed by the remote) and then turn off. In 15 seconds the alarm will check for motion. If motion is detected, the siren will sound again. The cycle will repeat until the unit is disarmed with the remote.

Disarming the Alarm

When returning to the protected area, the unit will beep once if motion is sensed.

1. Point the remote control at the front of the alarm unit and press the DISARM button within 30 seconds to disarm the alarm.
2. If the remote control with the correct security code is not used within 30 seconds, the alarm will sound. During this entrance delay, the red indicator light will flash. Use the remote control at any time to deactivate the alarm.

NOTE: To test, a cloth can be used to cover the alarm to reduce risk of hearing damage.

OPERATING IN THE CHIME MODE

The chime is used to notify you when motion is sensed in the area.

1. Locate ALARM/CHIME switch on the side of the remote.



2. Slide switch to CHIME mode.

ACTIVATING THE CHIME

Activate the chime by pointing the remote control at the alarm and pressing the 'ARM' button. The chime will now go off once and again when motion is sensed.

DEACTIVATING THE CHIME

Deactivate the chime by pointing the remote control at the alarm and pressing the 'DISARM' button.

PANIC FEATURE

For immediate alarm with no delay, aim

the remote at the front of the alarm and press and hold the ARM and DISARM buttons on the remote control for 2 seconds. To turn off the panic alarm, aim the remote at the front of the alarm and press the DISARM button.

TESTING MOTION SENSOR OPERATION

1. Set remote to CHIME mode and press ARM button; the chime will sound once.
2. After initial chime, wait 15 seconds and wave hand in front of the sensor. If chime sounds immediately, the sensor is working properly.
3. To discontinue test, point remote at front of alarm and press DISARM. Set remote to ALARM mode.

CARE AND MAINTENANCE

To clean the alarm housing, use a soft

cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

WARNING

Limitations of Alarm Products

This product should be tested periodically to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, or other adverse events. However, JASCO is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. JASCO makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning, or that it will prevent any personal injuries, property damage, or other losses. Like any alarm product, including expensive commercial systems, it may be bypassed, it is subject to compromise, and it may fail to warn for a variety of reasons, including, but not limited to: improper installation or positioning; improper maintenance; tampering; dead or improperly installed batteries; sensing limitations; component failures; receivers; for infrared products, intrusions may be outside of a product's designed range and certain environmental conditions may impact performance and audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.

WARNING*Risk of personal injury*

- Prolonged exposure to alarm siren may cause permanent hearing loss

Battery Warning

- Remove batteries before storing the Alarm for extended periods
 - Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage
 - Do not mix old and new or other battery types
 - Replace all batteries at the same time
 - Replace fully discharged batteries immediately
- For indoor use only; do not use in wet locations.

For indoor use only; do not use in wet locations.

This Jasco product comes with a 90 day limited warranty. Please contact Customer Service at 800-654-8483 between 7:30AM—5:00PM CST or via our website (www.jascoproducts.com) if the unit should prove defective within the warranty period.



is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114.

51207
5/08

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.