


UNPACKING YOUR PERSONAL ALARM

Before attempting to use your Personal Key Chain Alarm, remove the insulation tape between the alarm housing and the battery compartment.

The GE Personal Key Chain Alarm requires (4) LR44 batteries (included). Test the batteries by pressing the pushbutton on the left side of the unit. Replace the batteries once the red light does not illuminate. Average battery life for typical usage is 6 months.

1. Access the battery compartment by removing the three screws on the back of the unit and separating the front and back halves.

2. Insert (4) LR44 button batteries noting polarity.
3. Replace halves and secure with screws.

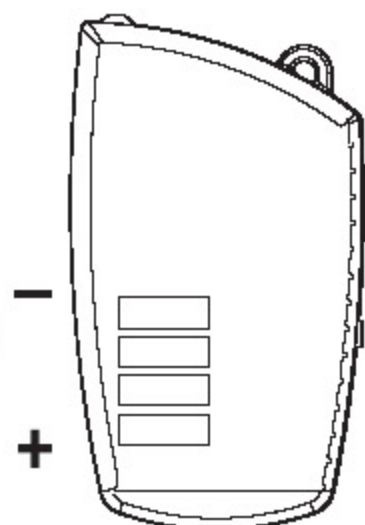

1

IMPORTANT! Remove batteries before storing the Alarm for extended periods. Batteries corrode over time and may cause permanent damage to the unit. Different types of batteries or new and used batteries should not be mixed. Depleted batteries should be removed from the unit and disposed of properly.

OPERATION OF ALARM (see figure on page 3)


1. To activate siren, hold alarm in one hand and pull on cord with the other, pulling metal pin out of alarm body.
2. To stop the siren, insert the metal pin back into the alarm body.

OPERATION OF LIGHT

1. Press and hold pushbutton on left side of unit. Red light will illuminate.

DO NOT USE IN WET LOCATIONS.

2

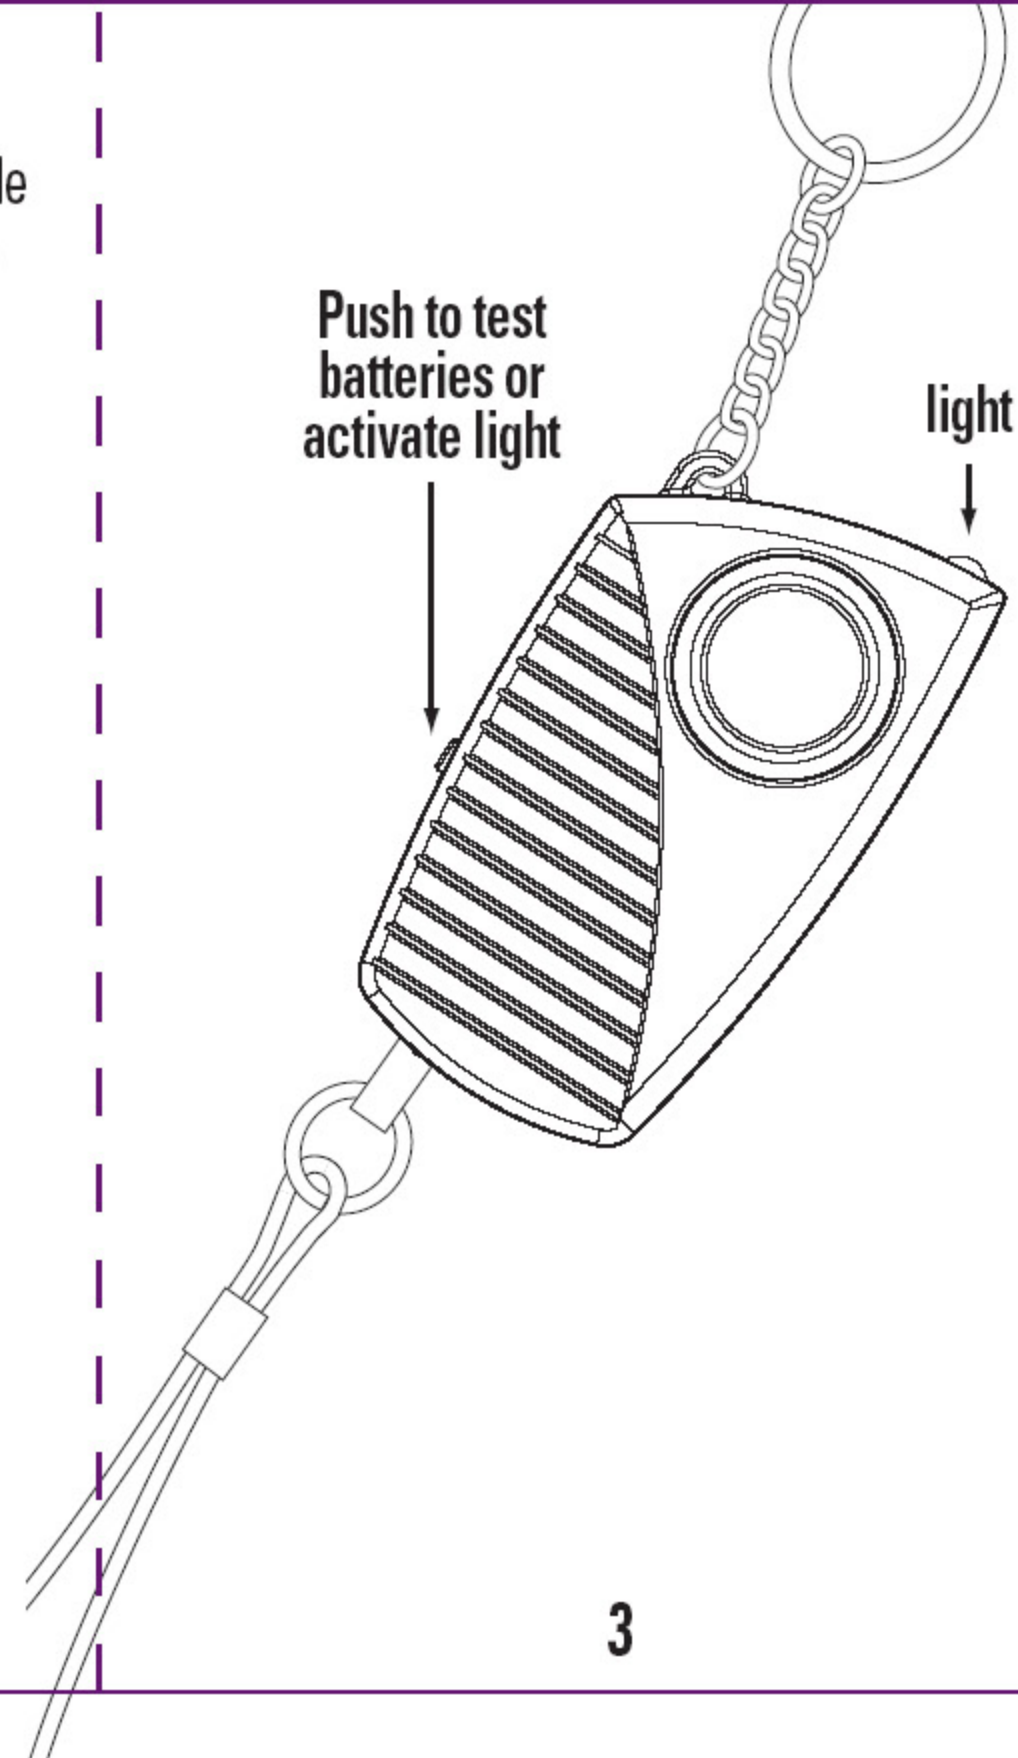

3

WARNING

Limitations of Alarm Products

This product should be tested weekly to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, fire, or other adverse events. However, GE HEP is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. GE HEP makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning, or that it will prevent any personal injuries, property damage, or other losses. Like any alarm product, including expensive commercial systems, it may be bypassed, it is subject to compromise, and it may fail to warn for a variety of reasons, including, but not limited to:

4

improper installation or positioning; improper maintenance; tampering; dead or improperly installed batteries; sensing limitations; component failures; smoke may not reach detectors; for wireless systems, the functional range may be adversely affected by certain environmental conditions, radio frequency interference and obstructions between the transmitters and receivers; for systems using telephone lines, the lines may be out of service or disrupted; for infrared products, intrusions may be outside of a product's designed range and certain environmental conditions may impact performance and audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.

5



Personal Security Alarm

User's Manual

WARNING

Risk of personal injury

- Prolonged exposure to alarm siren may cause permanent hearing loss

Questions? Call 1-800-443-4924
Made in China for
GE Home Electric Products, Inc.
Nela Park, Cleveland, OH 44112
Desc.: GESECPA1-D