


Preserves the dynamic performance of CDs and DVDs.

In order to preserve the unique and dynamic performance of your discs, it is essential that regular cleaning be performed. Dirt, dust, fingerprints, and other foreign matter can soil your CDs and DVDs, preventing encoded digital data from playing properly. The Radial CD/DVD Cleaning System's unique rotating mechanism permits superb cleaning action in accordance with CD manufacturer's recommendations—radial strokes, from the center to the edge. (See Illustration)

INSTRUCTIONS:


1. Hold the CD by the edge and from approximately 6" away, apply 2-3 sprays to the playing side of the disc. Make sure surface of disc is evenly covered.
2. Place playing side with cleaning solution face up in the cleaning system.
3. Close cover. Turn handle a minimum of 10 complete revolutions for thorough cleaning.
4. Open cover and remove disc by gripping the CD from the left and right notches.

KEEP FINGERS ON OUTER EDGE OF DISC WHEN HANDLING.

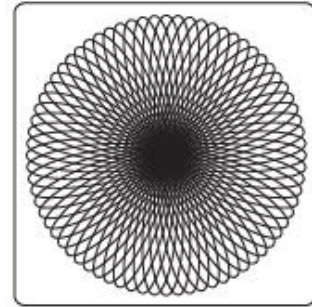

The specially geared cleaning mechanism provides even pressure of the cleaning pad over the surface of the disc.

El mecanismo de limpieza de engranajes especiales provee una presión

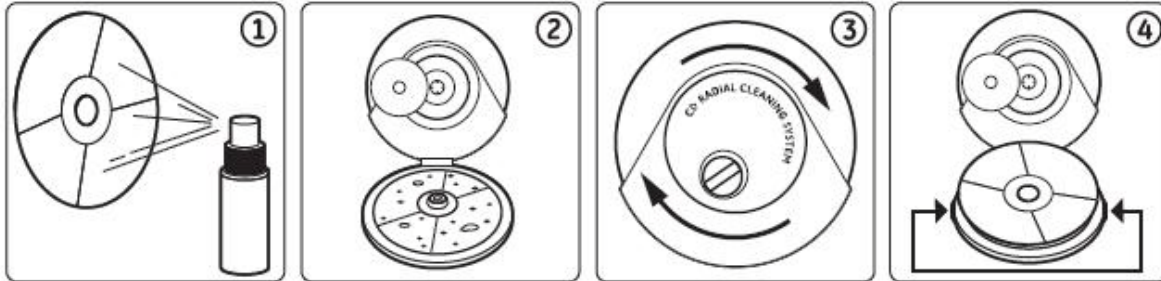

Sistema de Limpieza del Disco Compacto Radial

Lo Ultimo en Limpieza de Alta Tecnología para Discos Compactos

INSTRUCCIONES:

1. Sujetar al DC por los bordes y desde unas 6 pulgadas de distancia rociar 2-3 veces el lado de la grabación del disco. Sea seguro que la superficie del disco está cubierta uniformemente.
2. Coloque el disco que juega el lado para arriba con la solución de la limpieza en el sistema de la limpieza.
3. Cerrar la tapa. Haceria girar a la manivela un minimo de 10 revoluciones para una buena limpieza.
4. Abrir la tapa y retirar el disco inmediatamente. Tenga especial cuidado al manejar el disco.

MANTENER LOS DEDOS EN EL BORDE EXTERIOR DEL DISCO AL MANEJARLO.