
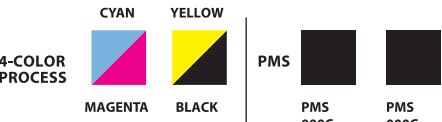


File Name: 64759 EnSp Manual v1
Production: Rasmi
Date: 05/12/2021
PM: Derek Meinholdt

RUNNING CHANGE

Peg holes must be positioned by vendor for the product to hang straight
If peg hole conflicts with art please let designer know.



PACKAGE SPECS:
MUST USE A MINIMUM OF 25% POST CONSUMER WASTE RECYCLED PAPER STOCK


PAPER STOCK:

PAPER COLOR: Bright Wite
PAPER FINISH: Matte

Preferred location



Secondary location



bottom of right side of front blister

MUST USE PET1 PLASTIC and EMBOSS EMBLEM ON BLISTER AS INDICATED

PACKAGE TYPE:
Paper Insert

H- 238.125 MM
W- 114.3 MM
D- 4.5 MM

CORNER RADIUS .635CM

JASCO®

COMMENTS:

IMPORTANT:

All materials used in the packaging of this product are required to use recyclable materials as indicated below:

PAPER:

A mininum of 25% post consumer waste recycled materials is required for all paper stock to include:

- packaging paper stock
- molded pulp/filler trays
- cardboard fillers

NOTE: Instruction Manuals/Sheets must use a minimum of 50% post consumer waste recycled materials

PLASTIC:

PET is required for any plastics used to include:

- plastic hang tabs
- plastic sheets for window boxes
- plastic bags
- full plastic boxes
- molded trays used to support the product



6-Outlet Yard Stake Timer

INSTRUCTIONS:

1. Connect the two segments of the stake and screw in the stake to the bottom of the timer.
2. Locate the segments around the outer edge or the timer's dial. These segments represent 30 minutes and can be pushed up/down from the edge of the dial. Use the tip of a pen or pencil if necessary. Pins are shipped in the down position. Be sure all segments are pulled up before programming.
3. Select the times you want the device turned on and off. Push down ALL the segments on or within the period for the on time. You may need to turn the dial clockwise to access the desired segments. Segments left up turn off your device.
4. Select an outdoor location near a GFCI outlet and firmly push the stake into the ground. Plug the cord directly into a GFCI outlet.
5. Turn the rotating timer dial clockwise until the pointer on the face of the dial aligns with the time of day. **Note:** Nighttime hours (from 6:30PM to 6:30AM) are highlighted with a gray background.
6. Open self-closing outlet cover and plug in device to be controlled. If the device has a power switch, it must be in the ON position.

DO NOT PLUG IN MORE THAN THE RATED LOAD (SEE RATINGS). To find total watts if not marked on the appliance, multiply the ampere rating on the nameplate by 125. For lamps with multiple bulbs, add the wattage on each bulb.

IN THE EVENT OF AN OVERLOAD, the circuit breaker trips to shut off power to the device. Remove the source of the overload and press the circuit breaker on the bottom of the timer to reset.

TROUBLESHOOTING:

Problem	Solution
Cannot push pins down	Verify pins are not already down
Light or appliance does not turn ON	Make sure the device power switch is in the ON position
Light turns ON/OFF at day instead of night	Check to make sure AM/PM time and program settings are correct
Light turns on early or late – ex. light turns on at 5:15PM instead of 5PM	Manually turn dial to cycle timer ON or OFF at the correct time – ex. at 5PM, turn dial until timer turns on

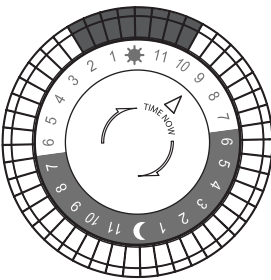


Figure 1
Timer is set to turn ON appliance at 10AM and OFF at 2PM. Notice ALL segments between 10AM and 2PM are pushed down. Time is 9AM.



17.25in (184.15 mm)



6 Tomas Temporizador Estaca Decorativa

INSTRUCCIONES:

1. Conecte los dos segmentos de la estaca y atornille la estaca a la parte inferior del temporizador.
2. Busque los segmentos alrededor del borde exterior o el dial del temporizador. Estos segmentos representan 30 minutos y se pueden presionar hacia arriba o hacia abajo desde el borde del dial. Utilice la punta de un bolígrafo o de un lápiz si es necesario. Las clavijas vienen hacia abajo de fábrica. Asegúrese de que todos los segmentos estén levantados antes realizar la programación.
3. Seleccione los horarios en los que se desea que el dispositivo se encienda y se apague. Empuje hacia abajo TODOS los segmentos incluidos en el período para el horario de encendido. Es posible que deba girar el dial en el sentido de las agujas del reloj para acceder a los segmentos deseados. Los segmentos que quedan hacia arriba apagan el dispositivo.
4. Seleccione una ubicación al aire libre cerca de un tomacorriente GFCI y empuje firmemente la estaca para insertarla en el suelo. Enchufe el cable directamente en un tomacorriente GFCI.
5. Gire el dial del temporizador giratorio en el sentido de las agujas del reloj hasta que el puntero del indicador del dial coincida con la hora del día. Nota: Las horas nocturnas (de 6:30 p.m. a 6:30 a.m.) están resaltadas con un fondo gris.
6. Abra la tapa del tomacorriente con cierre automático y enchufe el dispositivo a controlar. Si el dispositivo tiene un interruptor de encendido, debe estar en la posición de ON (encendido).

NO CONECTE MÁS DE LA CARGA NOMINAL (CONSULTE LAS CLASIFICACIONES). Para encontrar los vatios totales si no están indicados en el aparato, multiplique la clasificación de amperios en la placa de identificación por 125. Para lámparas con múltiples focos, sume el vataje de cada foco.

EN CASO DE SOBRECARGA, el disyuntor se dispara para cortar la alimentación del dispositivo. Elimine la fuente de la sobrecarga y presione el disyuntor en la parte inferior del temporizador para reiniciar.

SOLUCIÓN DE PROBLEMAS

Problema	Solución
No se pueden empujar las clavijas hacia abajo	Verifique que las clavijas no estén bajadas
No se enciende la luz o el aparato	Asegúrese de que el interruptor de encendido del dispositivo esté en la posición de ON (encendido)
La luz se enciende o apaga durante el día en lugar de la noche	Asegúrese de que la hora a.m./p.m. y la configuración del programa sean correctas
La luz se enciende antes o después de tiempo;- por ej. la luz se enciende a las 5:15 p.m. en lugar de a las 5 p.m.	Gire manualmente el dial para encender (ON) o apagar (OFF) el temporizador a la hora correcta; por ej. a las 5 p.m., gire el dial hasta que se encienda el temporizador

HECHO EN CHINA

Distribuido por Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

Este producto de Jasco tiene una garantía limitada de 1 año. Visite www.jasco.com para conocer los detalles de la garantía.

¿Preguntas? Comuníquese al 1-800-654-8483 entre las 7AM y las 8PM CST (hora central estándar).



Especificaciones
Límite:
125VAC, 60Hz, 15A, 1875W

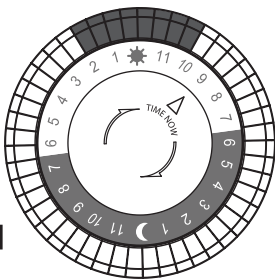


Figura 1
El temporizador está configurado para encender el aparato a las 10 a.m. y apagarlo a las 2 p.m. Observe que TODOS los segmentos entre las 10 a.m. y las 2 p.m. están presionados hacia abajo. La hora es las 9 a.m.



17.25in (184.15 mm)

MADE IN CHINA
Distributed by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product comes with a 1-year limited warranty. Visit www.jasco.com for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-800-654-8483 between 7AM-8PM MT Central Time.



64759 v1

05/21

Ratings:

125VAC, 60Hz

15A, 1875W resistive

10A, 1250W tungsten

500VA electronic ballast (LED/CFL)

1/2HP