



See reverse for easy-to-follow instructions and exclusive deals.



Setup

Your universal remote requires two (2) AA batteries (not included). Alkaline batteries are recommended.

Battery installation

1. Press arrow on back of remote and slide cover downward to remove.
2. Insert the batteries, making sure to match the (+) (-) polarity inside the compartment.
3. Replace cover and slide it upward until it clicks into place.

Note: If your remote is not operating properly, replace the batteries with new ones.

Battery precautions

- Do not mix old and new batteries.

- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.

- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.


Battery saver

Your remote automatically turns off if the buttons are held down for more than 8 seconds. This saves battery life if your remote gets stuck in a place where the buttons remain depressed (e.g., between sofa cushions).

Code saver


You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.

Button functions

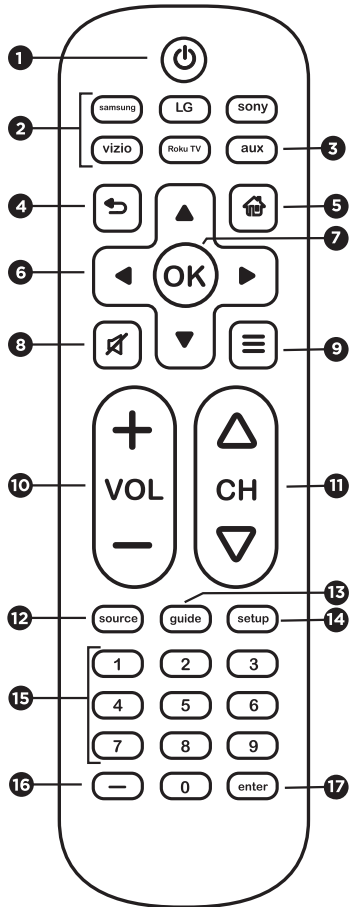

1. **Power** – Turns devices ON/OFF
2. **Device buttons** – TV buttons preset for Samsung, Sony, LG, Vizio and Roku TVs
3. **AUX** – Preprogrammed for Roku boxes but can be reprogrammed to operate other A/V devices
4. **Back** – Returns to previous menu
5. **Home** – Accesses features on streaming devices
6. **Directional pad** – Menu navigation; Rewind (left arrow), Fast Forward (right arrow) for smart TVs and streaming devices
7. **OK** – Selects menu; Play/Pause for smart TVs and streaming devices
8. **Mute** – Mutes sound
9. **Menu** – Displays on-screen menu
10. **Volume up/down**
11. **Channel up/down**
12. **Source** – Selects video input
13. **Guide** – Displays cable/satellite on-screen program guide
14. **Setup** – Used to program the AUX device button
15. **Numbers** – For direct channel selection
16. **Dash** – Used to select digital channels, e.g., 4-1
17. **Enter** – For devices that require **Enter** to be pressed after channel selection

Easy OneTouch control

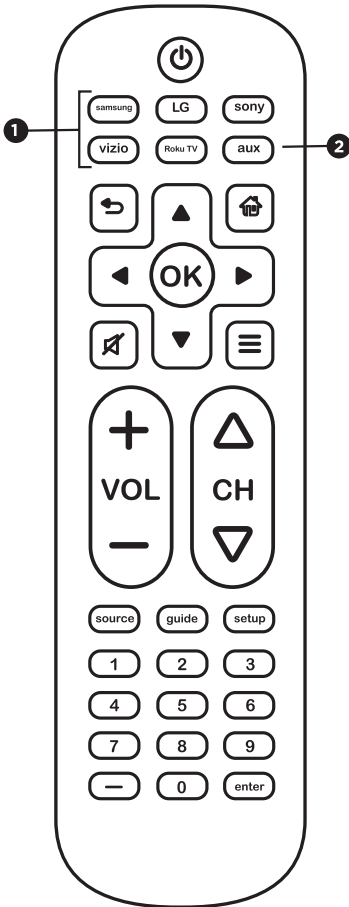

No programming is required for the following buttons, allowing you to spend your time enjoying your entertainment.

1. TV brand buttons


This universal remote is preprogrammed to operate Samsung, LG, Sony and Vizio TVs, as well as any brand of Roku TV.* Once batteries have been added, simply press the TV device button that matches your TV's brand, and that's it! Now you can control your TV — no additional programming is required.

**Some Sharp and Insignia Roku TVs may require programming. See the Direct Code Entry or Auto Code Search section for step-by-step programming instructions.*

2. AUX device button

While the AUX button is preprogrammed to operate your Roku box, it can be reprogrammed to operate another compatible infrared A/V device, such as a Blu-ray/DVD player, cable or satellite box, soundbar, etc. Use the direct code entry or auto code search programming methods outlined in this manual.

Direct code entry

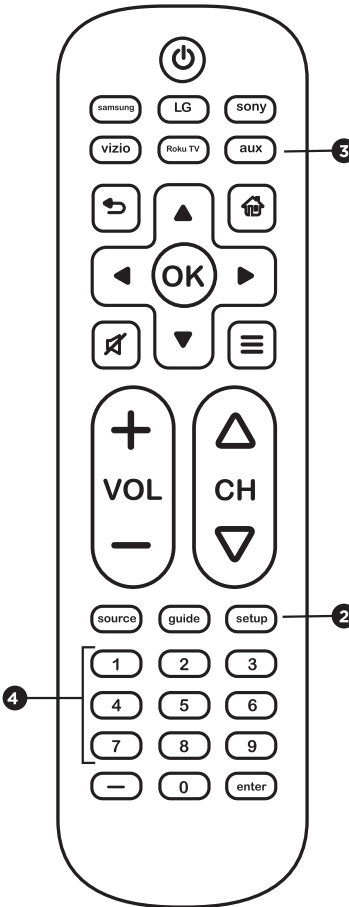

Direct code entry is recommended for quick and easy programming.


Note: The TV device buttons are preprogrammed for top TV brands: Samsung, LG, Sony, Vizio and any brand of Roku TV. The AUX device button is preprogrammed for Roku boxes but can be reprogrammed for any other compatible A/V device, such as a Blu-ray/DVD player, cable box, soundbar, etc. If the remote is not working properly for your TV, you can reprogram your TV brand's device button.

1. In the **code list** included with your remote, circle the 4-digit codes for the type and brand of device you wish to control.
2. Press and hold the **setup** button until the red light turns on, then release it. The red light will remain on.
3. Press and release the **AUX** button. The red light will blink once and remain on.
4. Enter the first 4-digit code circled in Step 1. The red light will turn off.
5. Point the remote at the device and test the buttons. If they don't work as expected, repeat Steps 2-5 with the next circled code.
6. Repeat the process for each device you wish to control.

Programming Notes

- Some codes may operate only a few device functions, so test other codes for more functionality.
- Trouble finding a code? Program the remote using the auto code search method.
- Keep your device codes for future reference.

Auto code search

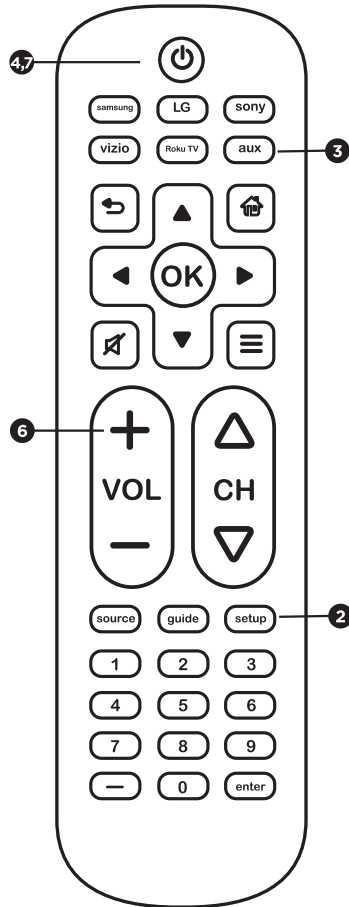

Auto code search cycles through all codes in the remote to find one for your device.

Before you begin, read through the steps below to familiarize yourself with the auto code search process.


1. Manually turn on the device you wish to control. (Use direct code entry method for devices without ON/OFF capability.)
2. Press and hold the **setup** button until the red light turns on, then release it. The red light will remain on.
3. Press and release the **AUX** button. The red light will blink once and remain on.
4. Point the remote at the device and press the **power** button. The red light will blink and then remain on after cycling through 10 codes.

Did the device turn off?

- YES** – Go to Step 5.
NO – Repeat Step 4 to test the next 10 codes.
5. Manually turn on the device.
6. Point the remote at the device, then press and release **vol+**. The red light will blink once and remain on.
- Did the device turn off?**
YES – Press and release the same device button pressed in Step 3. This stores the code in your remote. Then, go to Step 7.
NO – Repeat Step 6 until the device turns off. Wait 3 seconds between each **vol+** button press.
7. Use the remote to turn on the device. Test the remote's buttons. If they don't work as expected, repeat Steps 2-7.
8. Repeat the process for each device you wish to control.

Auto code search

Code identification

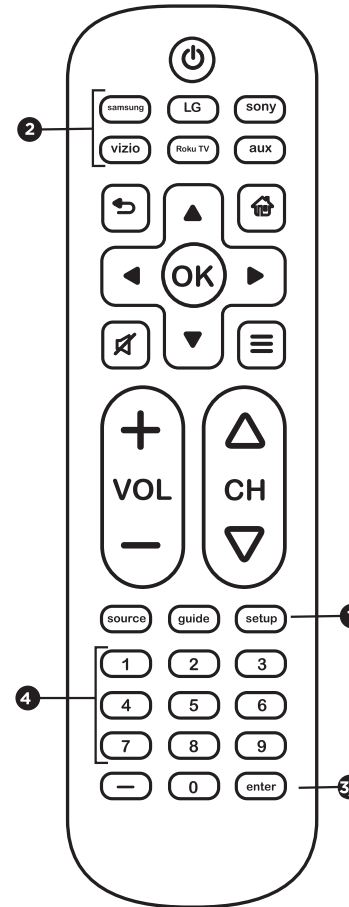


Code identification lets you retrieve the 4-digit code used to program each of your device buttons.

1. Press and hold the **setup** button until the red light turns on, then release it. The red light will remain on.
2. Press and release the device button for the code you seek.
3. Press and release **enter**.
4. Press and release **#1** and count how many times the red light blinks. This is the first digit in your code. Repeat the process by pressing **#2**, **#3** and **#4** for the remaining digits.
5. Press and release **enter** to exit this mode.

Combo devices

Some combo devices (e.g., TV/VCR, etc.) require use of a separate mode button for each part of the combo device. For example, if you have a TV/VCR combo, you might need to set up a separate VCR code under the AUX button to control that part of the combo device.

Primary audio control

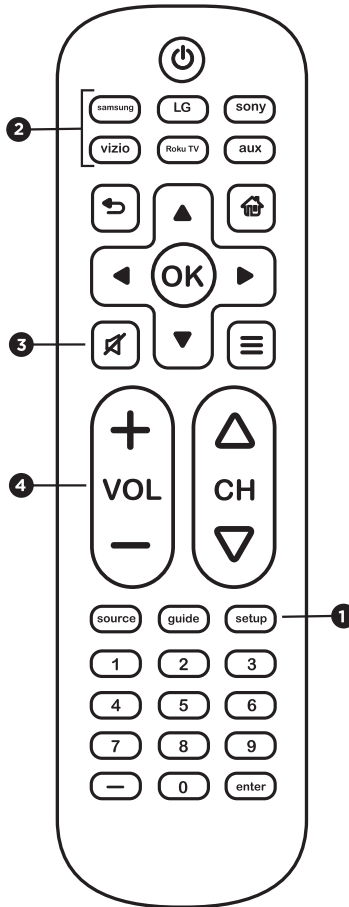

Primary audio control lets you select an audio device to control the volume no matter which component you're operating.

Enabling primary audio control

1. Press and hold the **setup** button until the red light remains on, then release it. The red light will remain on.
2. Press and release the device button for the audio component you wish to use.
3. Press and release the **mute** button.
4. Press and release **vol+**. The red light will blink twice and turn off.

Disabling primary audio control

1. Press and hold the **setup** button until the red light remains on, then release it. The red light will remain on.
2. Press and release the device button previously programmed for primary audio control.
3. Press and release the **mute** button.
4. Press and release **vol-**. The red light will blink twice and turn off.

Thank you for your purchase!



Instructions made easy

Read instructions or watch easy-to-follow video.

Scan code or visit byjasco.com/859951.



Register your product

Receive exclusive deals and register your product.

Scan code or visit byjasco.com/deals.



Enhance your home entertainment experience at byjasco.com/ce.



Like our product?

Leave a review on your favorite retailer website or amazon.com.



Having problems?

Let us know how we can help.

Call **1-844-816-0320**, M-F.

Troubleshooting

Remote does not operate your device

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device and make sure there are no obstructions between the remote and the device.
- Make sure you select the appropriate device on the remote you wish to control (your TV's brand button or AUX for your Roku box or another A/V device).
- Try programming the remote with a different code. See **Direct Code Entry** or **Auto Code Search** section.
- Remote may not be compatible with your device.

Remote does not operate some features of your device

- Sometimes a particular code might operate a few features but not all. Try programming the remote with a different code from the code list. See **Direct Code Entry** section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

Reset to factory settings

1. Press and hold the **setup** button until the red light stays on, then release it. The red light will remain on.
2. Press and release the **mute** button.
3. Press and release **0** (zero). The red light will blink twice.



byjasco.com/recycle
paper made from 25% post consumer waste

MADE IN VIETNAM
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Jasco Products Company, LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 is the warrantor in relation to this product.

This product has a limited-lifetime warranty. Visit www.philips.com/support for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320, M-F.

PATENTS/PATENTS PENDING
WWW.BYJASCO.COM/PATENTS

FCC statement	Preparación	Funciones de los botones	Control sencillo con una sola pulsación	Entrada directa de código	Búsqueda automática de códigos	Identificación de códigos	Control de audio primario
Suppliers Declaration of Conformity Model #: SRP3945B/37 Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com This device complies with Part 15 of the FCC standard, Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.	Su control remoto universal requiere dos (2) pilas AA (no incluidas). Se recomienda el uso de pilas alcalinas. Instalación de las pilas - Presione hacia abajo sobre el enganche de la tapa del compartimiento para pilas y levante para retirarla. - Inserte las pilas asegurándose de que coincidan con la polaridad (+) (-) dentro del compartimiento. - Vuelva a colocar la tapa y encaje a presión el enganche en su lugar. Nota: Si su control remoto no funciona correctamente, reemplace las pilas por otras nuevas. Precauciones con las pilas - No mezcle pilas viejas con nuevas. - No mezcle pilas alcalinas, estándar (carbono-zinc) o recargables (Ni-Cd, Ni-MH, etc.). - Retire siempre las baterías viejas, con poca carga o agotadas de inmediato y recíclelas o deséchelas de acuerdo con las reglamentaciones locales y nacionales. Ahorro de energía Su control remoto se apaga automáticamente si los botones se mantienen presionados durante más de 8 segundos. Esto prolonga la vida útil de las pilas si su control remoto se atasca en un lugar donde los botones permanecen presionados (por ejemplo, entre los cojines del sofá). Protector de códigos Tiene hasta 10 minutos para cambiar las pilas en su control remoto sin perder los códigos que programó.						
Declaración de la FCC	Solución de problemas	Encendido - Enciende y apaga los dispositivos Botones de TV - Preprogramados para manejar televisores Samsung, LG, Sony, Vizio y Roku AUX - Preprogramado para Roku boxes, pero se puede reprogramar para que funcione con otros dispositivos A/V Volver - Vuelve a la pantalla anterior Inicio - Accede a las funciones de los dispositivos de transmisión Panel direccional - navegación por el menú; rebobinar (flecha izquierda), avanzar rápidamente (flecha derecha) para televisores inteligentes y dispositivos de streaming OK - Selecciona el menú; Reproducir/Pausar para televisores inteligentes y dispositivos de streaming Mute - Silencia el sonido Menú - Muestra el menú en pantalla Sube/baja el volumen Ir al canal de arriba/abajo Fuente - Selecciona la entrada de video Guía - Muestra la guía de programas por cable/satélite en pantalla Setup - Se usa para programar el control remoto Números - Para la selección directa de canales Guion - Se usa para la entrada directa de canales digitales, por ejemplo, 4-1 Intro - Para dispositivos que requieren que se pulse Intro después de seleccionar el canal	No es necesario programar los siguientes botones, lo que le permitirá dedicar su tiempo a disfrutar de su entretenimiento. Botones de marca de TV Este mando a distancia universal está preprogramado para funcionar con televisores Samsung, LG, Sony y Vizio, así como con cualquier marca de Roku TV*. Una vez añadidas las pilas, sólo tiene que pulsar el botón del dispositivo de TV que corresponda a la marca de su televisor, ¡y ya está! Ya puede controlar su televisor, sin necesidad de programación adicional. <i>*Algunos televisores Sharp e Insignia Roku pueden requerir programación. Consulte la sección Introducción directa del código o Búsqueda automática del código para obtener instrucciones de programación paso a paso.</i> Botón AUX Si bien el botón AUX está preprogramado para operar tu Roku box, puede ser reprogramado para operar otro dispositivo A/V infrarrojo compatible, como un reproductor de Blu-ray/DVD, caja de cable o satélite, barra de sonido, etc. usando los métodos de programación de ingreso directo de código o búsqueda automática de código descritos en este manual.	Se recomienda la entrada directa de código para una programación rápida y fácil. Nota: Los botones del dispositivo de TV están preprogramados para las principales marcas de TV: Samsung, LG, Sony, Vizio y cualquier marca de televisor Roku. Algunos televisores Roku de Sharp e Insignia pueden requerir programación. El botón de dispositivo AUX está preprogramado para cajas Roku pero puede reprogramarse para cualquier otro dispositivo A/V compatible, como un reproductor Blu-ray/DVD, caja de cable, barra de sonido, etc. - En la lista de códigos incluida con el mando a distancia marque con un círculo los códigos de 4 dígitos correspondientes al tipo y la marca del aparato que desea controlar. - Mantenga pulsado el botón setup hasta que se encienda la luz roja del mando a distancia. Suelte el botón setup. La luz roja permanecerá encendida. - Pulse y suelte el botón AUX. La luz roja parpadeará una vez y permanecerá encendida. - Ingrese el primer código de 4 dígitos que encerró en un círculo en el Paso 1. La luz roja se apagará. - Apunte el control remoto al dispositivo y pruebe los botones. Si no funcionan como esperaba, repita los pasos 2 a 5 con el siguiente código encerrado en un círculo. - Repita el proceso para cada dispositivo que desee controlar. Notas sobre la programación - Algunos códigos pueden operar solo unas pocas funciones del dispositivo, así que pruebe otros códigos para obtener acceso a más funcionalidades. ¿Problemas para encontrar un código? Programe el control remoto con el método de búsqueda automática de códigos. - Guarde los códigos de su dispositivo para futuras consultas.	La búsqueda automática de códigos recorre todos los códigos del control remoto hasta encontrar uno para su dispositivo. Antes de comenzar, lea los siguientes pasos para familiarizarse con el proceso de búsqueda automática de códigos. - Encienda manualmente el dispositivo que desea controlar. (Utilice el método de entrada directa de código para dispositivos sin capacidad de ENCENDIDO/APAGADO). - Mantenga presionado setup hasta que se encienda la luz roja del control remoto. Suelte el botón setup. La luz roja permanecerá encendida. - Pulse y suelte el botón AUX. La luz roja parpadeará una vez y permanecerá encendida. - Apunte el control remoto al dispositivo y presione el botón de encendido/apagado. La luz roja parpadeará y luego permanecerá encendida después de recorrer 10 códigos. ¿Se apagó el dispositivo? SÍ - continúe al paso 5. NO - repita el paso 4 para probar los siguientes 10 códigos. - Encienda manualmente el dispositivo. - Apunte el control remoto al dispositivo y presione vol+. La luz roja parpadeará una vez y permanecerá encendida. ¿Se apagó el dispositivo? SÍ - Pulse y suelte el mismo botón del dispositivo pulsado en el Paso 3. Esto almacena el código en su mando a distancia. A continuación, vaya al paso 7. NO - Repita el paso 6 hasta que el dispositivo se apague. Espere 3 segundos entre cada pulsación del botón vol+. - Use el control remoto para encender el dispositivo. Pruebe los botones del control remoto. Si no funcionan como esperaba, repita los pasos 2 a 7. - Repita el proceso para cada dispositivo que desee controlar.	La identificación de códigos le permite recuperar el código de 4 dígitos utilizado para programar cada uno de los botones de su dispositivo. - Mantenga presionado setup hasta que se encienda la luz roja. - Presione el botón del dispositivo del código que busca. - Presione enter. - Presione el número 1 y cuente cuántas veces parpadea la luz roja. Este es el primer dígito de su código. Repita el proceso presionando los números 2, 3 y 4 para los dígitos restantes. - Presione enter, para salir de este modo. Habilitar el control de audio primario - Mantenga presionado setup hasta que la luz roja permanezca encendida. - Presione el botón del dispositivo del componente de audio que desea usar. - Presione el botón mute. - Presione vol+. La luz roja parpadeará dos veces y se apagará. Deshabilitar el control de audio primario - Mantenga presionado setup hasta que la luz roja permanezca encendida. - Presione el botón del dispositivo programado para el control de audio primario. - Presione el botón mute. - Presione vol-. La luz roja parpadeará dos veces y se apagará.	
	Restablecer a la configuración de fábrica - Mantenga pulsado el botón de configuración hasta que la luz roja permanezca encendida y, a continuación, suéltelo. La luz roja permanecerá encendida. - Presione y suelte el botón mute. - Presione y suelte 0 (cero). La luz roja parpadeará dos veces.					Dispositivos combinados Algunos dispositivos combinados (por ejemplo, TV/VCR, etc.) requieren el uso de un botón de modo separado para cada parte del dispositivo combinado. Por ejemplo, si tienes un combo TV/VCR, puede que necesites configurar un código VCR separado bajo el botón AUX para controlar esa parte del dispositivo combo.	

¡Gracias por su compra!



Instrucciones fáciles

Lea las instrucciones o mire el video con el paso a paso.

Escanee el código o visite byjasco.com/85995i.



Registre su producto

Recibe ofertas exclusivas y registra tu producto.

Escanee el código o visite byjasco.com/deals.



Descubra más iluminación innovadora en byjasco.com/ce.



¿Le gusta nuestro producto?

Deje una reseña en el sitio web de su distribuidor favorito o en amazon.com.



¿Tiene algún problema?

Díganos cómo podemos ayudar.

Llame al **1-844-816-0320**, de lunes a viernes.

HECHO EN VIETNAM
Philips y el emblema de escudo Philips son marcas registradas de Koninklijke Philips N.V. y se usan bajo licencia. Este producto ha sido fabricado y se comercializa bajo responsabilidad de Jasco Products Company y Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 es el garante en relación a este producto.

Este prducto tiene una garantía de limitada de vida. Visite www.philips.com/support para conocer los detalles de la garantía.

¿Tiene preguntas? Comuníquese con nuestro servicio de atención al consumidor de EE. UU. al 1-844-816-0320, de lunes a viernes.

PATENTES/PATENTES PENDIENTES
WWW.BYJASCO.COM/PATENTS