

PHILIPS

Streaming
remote

Audio/video

OneTouch®
remote control



See reverse for easy-to-follow
instructions and exclusive deals.

Thank you
for your purchase!



Product
instructions
made easy

Scan to watch a step-by-step instructional video or
visit byjasco.com/83227i



Register
your Philips
product

Get exclusive, web-only deals and more!
Scan here or visit byjasco.com/deals



Need more remote
control devices?

For additional Philips
remote controls, visit our
website!
byjasco.com/remotes

Like our product?
Leave a review on your favorite
retailer website or amazon.com

Having problems?
Let us know how we can help.
Call 1-844-816-0320, M-F.

Setup

Designed for smart TVs, this streaming remote requires two (2) AAA batteries (not included). Alkaline batteries are recommended.

Battery Installation

1. Press the arrow on the back of the remote and slide the cover downward until it catches, revealing the TV buttons. Continue to pull the cover downward to completely remove it.
2. Insert the batteries, making sure to match the (+) (-) polarity inside the compartment.
3. Replace cover and slide it upward until it clicks into place.

Note: If your remote stops operating properly, replace the batteries with new ones.

Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Battery Saver


Your remote automatically turns off if the buttons are held down for more than 8 seconds. This saves battery life if your remote gets stuck in a place where the buttons remain depressed (e.g., between sofa cushions).

Code Saver

You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.


Button functions

Front

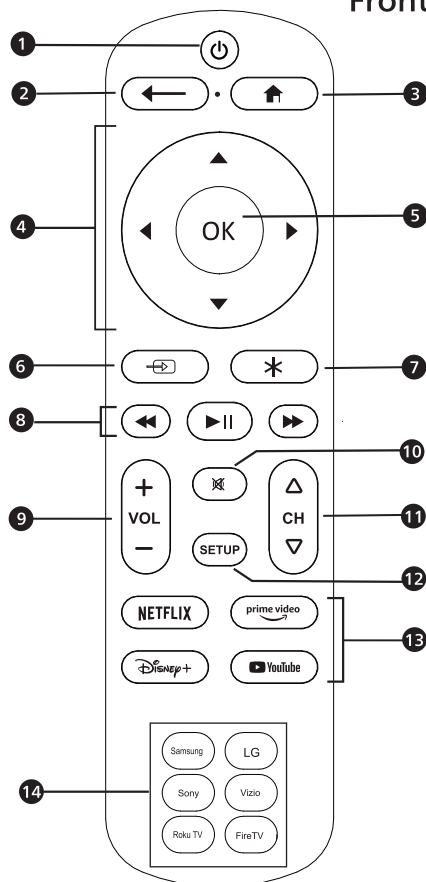

Easy one-touch control

Back

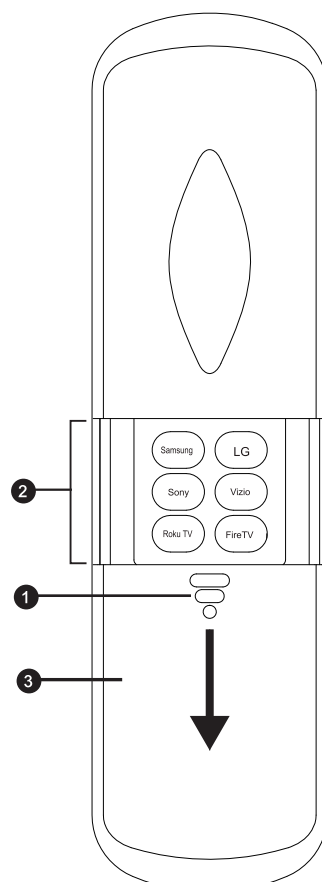

No programming is required for the following buttons, allowing you to spend your time enjoying your entertainment.


Smart TV Device Buttons

This streaming remote comes programmed to operate Samsung, LG, Sony and Vizio smart TVs, as well as any brand of Fire TV and Roku TV*. The TV device buttons are located inside the battery compartment. To select your smart TV's brand:

1. Press the arrow on the back of the remote and slide the battery cover downward.
2. Press the TV device button that matches your TV's brand.
3. Slide the battery cover upward until it clicks into place.

*Some Sharp and Insignia Roku TVs may require programming. See the Direct Code Entry section for step-by-step programming instructions.


Streaming App Hotkeys

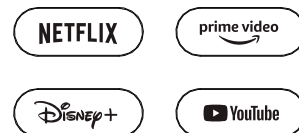

The streaming remote's hotkeys come programmed for direct access to Netflix, Prime Video, YouTube and Disney+.

Note: They cannot be programmed for use with other apps.

Direct code entry

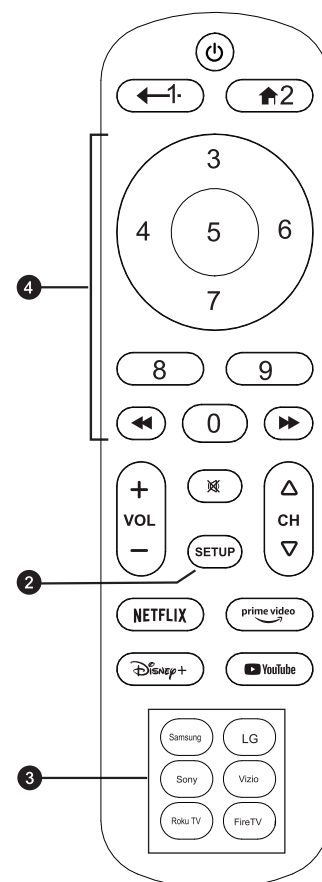

Direct code entry is recommended for quick and easy programming.

Note: The TV device buttons come programmed for top TV brands: Samsung, LG, Sony, Vizio and any brand of Fire TV and Roku TV. If the remote is not working properly for your TV, there may be another code that could provide better functionality. Direct code entry programming will allow you to test other codes for your remote, if needed.

1. In the **code** list included with your remote, circle the 4-digit codes for the type and brand of device you wish to control.
2. Press and release the **TV device** button for your TV's brand. The red light will blink once.
3. Press and hold down the **SETUP** button until the remote's red light turns on. Release the setup button. The red light will remain on.
4. Enter the first 4-digit code circled in Step 1. The red light will turn off.
5. Point the remote at the TV and test the buttons. If they don't work as expected, repeat Steps 2-4 with the next circled code.

Programming Notes

- Some codes may operate only a few device functions, so test other codes for more functionality.
- Keep your device codes for future reference.

Troubleshooting

Remote does not operate your device

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device and make sure there are no obstructions between the remote and the device.
- Make sure you select the appropriate TV brand device button or app hotkey you wish to operate.
- Remote may not be compatible with your device.

Remote does not operate some features of your device

- Sometimes a particular code might operate a few features but not all. Try programming the remote with a different code from the Code List. See Direct Code Entry section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

1. **Power** – Turns devices on/off
2. **Back** – Returns to the previous screen
3. **Home** – Accesss features on streaming devices
4. **Up/down/left/right** – Menu navigation
5. **OK** – Selects menu items for the controlled device
6. **Source input** – Selects video input
7. **Options (*)** – Displays additional options
8. **Rewind, play/pause, fast forward**
9. **Volume up/down**
10. **Mute** – Mutes sound
11. **Channel up/down**
12. **Setup** – Used to program the remote
13. **Streaming app hotkey** – Preset for direct access to Netflix, Prime Video, Disney+ and YouTube
14. **TV device buttons** – Preset for Samsung, LG, Sony, Vizio, Fire TVs and Roku TVs

Reset to Factory Settings

1. Press and hold the **SETUP** button until the red light stays on, then release it. The red light will remain on.
2. Press and release the **MUTE** button.
3. Press and release **OK**. The red light will blink twice.

FCC Statement

Suppliers Declaration of Conformity | Model #: SRP9383B/37 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



MADE IN VIETNAM

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Jasco Products Company, and Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 is the warrantor in relation to this product.

This product has a limited-lifetime warranty. Visit www.philips.com/support for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320, M-F.
PATENTS/PATENTS PENDING
WWW.BYJASCO.COM/PATENTS



byjasco.com/recycle

SRP9383B/37
v4 01/25

PHILIPS

Streaming remote
Audio/video

OneTouch® control remoto



Consulte el reverso para obtener instrucciones fáciles de seguir y ofertas exclusivas.

¡Gracias por su compra!



Instrucciones fáciles

Lea las instrucciones o mire el video con el paso a paso.

Escanee el código o visite byjasco.com/832271.



Registre su producto

Recibe ofertas exclusivas y registra tu producto.

Escanee el código o visite byjasco.com/deals.



Para controles remotos Philips adicionales, visite nuestro sitio web. byjasco.com/remote.



¿Le gusta nuestro producto?

Deje una reseña en el sitio web de su distribuidor favorito o en amazon.com.



¿Tiene algún problema?

Díganos cómo podemos ayudar.

Lláme al 1-844-816-0320, de lunes a viernes.

Preparación

Diseñado para televisores inteligentes, este control remoto de transmisión requiere dos (2) baterías AAA (no incluidas). Se recomienda el uso de pilas alcalinas.

Instalación de las pilas

1. Pulse la flecha situada en la parte posterior del mando a distancia y deslice la cubierta hacia abajo hasta que se enganche, dejando al descubierto los botones del televisor. Continúe tirando de la cubierta hacia abajo para retirarla por completo.
2. Inserte las pilas asegurándose de que coincidan con la polaridad (+) (-) dentro del compartimiento.
3. Vuelva a colocar la tapa y deslícela hacia arriba hasta que escuche un clic.

Nota: Si su control remoto no funciona correctamente, reemplace las pilas por otras nuevas.

Precauciones con las pilas

- No coloque pilas nuevas con pilas viejas.

- No mezcle pilas alcalinas, estándar (carbono-zinc) o recargables (Ni-Cd, Ni-MH, etc.).

- Retire siempre las baterías viejas, con poca carga o agotadas de inmediato y recídelas o deséchelas de acuerdo con las reglamentaciones locales y nacionales.


Ahorro de energía

Su control remoto se apaga automáticamente si los botones se mantienen presionados durante más de 8 segundos. Esto prolonga la vida útil de las pilas si su control remoto se atasca en un lugar donde los botones permanecen presionados (por ejemplo, entre los cojines del sofá).

Protector de códigos

Tiene hasta 10 minutos para cambiar las pilas en su control remoto sin perder los códigos que programó.


Funciones de los Botones

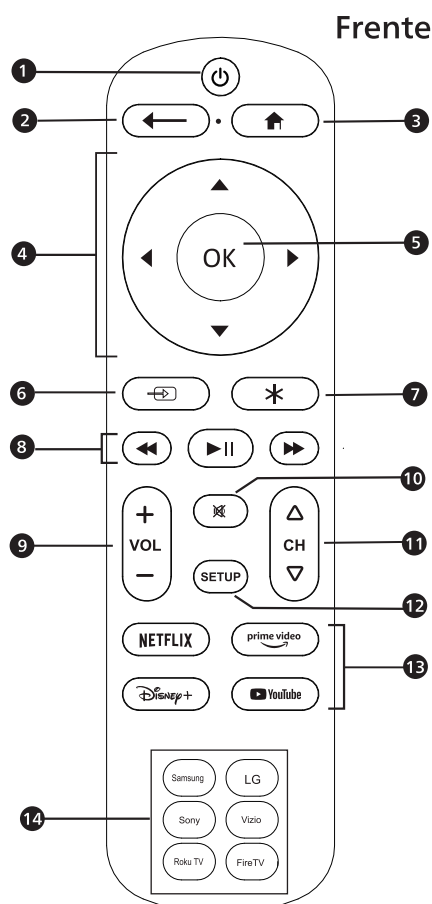

Frente

Control sencillo con una sola pulsación

Volver

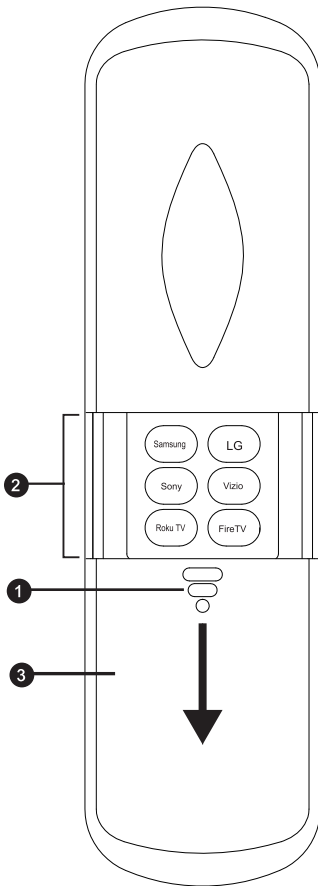

No se requiere programación para los siguientes botones, lo que le permite pasar su tiempo disfrutando de su entretenimiento.


Botones del dispositivo para Smart TV

Este control remoto de transmisión viene programado para operar televisores inteligentes Samsung, LG, Sony y Vizio, así como cualquier marca de Fire TV y Roku TV*. Los botones del dispositivo TV se encuentran dentro del compartimiento de la batería. Para seleccionar la marca de su televisor inteligente:

1. Presione la flecha en la parte posterior del control remoto y deslice la tapa de la batería hacia abajo.
2. Presione el botón del dispositivo de TV que coincida con la marca de su televisor.
3. Deslice la tapa de la batería hacia arriba hasta que encaje en su lugar.

*Algunos televisores Sharp e Insignia Roku pueden requerir programación. Consulte la sección Entrada directa de código para instrucciones de programación paso a paso.


Teclas de acceso rápido de aplicaciones de streaming

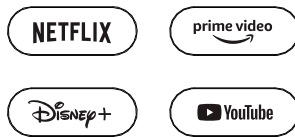

Las teclas de acceso rápido del control remoto de transmisión vienen programadas para acceso directo a Netflix, PrimeVideo, YouTube y Disney+.

Nota: No se pueden programar para usar con otras aplicaciones.

Introducción directa de códigos

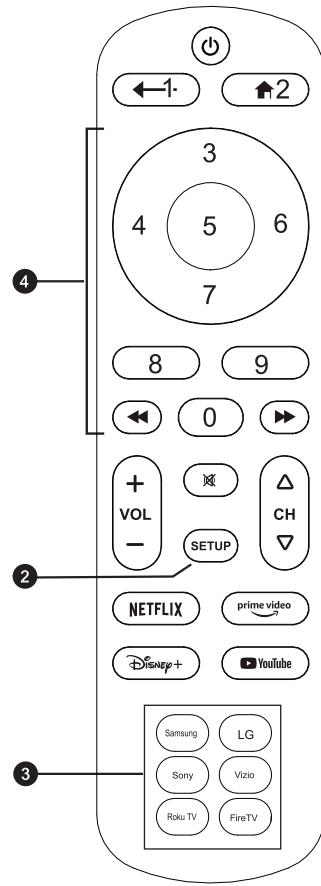

Se recomienda la **entrada directa de código** para una programación rápida y fácil.

Nota: Los botones del dispositivo TV vienen programados para las principales marcas de TV: Samsung, LG, Sony, Vizio y cualquier marca de Fire TV y Roku TV. Si el control remoto de su TV no funciona correctamente, es posible que haya otro código que podría proporcionar una mejor funcionalidad. La programación de ingreso de código directo le permitirá probar otros códigos para su control remoto, si es necesario.

1. En la lista de **códigos** incluida con tu control remoto, encierra en un círculo los códigos de 4 dígitos para el tipo y marca del dispositivo que desees controlar.
2. Presione y suelte el botón del **dispositivo de TV** correspondiente a la marca de su TV. La luz roja parpadeará una vez.
3. Presione y mantenga presionado el botón **SETUP** hasta que se encienda la luz roja del control remoto. Suelte el botón de configuración. La luz roja permanecerá encendida.
4. Ingrese el primer código de 4 dígitos que encerró en un círculo en el Paso 1. La luz roja se apagará.
5. Apunte el control remoto al televisor y pruebe los botones. Si no funcionan como esperaba, repita los pasos 2 a 4 con el siguiente código encerrado en un círculo.

Notas de programación

- Algunos códigos pueden operar solo unas pocas funciones del dispositivo, así que pruebe otros códigos para obtener acceso a más funcionalidades.
- Conserve los códigos de su dispositivo para referencia futura.

Declaración de la FCC

Declaración de conformidad de proveedores | Modelo #: SRP9383B/37 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

Este dispositivo cumple con la Parte 15 de las normas de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no podrá causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan causar un funcionamiento no deseado.

NOTA DE LA FCC: El fabricante no se responsabiliza por ninguna interferencia de radio o TV causada por modificaciones no autorizadas a este equipo. Tales modificaciones podrían anular el derecho del usuario a hacer uso del equipo.

NOTA: Este equipo se sometió a pruebas y cumple con los límites establecidos para un dispositivo digital Clase B de acuerdo con la Sección 15 de las Normas de la FCC. Dichos límites están diseñados para proporcionar una protección razonable contra la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se instala y usa de acuerdo con estas instrucciones, podría causar una interferencia perjudicial en las radiocomunicaciones. No obstante, no es posible garantizar que no ocurrirán interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, las cuales pueden comprobarse encendiendo y apagando el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas:

- Reoriente o reubique la antena receptora.
- Aumente la distancia entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado de radio/TV para obtener ayuda.

HECHO EN VIETNAM

Philips y el emblema de escudo Philips son marcas registradas de Koninklijke Philips N.V. y se usan bajo licencia. Este producto ha sido fabricado y se comercializa bajo responsabilidad de Jasco Products Company y Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 es el garante en relación a este producto. Este producto tiene una garantía de limitada de vida. Visite www.philips.com/support para conocer los detalles de la garantía.

¿Tiene preguntas? Comuníquese con nuestro servicio de atención al consumidor de EE. UU. al 1-844-816-0320, de lunes a viernes

PATENTES/PATENTES PENDIENTES
[WWW.BYJASCO.COM/PATENTS](https://www.byjasco.com/patents)