


STRAUTO™

RECHARGEABLE

THE UNIVERSAL INFLATOR

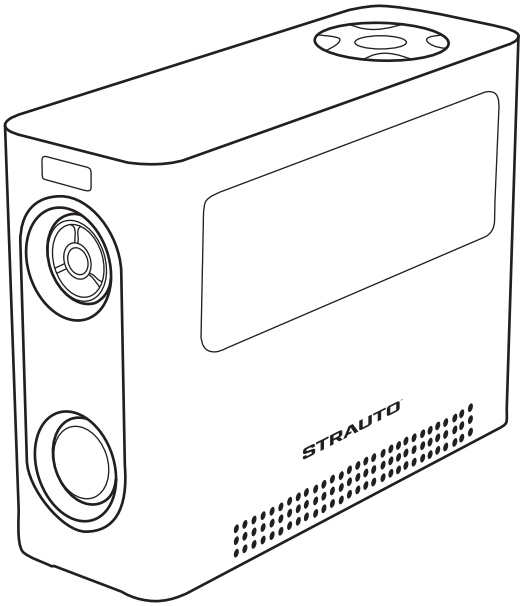

Model: 85737

SPECIFICATIONS

- Power: 12VDC/120W/10A
- USB-C input/output: PD 30W Max
- USB-C input/output: 5V-20V
- Battery pack: 11.1V, 2500mAh, 27.75W
- Battery: Lithium ion
- Air flow capacity: 300L/min (81.08ft³/min)
- Maximum pressure: 120PSI
- Hose length: Large — 35.5in./small — 21in.
- Battery pack charging ambient temperature: 0-45°C (32-113°F)
- Battery pack discharging ambient temperature: -10-60°C (14-140°F)

FEATURES

- Pressure measurement
- Rechargeable
- Continued use with 12V power cable even when battery is dead
- Automatic shut-off
- Quick inflation
- Automatic high-pressure and high-volume modes
- Built-in flashlight

CHARGING

- Note: Fully charge the inflator before the first use and every three months.
- Connect the USB-A end of the charging cable to a USB-C input/output: 5V-20V, PD 30W Max or larger power supply (not included). Plug in the other end of the cable to the USB-C port on the inflator.
 - When charging, the battery icon flashes. The icon changes from green to orange to red to indicate high, medium and low power, respectively.
 - To check battery strength, quickly press the power button once with the inflator turned off. The battery percentage displays on the screen. When the inflator is on, the battery icon changes from green to orange to red to indicate high, medium and low power, respectively.

12V POWER

- Insert the 12V power cable to your vehicle's cigarette lighter or 12V port. Connect the other end of the power cable to the inflator. The battery icon turns blue.
- The 12V connection provides continuous power but does not charge the battery. However, it can be used if the inflator battery is dead.

INFLATOR

- Verify the inflation requirements for your item to avoid overinflation.
- Connect the appropriate air hose to the top port of the air compressor. The large hose supports large items, like paddle boards, kayaks and air mattresses. For smaller items, like tires and balls, use the small hose. Attach the correct adapter to the hose and secure it to your device. Do not bend or block the hose.

Thank you for your purchase!

Instructions made easy



Read instructions or watch easy-to-follow video.
Scan code or visit:
byjasco.com/85630i.

Register your product



Get exclusive deals and register your product.
Scan code or visit:
byjasco.com/deals.



For more innovative products, visit **strauto.com**.




Like our product?
Leave a review on your favorite retailer website.



Having problems?
Let us know how we can help. Call **1-844-554-0229**, Monday-Friday

INFLATOR COMPONENTS

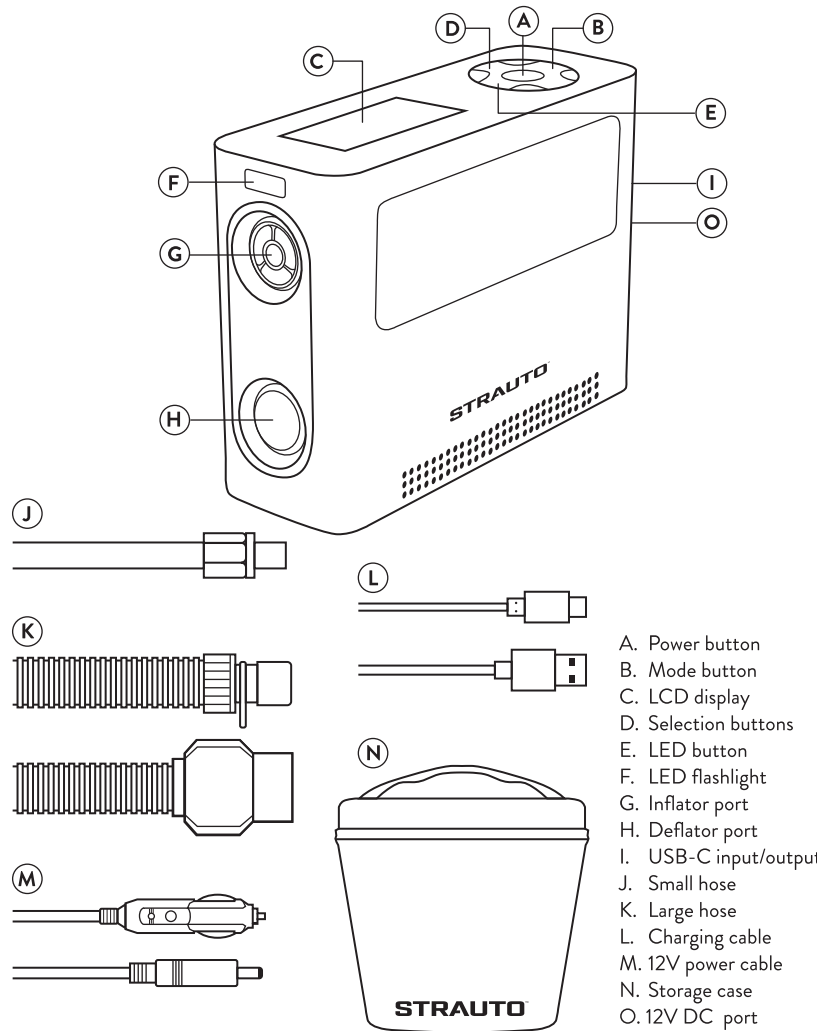

- A. Power button
- B. Mode button
- C. LCD display
- D. Selection buttons
- E. LED button
- F. LED flashlight
- G. Inflator port
- H. Deflator port
- I. USB-C input/output
- J. Small hose
- K. Large hose
- L. Charging cable
- M. 12V power cable
- N. Storage case
- O. 12V DC port

ADAPTERS

NAME	PURPOSE	NAME	PURPOSE
Schrader nozzle	Bikes, cars, motorcycles	Medium nozzle	Beds, air mattresses
Presta nozzle	Bikes — adapter for Schrader nozzle	Small nozzle	Kayaks
Plastic nozzle	Small toys, yoga balls	Short adapter	Stand-up paddle boards
Ball needle	Basketballs, footballs, soccer balls	Long adapter	Tents
Sharp nozzle	Swimming rings, yoga balls	Large nozzle	Kayaks, rafts, pools

PRESSURE SENSOR CALIBRATION

- The internal pressure sensor may need to be calibrated to 00.0 in high elevations and certain environmental conditions.
- Ensure no hoses are connected to the inflator.
 - Press the light button for five seconds.
 - The PSI, BAR and KPA icons flash and the screen displays 00.0 to indicate successful calibration.

CARE AND MAINTENANCE

- Cleaning: Wipe the exterior with a damp cloth to remove dust and dirt.
- Storage: Place the inflator in the provided storage bag when not in use.
- Check for damage: Regularly inspect the hose and power cord for any signs of wear or damage.
- Avoid overheating: Allow the inflator to cool between uses. Prolonged use may damage the unit.
- Battery maintenance: Charge the battery every three months even when the inflator is not used.
- Any other servicing should be performed by an authorized service representative or that the product has no user serviceable parts.

POWER CORD FUSE

- If the inflator does not work when the power cord is plugged into a working 12V socket and properly connected to the inflator, replace the fuse.
- Disconnect the power cord from the inflator and socket.
 - Twist the metal end cap of the 12V plug counterclockwise to remove. Note: The end cap is two pieces.
 - Carefully remove the fuse ensuring the spring under the fuse is not lost.
 - Install a new 6mm x 30mm 10A glass fuse.
 - Align the end cap with the 12V plug and turn it clockwise to install.

BATTERY DISPOSAL

The inflator contains a lithium-ion battery. Follow all applicable state and federal laws for battery disposal and recycling. **Do not dispose of the inflator in the garbage.**

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Inflator not working	Power connection is loose or not plugged in	Check and securely plug into the 12V outlet
Power cord not working	Bad fuse	Follow instructions under "power cord fuse" section to replace the fuse
Slow inflation	Hose not properly connected or air leak	Ensure hose is properly connected and check for leaks
Inaccurate pressure reading	Digital gauge needs recalibration	Calibrate the gauge according to the manual
Auto shut-off not activating	Incorrect preset pressure setting	Verify and set the desired pressure value
"Hot" indicator flashing	Continuous use without breaks	Allow the inflator to cool for 5-10 minutes until "hot" does not flash on-screen
Battery not charging	Poor connection or faulty charger	Check connections and try another power source
Excessive noise	Internal component issue or obstruction	Inspect for blockages and ensure all parts are secure
Low air flow	Blocked or damaged air hose	Clear any blockages or replace the hose

⚠ CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE TO RAIN. STORE INDOORS.

⚠ WARNING

- TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL.
- ONLY FOR HOUSEHOLD USE.
- ONLY THE INCLUDED 12V POWER CABLE IS APPROVED FOR USE.

⚠ WARNING

RISK OF ELECTRIC SHOCK

- TO REDUCE THE RISK OF INJURY, CLOSE SUPERVISION IS NECESSARY WHEN THE PRODUCT IS USED NEAR CHILDREN.
- DO NOT PUT FINGERS OR HANDS INSIDE OF THE PRODUCT.
- THIS PRODUCT INCLUDES SMALL ADAPTERS. KEEP CORDS, HOSES AND ADAPTERS OUT OF REACH OF CHILDREN.
- TO REDUCE THE RISK OF DAMAGE TO THE ELECTRIC PLUG AND CORD, PULL THE PLUG RATHER THAN THE CORD WHEN DISCONNECTING.
- DO NOT USE IF DAMAGED OR MODIFIED. A DAMAGED OR MODIFIED INFLATOR MAY EXHIBIT UNPREDICTABLE BEHAVIOR RESULTING IN FIRE, EXPLOSION OR RISK OF INJURY.
- DO NOT OPERATE WITH A DAMAGED CORD, PLUG OR CABLE.
- DO NOT DISASSEMBLE. INCORRECT REASSEMBLY MAY RESULT IN A RISK OF FIRE OR PHYSICAL HARM.
- STORE INDOORS WHEN NOT IN USE. THIS DEVICE IS INTENDED FOR TEMPORARY USE OUTDOORS, AND REASONABLE CARE SHOULD BE EXERCISED IN DAMP OR WET CONDITIONS.
- DO NOT STORE OR USE IN AREAS EXCEEDING TEMPERATURES 60°C (140°F). AVOID PROLONGED EXPOSURE TO DIRECT SUNLIGHT.
- CHARGE THE INFLATOR WITHIN THE TEMPERATURE RANGE OF 5-45°C (41-113°F).
- DO NOT EXPOSE THE INFLATOR TO EXTREME HEAT, FIRE OR RAIN.
- DO NOT SUBMERGE THE INFLATOR. CLEAN WITH A SOFT DAMP CLOTH ONLY.
- DO NOT DROP THE INFLATOR. IF THE INFLATOR RECEIVES A SHARP BLOW OR IS OTHERWISE DAMAGED, DISCONTINUE USE.
- ALLOW THE UNIT TO COMPLETELY COOL BEFORE DISCONNECTING HOSES.
- DO NOT OPERATE IN A CONFINED ENVIRONMENT. PROVIDE ADEQUATE VENTILATION DURING USE AND REFRAIN FROM PLACING ITEMS ON OR AROUND THE PRODUCT DURING OPERATION.
- THE INFLATOR CAN CREATE LOUD NOISES DURING OPERATION. ALWAYS MAINTAIN A SAFE DISTANCE FROM THE UNIT WHEN OPERATING.
- DO NOT ATTEMPT TO USE THE INFLATOR TO VACUUM DIRT, WATER OR ANY MATERIALS. THE INLET PORT SHOULD ONLY BE USED FOR AIR. DON'T START THE INFLATOR WITH THE INLET PORT IN CONTACT WITH DUST OR WATER.
- DO NOT OPERATE NEAR FLAMMABLE LIQUIDS OR IN GASEOUS OR EXPLOSIVE ATMOSPHERES. MOTORS NORMALLY SPARK, AND THE SPARKS MIGHT IGNITE FUMES.
- THE AIR FROM YOUR INFLATOR IS NOT SAFE FOR BREATHING. NEVER INHALE AIR FROM YOUR INFLATOR OR FROM A BREATHING DEVICE CONNECTED TO THE INFLATOR.
- DO NOT LEAVE THE INFLATOR RUNNING UNATTENDED. OVER INFLATION COULD RESULT IN SERIOUS INJURY AND PROPERTY DAMAGE. CONSULT INFLATED ITEMS MANUFACTURER'S INSTRUCTIONS FOR PROPER INFLATION LEVELS.
- NEVER CARRY THE INFLATOR BY THE HOSES OR CHARGING CORDS.
- THE CHARGER AND INFLATOR MAY BECOME WARM TO TOUCH WHILE CHARGING. THIS IS A NORMAL CONDITION AND DOES NOT INDICATE A PROBLEM.
- THE VIBRATION PRODUCED BY THE INFLATOR MAY CAUSE IT TO MOVE. DO NOT OPERATE ON A HIGH SHELF OR OTHER SURFACE.
- DO NOT INCINERATE THE BATTERY EVEN IF IT IS SEVERELY DAMAGED OR IS COMPLETELY WORN OUT. CHECK WITH LOCAL CODES FOR POSSIBLE SPECIAL DISPOSAL INSTRUCTIONS.
- IN THE EVENT OF BATTERY LEAKING, DO NOT ALLOW THE LIQUID TO CONTACT SKIN OR EYES. IF CONTACT IS MADE, WASH THE AFFECTED AREA WITH GENEROUS AMOUNTS OF WATER AND SEEK MEDICAL ADVICE OR ATTENTION.

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.

Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.

For the USB input, use only with Listed/Certified Information Technology (Computer) Equipment or ITE Power Supply or Listed Class 2 Power Unit, do not use unapproved sources.

FCC STATEMENT

Suppliers Declaration of Conformity | Model # 85737 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

This device complies with Part 15 of the FCC and ISED license-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important note: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

CAN ICES-3(B)/NMB-3(B)

PRESET ICONS

SUV	CAR	BIKE	SUP
DEFAULT AIR PRESSURE	36PSI	30PSI	45PSI
ADJUSTMENT RANGE	26-50.5PSI	26-50.5PSI	20-120PSI

BALL	KAYAK	INFLATABLE	MANUAL
DEFAULT AIR PRESSURE	8PSI	0.5PSI	0.5PSI
ADJUSTMENT RANGE	4-16PSI	0.5-20PSI	0.5-1.0PSI

DEFLATE Attach the hose to the bottom port marked "deflate" to remove air from your device.

DEFAULT DUTY CYCLE RATE:
High pressure (TIRE): 7 mins ON, 5 mins OFF. Low pressure (SUP): 15mins ON, 5 mins OFF


PATENTS/PATENTS PENDING WWW.BYJASCO.COM/PATENTS
MADE IN CHINA
Distributed by Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, OK 73114.
Register on strauto.com for your 3-year limited warranty.
Questions? Contact our U.S.-based Consumer Care at 1-844-554-0229, M-F.
©JASCO 2025 | 85737 | 11/14/24 v1

100% recyclable
Separate paper from plastic before recycling
byjasco.com/recycle
paper made from 25% post consumer waste

STRAUTO™

RECARGABLE

EL INFLADOR UNIVERSAL

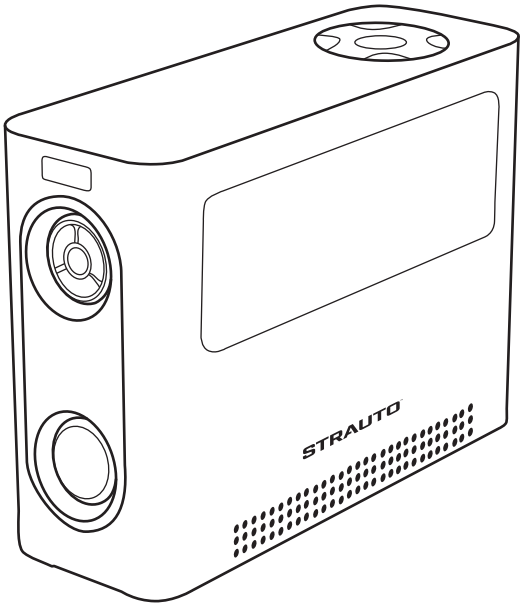

Model: 85737

ESPECIFICACIONES

- Potencia: 12 V de CC/120 W/10 A
- Entrada/salida USB-C: PD 30W Max
- USB-C entrada/salida: 5V-20V
- Paquete de baterías: 11,1 V, 2500 mAh, 27,75 W
- Batería: Ion de litio
- Capacidad de flujo de aire: 300L/min (81.08ft³ /min)
- Presión máxima: 120 PSI
- Longitud de la manguera: Grande: 35,5 pulgadas/pequeño: 21 pulgadas.
- Temperatura ambiente de carga del paquete de baterías: 0-45 °C (32-113 °F)
- Temperatura ambiente de descarga del paquete de baterías temperatura: -10-60°C (14-140°F)

CARACTERÍSTICAS

- Medición de presión
- Recargable
- Uso continuo con cable de alimentación de 12 V incluso cuando la batería está agotada
- Apagado automático
- Inflado rápido
- Modos automáticos de alta presión y alto volumen
- Linterna incorporada

CARGA

- Nota: Cargue completamente el inflador antes del primer uso y cada tres meses.
1. Conecte el extremo USB-A del cable de carga a una fuente de alimentación de USB-C entrada/salida: 5V-20V, PD 30W Max o mayor (no provisto). Conecte el otro extremo del cable al puerto USB-C del inflador.
 2. Durante la carga, el icono de la batería parpadea. El icono cambia de verde a naranja y a rojo para indicar alta, media y baja potencia, respectivamente.
 3. Para comprobar la carga de la batería, presione rápidamente el botón de encendido una vez con el inflador apagado. El porcentaje de batería se muestra en la pantalla. Cuando el inflador está encendido, el icono de la batería cambia de verde a naranja y a rojo para indicar potencia alta, media y baja, respectivamente.

ALIMENTACIÓN DE 12 V

1. Inserte el cable de alimentación de 12 V en el encendedor de cigarrillos o en el puerto de 12 V de su vehículo. Conecte el otro extremo del cable de alimentación al inflador. El icono de la batería se vuelve azul.
2. La conexión de 12 V proporciona alimentación continua, pero no carga la batería. Sin embargo, puede utilizarse si la batería del inflador está agotada.

INFLADOR

Verifique los requisitos de inflado de su artículo para evitar el sobreinflado.

1. Conecte la manguera de aire adecuada al puerto superior del compresor de aire. La manguera grande admite artículos grandes, como tablas de remo, kayaks y colchones inflables. Para artículos más pequeños, como neumáticos y pelotas, use la manguera pequeña. Conecte el adaptador correcto a la manguera y fíjelo a su dispositivo. No doble ni bloquee la manguera.

¡Gracias por su compra!

Instrucciones fáciles



Lea las instrucciones o mire el video con el paso a paso.
Escanee el código o visite:
byjasco.com/85630i.

Registre su producto



Obtenga ofertas exclusivas y registre su producto.
Escanee el código o visite:
byjasco.com/deals.



Para conocer más productos innovadores, **visite strauto.com**.




¿Le gusta nuestro producto?
Déjenos una reseña en el sitio web de su comercio favorito.



¿Tiene algún problema?
Díganos cómo podemos ayudar. Llama al **1-844-554-0229**, de lunes a viernes

COMPONENTES DEL INFLADOR

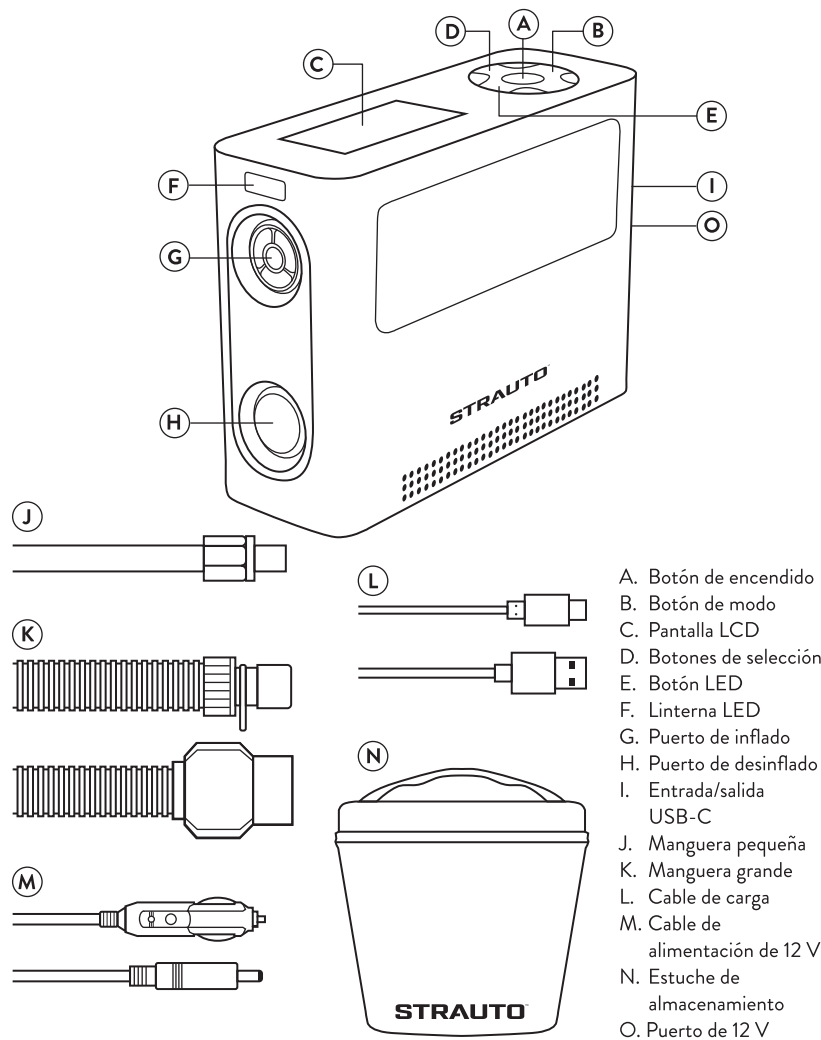

- A. Botón de encendido
- B. Botón de modo
- C. Pantalla LCD
- D. Botones de selección
- E. Botón LED
- F. Linterna LED
- G. Puerto de inflado
- H. Puerto de desinflado
- I. Entrada/salida USB-C
- J. Manguera pequeña
- K. Manguera grande
- L. Cable de carga
- M. Cable de alimentación de 12 V
- N. Estuche de almacenamiento
- O. Puerto de 12 V

CALIBRACIÓN DEL SENSOR DE PRESIÓN

- Es posible que deba calibrar el sensor de presión interna a 00,0 en altitudes elevadas y en determinadas condiciones ambientales.
1. Asegúrese de que no haya mangueras conectadas al inflador.
 2. Presione el botón de luz durante cinco segundos.
 3. Los iconos PSI, BAR y KPA parpadean y la pantalla muestra 00.0 para indicar Calibración exitosa.

CUIDADO Y MANTENIMIENTO

- Limpieza: Limpie el exterior con un paño húmedo para eliminar el polvo y la suciedad.
- Almacenamiento: Coloque el inflador en la bolsa de almacenamiento provista cuando no esté en uso.
- Compruebe si hay daños: Inspeccione periódicamente la manguera y el cable de alimentación para detectar signos de desgaste o daños.
- Evite el sobrecalentamiento: Deje que el inflador se enfríe entre usos. El uso prolongado puede dañar la unidad.
- Mantenimiento de la batería: Cargue la batería cada tres meses incluso cuando no se se el inflador.
- Cualquier otro servicio debe ser realizado por un representante de servicio autorizado o que el producto no tiene partes reparables por el usuario.

FUSIBLE DEL CABLE DE ALIMENTACIÓN

- Si el inflador no funciona cuando el cable de alimentación está enchufado a un tomacorriente de 12 V que funcione y conectado correctamente al inflador, reemplace el fusible.
1. Desconecte el cable de alimentación del inflador y del enchufe.
 2. Gire la tapa metálica del extremo del enchufe de 12 V en sentido antihorario para quitarlo. Nota: La tapa del extremo consta de dos piezas.
 3. Retire con cuidado el fusible asegurándose de no perder el resorte debajo del mismo.
 4. Instale un nuevo fusible de vidrio de 6 mm x 30 mm y 10 A.
 5. Alinee la tapa del extremo con el enchufe de 12 V y gírela en el sentido de las agujas del reloj para instalarla.

ELIMINACIÓN DE LA BATERÍA

El inflador contiene una batería de iones de litio. Siga todas las leyes estatales y federales aplicables para la eliminación y el reciclaje de baterías. **No deseché el inflador en la basura.**

DECLARACIÓN DE LA FCC

Declaración de conformidad de proveedores | Modelo n.º 85737 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

Este dispositivo cumple con la Parte 15 de los estándares RSS exentos de licencia de la FCC y ISED. La operación está sujeta a las dos condiciones siguientes: (1) este dispositivo no puede causar interferencias dañinas, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluida aquella que pueda causar un funcionamiento no deseado.

NOTA DE LA FCC: El fabricante no es responsable de ninguna interferencia de radio o TV causada por modificaciones no autorizadas a este equipo. Tales modificaciones podrían anular la autoridad del usuario para operar el equipo.

NOTA: Este equipo ha sido probado y se ha determinado que cumple con los límites para un dispositivo digital de Clase B, de conformidad con la Parte 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se instala y usa de acuerdo con las instrucciones, puede causar interferencias dañinas en las comunicaciones por radio. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias dañinas en la recepción de radio o televisión, lo cual se puede determinar encendiendo y apagando el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas:

- Cambiar la orientación o ubicación de la antena receptora.
- Aumentar la distancia entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente de un circuito diferente de aquel al que está conectado el receptor.
- Consulte al distribuidor o a un técnico de radio/TV experimentado para obtener ayuda.

Nota importante: En cumplimiento de los requisitos de exposición a RF de la FCC, se prohíbe cualquier cambio en la antena o en el dispositivo. Cualquier cambio en la antena o en el dispositivo podría provocar que el dispositivo exceda los requisitos de exposición a RF y anular la autoridad del usuario para operar el dispositivo.

CAN ICES-3(B)/NMB-3(B)

ADAPTADORES

NOMBRE	PROPÓSITO	NOMBRE	PROPÓSITO
Boquilla Schrader	Bicicletas; coches; motos	Boquilla mediana	Camas, colchones de aire
Boquilla Presta	Bicicletas: adaptador para boquilla Schrader	Boquilla pequeña	Kayaks
Boquilla de plástico	Pequeños juguetes; pelotas de yoga	Adaptador corto	Tablas de paddle surf
Aguja para inflar balones	Balones de baloncesto, balones de fútbol americano y balones de fútbol	Adaptador largo	Tiendas de campaña
Boquilla puntiaguda	Anillos de natación, pelotas de yoga	Boquilla grande	Kayaks, balsas, piscinas

SOLUCIÓN DE PROBLEMAS

PROBLEMA	POSIBLE CAUSA	SOLUCIÓN
El inflador no funciona	La conexión de alimentación está suelta o no está enchufada	Verifique y conecte de forma segura a la toma de 12 V
El cable de alimentación no funciona	Fusible defectuoso	Siga las instrucciones de la sección "fusible del cable de alimentación" para reemplazar el fusible.
Inflado lento	Manguera no conectada correctamente o fuga de aire	Asegúrese de que la manguera esté conectada correctamente y verifique que no haya fugas.
Lectura de presión inexacta	El medidor digital necesita recalibración	Calibre el medidor de acuerdo con el manual
El apagado automático no se activa	Ajuste de presión preestablecido incorrecto	Verifique y establezca el valor de presión deseado
El indicador "Caliente" parpadea	Uso continuo sin interrupciones	Deje que el inflador se enfríe durante 5 a 10 minutos hasta que la palabra "caliente" no parpadee en la pantalla.
La batería no se carga	Mala conexión o cargador defectuoso	Verifique las conexiones y pruebe con otra fuente de alimentación.
Ruido excesivo	Problema u obstrucción de componentes internos	Inspeccione si hay bloqueos y asegúrese de que todas las piezas estén seguras.
Flujo de aire bajo	Manguera de aire bloqueada o dañada	Limpie cualquier obstrucción o reemplace la manguera.

ICONOS PREESTABLECIDOS

	SUV	AUTOMÓVIL	BICICLETA	TABLA DE PADDLE SURF
PRESIÓN DE AIRE PREDETERMINADA	36PSI	30PSI	45PSI	12PSI
RANGO DE AJUSTE	26-50.5PSI	26-50.5PSI	20-120PSI	1.5-22PSI
	PELOTA	KAYAK	INFLABLE	MANUAL
PRESIÓN DE AIRE PREDETERMINADA	8PSI	0.5PSI	0.5PSI	35PSI
RANGO DE AJUSTE	4-16PSI	0.5-20PSI	0.5-1.0PSI	20-120PSI



DESINFLAR Conecte la manguera al puerto inferior marcado "desinflar" para eliminar el aire de su dispositivo.

TASA DE CICLO DE TRABAJO POR DEFECTO:
Alta presión (NEUMÁTICO): 7 minutos EN, 5 minutos OFF. Baja presión (TABLA DE PADDLE SURF): 15 minutos EN, 5 minutos OFF

PATENTES/PATENTES PENDIENTES [WWW.BYJASCO.COM/PATENTS](https://www.byjasco.com/patents)
HECHO EN CHINA
Distribuido por Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, OK 73114.
Regístrese en strauto.com para obtener su garantía limitada de 3 años.
¿Preguntas? Comuníquese con nuestro servicio de atención al consumidor con sede en EE. UU. al 1-844-554-0229, de lunes a viernes.
©JASCO 2025 | 85737 | 11/14/24 v1

