



This product and its sellers are not affiliated with Roku®. There is no endorsement or sponsorship by non-affiliated brands provided or implied. All brand names and products listed/shown are trademarks of their respective owners.

See reverse for easy-to-follow instructions and exclusive deals.

Thank you for your purchase!




Product instructions made easy

Scan to watch a step-by-step instructional video or visit byjasco.com/54465i




Register your Philips product

Get exclusive, web-only deals and more! Scan here or visit byjasco.com/deals



Need more remote control devices?
For additional Philips remote controls, visit our website! byjasco.com/remotes

 Like our product?
Leave a review on your favorite retailer website or amazon.com

 Having problems?
Let us know how we can help. Call 1-844-816-0320 between 7AM-8PM, M-F, Central Time.

Setup

Preprogrammed for immediate use with your Roku box, simply insert two (2) AA batteries (not included) and you're ready to stream your favorite shows. Alkaline batteries are recommended for this remote.

Battery Installation


1. Press and slide battery cover downward to remove.
2. Insert the batteries, making sure to match the (+) (-) polarity inside the compartment.
3. Slide battery cover back into place.

Note: If your remote is not operating properly, replace the batteries with new ones.

Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Button Functions

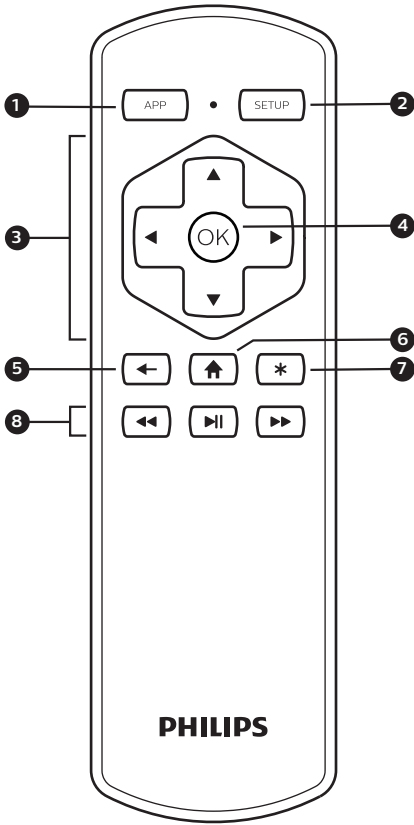

1. **App** – Access top apps like Netflix, Amazon Prime, Hulu and more
2. **Setup** – Used to program the remote
3. **Up/down/left/right** menu navigation
4. **OK** – Selects menu items
5. **Back** – Returns to previous menu/screen
6. **Home** – Returns to the home screen to access streaming features
7. **Options (*)** - Displays additional options
8. **Rewind, play/pause, fast forward**

Troubleshooting

Remote does not operate your device

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device and make sure there are no obstructions between the remote and the device.
- Remote may not be compatible with your device.


Reset to Factory Settings

1. Press and hold **SETUP** until the red light stays on.
2. Press the **REWIND** button 4 times. The red light will blink twice.

MADE IN CHINA

The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license. This product has been manufactured and is sold under the responsibility of Jasco Products Company, and Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 is the warrantor in relation to this product. This product comes with a 90-day warranty. Visit www.philips.com/support for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320 between 7AM-8PM, M-F, Central Time.

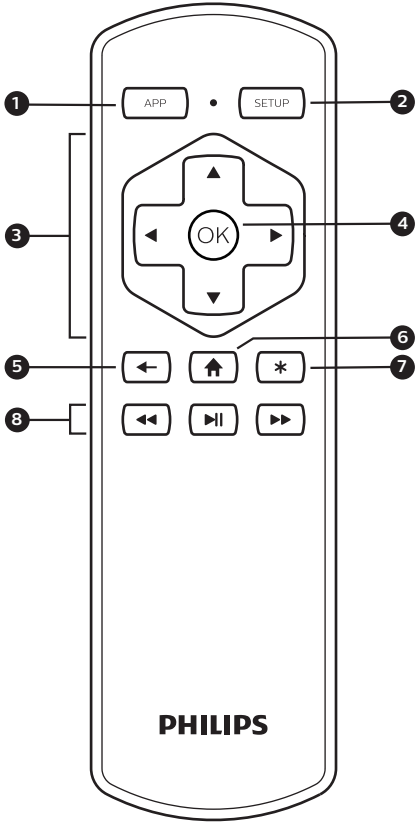FCC Statement		Preparación	Funciones de los Botones
Suppliers Declaration of Conformity Model #: SRP6120R/27 Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.bjjasco.com This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. ICES-3(B)/NMB-3(B).		Preprogramado para uso inmediato con su caja Roku, simplemente inserte dos (2) pilas AA (no incluidas) y estará listo para transmitir sus programas favoritos. Se recomiendan pilas alcalinas para este control remoto. Instalación de las pilas 1. Presione y deslice la tapa de las pilas hacia abajo para retirarla. 2. Inserte las pilas asegurándose de que coincidan con la polaridad (+) (-) dentro del compartimiento. 3. Vuelva a colocar la tapa del compartimiento de las pilas. Nota: Si su control remoto no funciona correctamente, reemplace las pilas por otras nuevas. Precauciones con las pilas • No coloque pilas nuevas con pilas viejas. • No mezcle pilas alcalinas, estándar (carbón-zinc) o recargables (Ni-Cd, Ni-MH, etc.). • Retire siempre las baterías viejas, con poca carga o agotadas de inmediato y recíclelas o deséchelas de acuerdo con las reglamentaciones locales y nacionales.	 1. APP button 2. SETUP button 3. Battery cover 4. Directional pad (Up, Down, Left, Right) and OK button 5. Previous button (left arrow) 6. Home button (house icon) 7. Star/Options button (*) 8. Playback buttons (Previous, Play/Pause, Next) PHILIPS
Declaración de la FCC		Solución de Problemas	
Declaración de conformidad de proveedores Modelo #: SRP6120R/27 Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.bjjasco.com Este dispositivo cumple con la Parte 15 de las normas de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no podrá causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan causar un funcionamiento no deseado. NOTA DE LA FCC: El fabricante no se responsabiliza por ninguna interferencia de radio o TV causada por modificaciones no autorizadas a este equipo. Tales modificaciones podrían anular el derecho del usuario a hacer uso del equipo. NOTA: Este equipo se sometió a pruebas y cumple con los límites establecidos para un dispositivo digital Clase B de acuerdo con la Sección 15 de las Normas de la FCC. Dichos límites están diseñados para proporcionar una protección razonable contra la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se instala y usa de acuerdo con estas instrucciones, podría causar una interferencia perjudicial en las radiocomunicaciones. No obstante, no es posible garantizar que no ocurrirán interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, las cuales pueden comprobarse encendiendo y apagando el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas: • Reoriente o reubique la antena receptora. • Aumente la distancia entre el equipo y el receptor. • Conecte el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor. • Consulte al distribuidor o a un técnico experimentado de radio/TV para obtener ayuda. ICES-3(B)/NMB-3(B).		El control remoto no opera su dispositivo • Asegúrese de que las pilas sean nuevas y estén instaladas correctamente. • Apunte el control remoto directamente a su dispositivo y asegúrese de que no haya obstrucciones entre el control remoto y el dispositivo. • El control remoto puede no ser compatible con su dispositivo.	
		Restablecer a la Configuración de Fábrica	
		1. Mantenga presionado SETUP hasta que la luz roja se mantenga encendida. 2. Presione el botón RETROCEDER 4 veces. La luz roja parpadeará dos veces.	
			1. App – Accede a las principales aplicaciones como Netflix, Amazon Prime, Hulu y más 2. Setup – Se usa para programar el control remoto 3. Flechas arriba, abajo, izquierda, derecha – Navegación del menú 4. OK – Navegación del menú 5. Volver – Vuelve a la pantalla o al menú anterior 6. Inicio – Vuelve a la pantalla de inicio para acceder a las funciones de transmisión 7. Opciones (*) – Muestra opciones adicionales 8. Retroceder, reproducir/pausa, avanzar rápido
			HECHO EN CHINA Philips y el emblema de escudo Philips son marcas registradas de Koninklijke Philips N.V. y se usan bajo licencia. Este producto ha sido fabricado y se comercializa bajo responsabilidad de Jasco Products Company y Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114, es el garante en relación a este producto. Este producto tiene una garantía limitada de 90 días. Visite www.philips.com/support para conocer los detalles de la garantía. ¿Tiene preguntas? Comuníquese al 1-844-816-0320 entre las 7 a. m. y las 8 p. m. CT (heure central).