


# Enlighten™ Color-Changing HD Antenna User Manual




## 1. Connect

Connect the Micro USB cable to the antenna bracket and insert the USB-A connector into the TV's USB-A port or a USB-A power adapter (not included).  
Connect the antenna's coax cable to the TV.

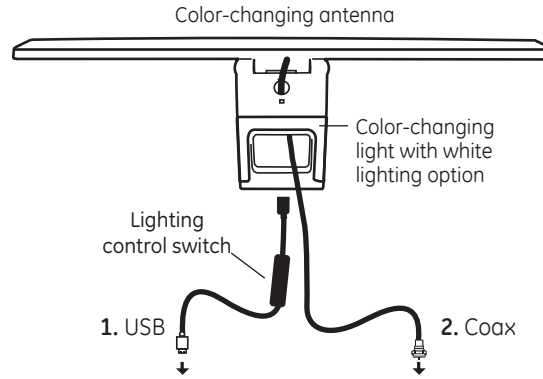


Use provided hook-and-loop tape to place lighting control switch in desired location.

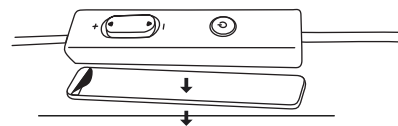


## 2. Place

Place the antenna on top of a TV located 6in. to 18in. from the wall.

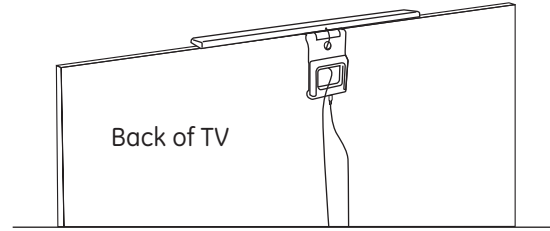

Best TV placement for enhanced viewing when using the lighting feature

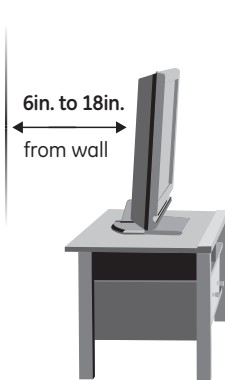


Tilt and full-motion TV mounts



Lighting feature does not work with fixed- or flush-mounted TVs

## 3. Scan

Perform TV channel scan.

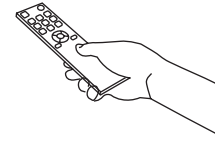

1. Open the TV's *setup* or *settings* menu.
2. Select *scan*, *auto tune*, *channel search* or *channel scan*, making sure it's set to scan for over-the-air channels rather than cable.
3. Wait for the TV to complete the channel scan.

**Tip 1:** Consult the TV manual or contact the TV's manufacturer for detailed instructions.

**Tip 2:** Rescan for over-the-air channels anytime you move the antenna.

## Helpful Antenna Tips


**Maximize the number of channels** by running a TV channel scan after installation and anytime you relocate your TV. Refer to your TV's instruction manual, if necessary.

**Position** the antenna on top of the TV for best performance.

**Visit** [www.antennaweb.org](http://www.antennaweb.org) to determine the available television stations and broadcast tower locations in your area.

## 4. Ambient and Bias Lighting Operation

To operate the lighting feature, simply use the inline switch.

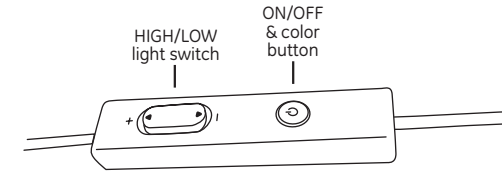

1. **Turn on** – Press button.
2. **Lighting options** – Press and release button to cycle through each option: white, yellow, aqua, blue, green, purple, red, fast strobe through all colors or slow fade through all colors.
3. **Select light level** – Use +/- switch to adjust brightness level.
4. **Turn off** – Press and hold button for 3 seconds.

**NOTE:** Memory function remembers last light setting before being turned off.

**QUESTIONS? ISSUES?**  
CALL OUR U.S.-BASED EXPERTS AT  
**1-800-654-8483**

57284 V2 7/21  
MADE IN CHINA

GE is a trademark of General Electric Company and is under license by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product comes with a limited-lifetime warranty. Visit [www.byjasco.com](http://www.byjasco.com) for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-800-654-8483 between 7AM-8PM, M-F, Central Time.



Thank you for your purchase!

Instructions made easy



Read instructions or watch easy-to-follow video.  
Scan code or visit [byjasco.com/57284i](http://byjasco.com/57284i)



**Exclusive deals**

For deals, to register your purchase and to tell us how we're doing, simply scan the code or visit [byjasco.com/deals](http://byjasco.com/deals)



Enhance your home entertainment experience at [byjasco.com/ce](http://byjasco.com/ce)



Like our product? Leave a review on your favorite retailer website or amazon.com



Having problems? Let us know how we can help. Call 1-800-654-8483 between 7AM-8PM, M-F, Central Time.

**SCAN CHANNELS**

**YOU MUST PERFORM A CHANNEL SCAN AFTER INSTALLATION.** PLEASE REFER TO YOUR TV MANUAL FOR SCAN INSTRUCTIONS OR CALL TV MANUFACTURER.

**CALL**

Please call before returning to store

Questions? Contact our U.S.-based Consumer Care at 1-800-654-8483 between 7AM-8PM, M-F, Central Time.

See reverse for easy-to-follow instructions and exclusive deals.


# Enlighten™ Antena HD que cambia de color Manual del usuario




## 1. Conectar

Conecte el cable Micro USB al soporte de la antena y luego inserte el conector USB-A en el puerto USB-A del televisor o en un adaptador de corriente USB-A (no incluido).

Conecte el cable coaxial de la antena al televisor.

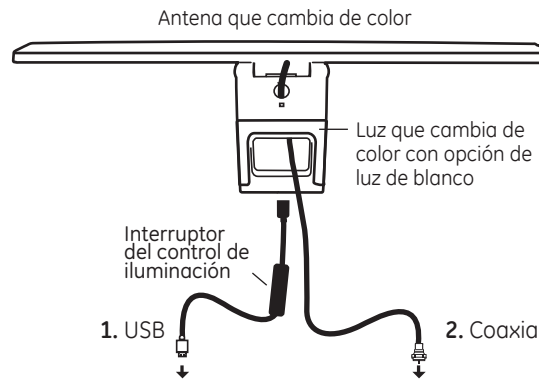


Use las cintas de gancho y bucle provistas para colocar el interruptor de control de la luz en el lugar que desee.

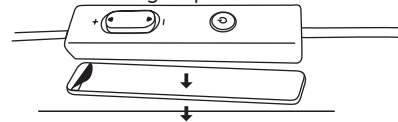


## 2. Colocar

Coloque la antena sobre un televisor ubicado de 15cm a 46cm de la pared.

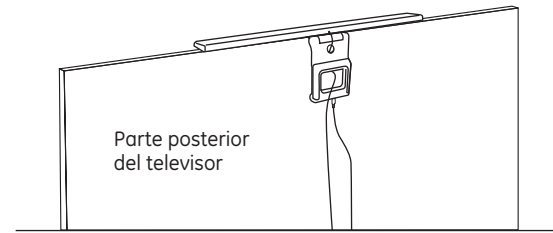

Mejor ubicación del televisor para una visualización optimizada cuando se usa la función de iluminación

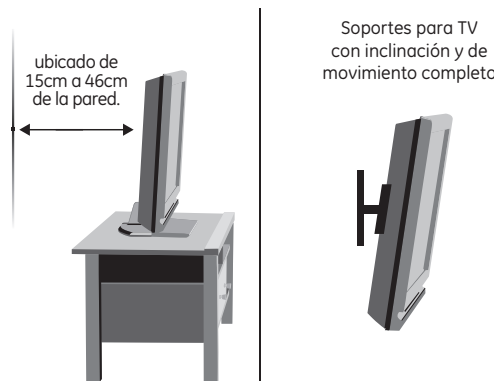

## 3. Buscar

Realice una búsqueda de canales de TV.



1. Abra el menú de *configuración o ajustes* del televisor.
2. Seleccione *buscar, sintonización automática, búsqueda de canales o exploración de canales*, asegurándose de que esté configurado para buscar canales de señal abierta en lugar de los de cable.
3. Espere que el televisor complete la búsqueda de

**Consejo 1:** Consulte el manual del televisor o comuníquese con el fabricante del televisor para obtener instrucciones detalladas.

**Consejo 2:** Vuelva a realizar una búsqueda de canales de señal abierta cada vez que mueva la antena.

### Consejos útiles con respecto a la antena


Maximice la cantidad de canales ejecutando una búsqueda de canales de TV después de la instalación y cada vez que cambie de lugar su televisor. Consulte el manual de instrucciones de su televisor, si es necesario.

Coloque la antena sobre el televisor para obtener el mejor rendimiento.

Visite [www.antennaweb.org](http://www.antennaweb.org) para determinar las emisoras de televisión disponibles y la ubicación de las torres de transmisión en su área.

## 4. Operación de la luz de ambiente y Bias

Para operar la función de luz, simplemente use el interruptor cableado.

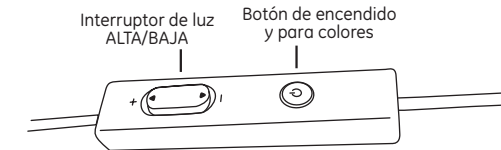

1. **Encendido.** Presione el botón.
2. **Opciones de iluminación.** Presione y suelte el botón para desplazarse por cada una de las opciones: blanco, amarillo, verde agua, azul, verde, morado o rojo; alterne de manera intermitente entre todos los colores o desplácese lentamente por todos ellos.
3. **Seleccione el nivel de iluminación.** Use el interruptor +/- para ajustar el nivel de brillo.
4. **Apagado.** Mantenga presionado el botón durante 3 segundos.

**NOTA:** La función de memoria recuerda el último ajuste de iluminación antes del apagado.

**¿PREGUNTAS? ¿PROBLEMAS?  
CONTACTE CON NUESTROS  
EXPERTOS AL  
1-800-654-8483**

CÓMO  
BUSCAR  
CANALES

DEBE REALIZAR UNA  
BÚSQUEDA DE CANALES  
DESPUÉS DE LA INSTALACIÓN.

LLAMADA

Llame antes de  
devolver a la tienda

¿Tiene preguntas? Comuníquese con nuestro Servicio al consumidor con sede en EE. UU. al **1-800-654-8483** entre las 7 a. m. y las 8 p. m., hora del centro.

HECHO EN CHINA  
Distribuido por Jasco Products Company LLC,  
10 E. Memorial Rd., Oklahoma City, Oklahoma 73114.  
Este producto de Jasco tiene una garantía de por vida limitada.  
Visite [www.byjasco.com](http://www.byjasco.com) para conocer los detalles de la garantía.  
¿Preguntas? Comuníquese al 1-800-654-8483 entre las  
7 a. m. y las 8 p. m. CT (hora del centro).