

Luz de seguridad de triple cabezal con detección de movimiento

PILAS:

Funciona con 4 pilas D, no incluidas. Cuando las reemplace, no coloque pilas nuevas con pilas viejas.

1. Destrabe cada pinza y retire la cubierta trasera/el soporte de montaje.
2. Inserte las pilas, teniendo en cuenta los polos.
3. Asegúrese de que la cinta esté presente para retirar fácilmente la pila inferior y reemplazar las pilas del mismo modo en el futuro.

INSTALACIÓN

Monte la luz de seguridad en paredes o aleros. Para obtener el mejor rendimiento, instale a 2,4 m (8 pies) sobre el nivel del suelo como mínimo. Asegúrese de que el área de montaje esté seca y limpia de residuos.

1. Sostenga la cubierta trasera/el soporte de montaje en su lugar y marque la ubicación de cada tornillo o use la plantilla incluida.
2. Taladre orificios piloto con una broca de 3/16".
3. Inserte los tacos incluidos.
4. Instale la cubierta trasera/el soporte de montaje con los tornillos incluidos y un destornillador Phillips n.º 1; no apriete demasiado.
5. Vuelva a colocar la luz de seguridad en el soporte de montaje, asegurándose de que las pinzas encajen en su lugar.

PROYECTOR O REFLECTOR

Coloque o retire las lentes esmeriladas incluidas sobre cada cabezal para alternar entre los modos de reflector y proyector.

Proyector - Cuando desea una luz más brillante

- Sin las lentes colocadas, la luz brilla en un área concentrada.
- Cuando retire la lente, use suavemente un destornillador de plano para sacarla de su lugar.

Reflector - Cuando desea una luz más difusa

- Con la lente colocada, la luz difusa brilla en un área más amplia.
- Al colocar la lente, asegúrese de que los orificios de la lente estén en el costado de la lámpara y que encaje firmemente en su lugar.

OPERACIÓN

Sensor de movimiento

La luz se enciende en condiciones de poca luz cuando se detecta movimiento y se apaga cuando ya no se detecta movimiento.

- Alcance de 7,62 m (25 pies), campo de 180°
- Gire el sensor hacia la izquierda y hacia la derecha para dirigirlo hacia donde necesita la mayor cobertura.

Interruptor de tiempo de espera

Use el interruptor en la base de la luz para seleccionar cuándo se debe APAGAR la luz después de que no se detecte movimiento.

- Brillo total: 100 % durante 20 o 40 segundos
- ECO brillo: 50% durante 30 o 60 segundos

Botón de aprendizaje

Según los niveles de luz circundante, personalice cuándo estará activo el sensor de movimiento.

- Presione el botón durante 3 segundos cuando los niveles de luz ambiental alcancen su nivel preferido, por ejemplo, justo antes del atardecer. La luz parpadeará para indicar que se estableció el nuevo programa.
- Los sensores de movimiento se activarán automáticamente cuando se alcance un nivel de luz similar.
- Para restablecer la configuración predeterminada de fábrica, mantenga presionado el botón durante 10 segundos.

Energizer®



Motion-Sensing Triple Head Security Light

HECHO EN CHINA

Distribuido por Jasco Products Company LLC,
10 E Memorial Rd., Oklahoma City, Oklahoma 73114.

Este producto de Jasco tiene una garantía de por vida limitada. Visite www.bjjasco.com para conocer los detalles de la garantía.

¿Preguntas? Comuníquese al 1-800-654-8483 entre las 7AM y las 8PM CST (hora central estándar).

⚠ ADVERTENCIA

- LAS BATERÍAS PUEDEN DERRAMAR LÍQUIDOS NOCIVOS O MATERIALES INFLAMABLES O ESTALLAR CAUSANDO LESIONES Y DAÑOS AL PRODUCTO.
- REEMPLACE TODAS LAS BATERÍAS AL MISMO TIEMPO.
- REEMPLACE LAS BATERÍAS TOTALMENTE DESCARGADAS INMEDIATAMENTE.
- QUITÉ LAS BATERÍAS SI EL DISPOSITIVO NO VA A SER UTILIZADO POR UN TIEMPO LARGO.
- NO SUMERGIR EN AGUA.
- LIMPIAR SOLAMENTE CON UN PAÑO SUAVE Y HÚMEDO.

See reverse for easy-to-follow instructions and exclusive deals.

Thank you for your purchase!

Instructions made easy



Read instructions or watch easy-to-follow video.

Scan code or visit <https://byjasco.com/47252i>

Exclusive deals



For deals, to register your purchase and to tell us how we're doing, simply scan the code or visit byjasco.com/deals



Discover more lighting from Energizer at byjasco.com



Like our product? Leave a review on your favorite retailer website or amazon.com

Having problems? Let us know how we can help.
1-800-654-8483
between 7AM-8PM, M-F, Central Time.



Energizer®

Motion-Sensing Triple Head Security Light

BATTERIES

Powered by 4 D batteries, not included. When replacing, do not mix old batteries with new batteries.

1. Unlatch each clip and remove the back cover/mounting bracket. (Figure 1)
2. Insert batteries, noting polarity.
3. Ensure ribbon is available to easily remove bottom battery for easy battery replacement in future.

INSTALLATION

Mount the security light on walls or eaves. For the best performance, install at least 8ft. above ground level. Ensure the mounting area is dry and clean of debris.

1. Hold the back cover/mounting bracket in place and mark the location for each screw or use the included template. (Figure 2)
2. Drill pilot holes using a 3/16in. drill bit.
3. Insert the included anchors.
4. Install the back cover/mounting bracket using the included screws and a #1 Phillips-head screwdriver – do not overtighten.
5. Reattach the security light to the mounting bracket, ensuring the clips lock into place. (Figure 3)

SPOTLIGHT OR FLOODLIGHT

Attach or remove the included frosted lenses over each head to alternate between flood and spotlight modes.

Spotlight - When you want a brighter light

- No lens attached, the light shines in a concentrated area.
- When removing the lens, gently use a flathead screwdriver to pop it out of place. (Figure 4)

Floodlight - When you want a more diffused light

- Lens attached, diffused light shines in a wider area.
- When attaching the lens, ensure the holes of the lens are on the side of the light fixture and that it firmly snaps into place.

OPERATION

Motion sensor

The light turns on in low light conditions when motion is detected and off when motion is no longer detected.

- 25ft. range, 180° field
- Rotate sensor left or right to point where you need the most coverage. (Figure 5)

Timeout switch

Use the switch on the base of the light to select when the light turns OFF when motion is no longer detected.

- Full brightness - 100% for 20sec. or 40sec.
- ECO brightness - 50% for 30sec. or 60sec.

Learning button

Based off the surrounding light levels, customize when the motion sensor will be active

- Press the button for 3 seconds when the ambient light levels reach your preferred level – for example, just before sunset. The light will flash to signify that the new program has taken.
- The motion sensors will automatically activate when a similar light level is reached.
- To reset to the default factory setting, press and hold the button for 10 seconds.

MOUNTING TEMPLATE
PLANTILLA PARA LA INSTALACIÓN

KEYHOLE CENTER MARK
Marca central de agujero



2.9in / 73.66mm



KEYHOLE CENTER MARK
Marca central de agujero



Figure 1

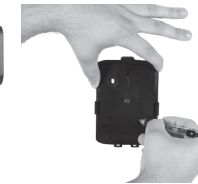


Figure 2



Figure 3



Figure 4



Figure 5

⚠ WARNING

- BATTERIES MAY LEAK HARMFUL LIQUIDS OR IGNITABLE MATERIALS OR EXPLODE CAUSING INJURY OR PRODUCT DAMAGE.
- DO NOT MIX OLD AND NEW OR OTHER BATTERY TYPES.
- REPLACE ALL BATTERIES AT THE SAME TIME.
- REMOVE BATTERIES IF PRODUCT IS TO BE UNUSED FOR EXTENDED PERIOD OF TIME.



Separate paper from plastic before recycling.
byjasco.com/recycle
paper made from 25% post-consumer waste

MADE IN CHINA

©2021 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Jasco Products Company, LLC.

Contact our U.S.-based Consumer Care at 1-800-654-8483 between 7AM-8PM, M-F, Central Time.

1-year warranty. Visit www.byjasco.com for warranty details.