

In-Wall USB Receptacle



Model No.	Receptacle Rating (A/VAC):	Receptacle Configuration:	Class 2 Device Rating (A/VDC):
GE 8099	15/125	NEMA 5-15R	4.8/5.0V

CAUTION:

Risk of Electric Shock

- Shut off power at fuse box circuit breaker before installation or servicing.
- For indoor use only.

Risk of fire

- Do not exceed electrical ratings.
- NOTE: use only copper wire or copper-clad wire with this device.
- The screw terminals accept 14AWG-12AWG copper wire, 12AWG max.
- Must be installed in accordance with national and local electrical codes (NEC).
- All electrical connections must be tightened to 14 lbf-in.
- Do not use to replace GFCI receptacle; this device does not provide ground fault protection.
- This device cannot be used for separate feed circuits. If the outlet you are replacing has the top and bottom outlets controlled by separate circuit breakers, you cannot use this device.

INSTALLATION:

- If you are unsure or uncomfortable with installation, contact a licensed electrician.
- To avoid fire or shock, turn off power. Make sure power is off before wiring.
- Device is designed to fit in a wall box measuring at least 3"x2"x2-1/2" deep (standard single gang electrical wall box) and wired in accordance with National Electrical Code.


Removal of existing receptacle

- Shut off the power at the circuit breaker or remove fuse to the circuit.
- Test, using a lamp or radio, to confirm the power has been disconnected.
- Remove the wallplate.
- Remove receptacle and disconnect the wires from the side or back wire connections.
 - Side wire: Loosen the screws from the black, white and ground wires until there is slight resistance (do not totally remove the screws), then use a flat blade screw driver to back the wires off of the screw.
 - Back wire connections: Use a small screwdriver to release the wire from the back wire terminals and remove the wire.
- If you have enough wire length, you may just cut the wire off at the receptacle terminals.

TAMPER RESISTANT: Blocks insertion of foreign objects into outlets.

Installing In-Wall USB Receptacle


- The USB receptacle is shipped with a white faceplate. If you want to use the Light Almond faceplate remove the white faceplate first and then clip the Light Almond faceplate in place. See installation below.
NOTE: DO NOT REMOVE or install the faceplate with power applied to the receptacle. If you are changing the faceplate after installation turn off power at the fuse or breaker before removing the wallplate and swapping the receptacle faceplate. Use only included faceplate (GE8099-SFA).

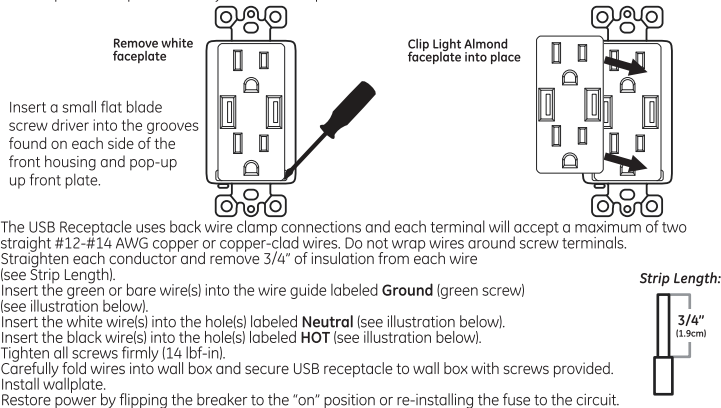

- The USB Receptacle uses back wire clamp connections and each terminal will accept a maximum of two straight #12-#14 AWG copper or copper-clad wires. Do not wrap wires around screw terminals.
- Straighten each conductor and remove 3/4" of insulation from each wire (see Strip Length).
- Insert the green or bare wire(s) into the wire guide labeled **Ground** (green screw) (see illustration below).
- Insert the white wire(s) into the hole(s) labeled **Neutral** (see illustration below).
- Insert the black wire(s) into the hole(s) labeled **HOT** (see illustration below).
- Tighten all screws firmly (14 lbf-in).
- Carefully fold wires into wall box and secure USB receptacle to wall box with screws provided.
- Install wallplate.
- Restore power by flipping the breaker to the "on" position or re-installing the fuse to the circuit.

USB charging

- 4.8 Amp total output allows you to charge up to two tablets or smartphones at full capacity at the same time. Recharge your device at a maximum speed of 2.4 Amp when connected to a single port.
- The USB ports are used to charge portable electronic devices only. There is no data transfer capability, and are not intended to power appliances.

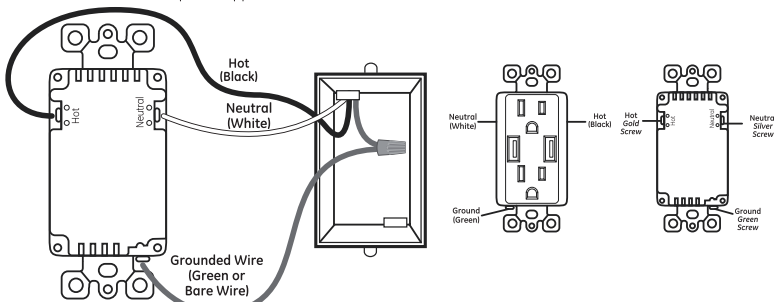

FCC Statement

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3(B)/NMB-3(B)

MADE IN CHINA

GE is a trademark of General Electric Company and is under license by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product comes with a 2-year limited warranty.

Visit www.bjjasco.com for warranty details.

Questions? Contact us at 1-800-654-8483 between 7:00AM—8:00PM CST.



CAUTION

RISK OF ELECTRIC SHOCK

- REMOVE POWER FROM RECEPTACLE BY TURNING OFF CIRCUIT BREAKER OR REMOVING FUSE BEFORE CHANGING REMOVABLE FACEPLATE.

WARNING

RISK OF ELECTRIC SHOCK

- KEEP CHILDREN AWAY
- FULLY INSERT PLUG
- USE Indoors ONLY
- DO NOT USE IN WET LOCATIONS

RISK OF FIRE

- DO NOT EXCEED ELECTRICAL RATINGS

Tomacorriente USB de la pared

Nº de modelo	Especificación del tomacorriente (A/VAC):	Configuración del tomacorriente:	Dispositivo de Clase 2 (A/VDC):
GE 8099	125 V ca 15 A 60 Hz	NEMA 5-15R	4.8/5.0V

PRECAUCIÓN:

Riesgo de descarga eléctrica:

- Corte la electricidad del disyuntor de la caja de fusibles antes de realizar la instalación o el mantenimiento.
- Únicamente para uso en interiores.

Riesgo de incendio

- No exceda las clasificaciones eléctricas.
- Aviso - solo use alambres de cobre o recubiertos de cobre con este dispositivo
- Los tornillos de los bornes aceptan cables de cobre de 14AWG - 12AWG, máx. 12AWG.
- Se debe realizar la instalación según los códigos nacionales y locales de normas de electricidad (NEC).
- Todos las conexiones se deben apretar a 16 kgf-cm.
- No lo utilice para reemplazar un tomacorriente GFCI, este dispositivo no proporciona protección de falla a tierra.
- Este circuito no se puede utilizar con circuitos de alimentación separada. Si los tomacorrientes superior e inferior del tomacorriente que está instalando están controlados por disyuntores diferentes, no puede utilizar este dispositivo.

INSTALACIÓN:

- Si no está seguro o cómodo con la instalación, comuníquese con un electricista autorizado.
- Para evitar el riesgo de incendio o descarga eléctrica, desconecte el suministro eléctrico. Asegúrese de que la electricidad esté desconectada antes de realizar la instalación de los cables.
- El dispositivo está diseñado para que quepa en una caja de por lo menos 3" x 2" x 2-1/2" de profundidad (caja eléctrica estándar de entrada única) y cumple con el Código Estadounidense de Normas de Electricidad.

Cómo quitar el tomacorriente existente

- Apague la electricidad del disyuntor o quite el fusible del circuito.
- Realice una prueba, utilizando una lámpara o radio, para confirmar que se haya desconectado la electricidad.
- Quite la placa de la pared.
- Quite el tomacorriente y desconecte los cables de las conexiones traseras o del costado.

- Cable del costado: Suelte los tornillos de los cables negro, blanco y a tierra hasta que haya una resistencia leve (no los quite completamente) y use un destornillador de hoja plana para soltar los cables de los tornillos.
- Conexiones del cable trasero: Utilice un destornillador pequeño para soltar y quitar el cable de las terminales del cable trasero.


- Si tiene suficiente cable, puede simplemente cortarlo en las terminales del tomacorriente.

TOMACORRIENTES A PRUEBA DE ALTERACIONES: Obstruye la introducción de objetos extraños en las tomas.

Cómo instalar el tomacorriente USB de pared

- El tomacorriente USB viene con una placa frontal blanca. Si desea usar la placa de color almendra claro quite la placa blanca y luego coloque la placa de color almendra claro en su lugar. Consulte las siguientes instrucciones de instalación.

NOTA: NOQuite ni instale la placa frontal cuando el tomacorriente esté conectado a una fuente de alimentación. Si va a cambiar la placa frontal después de instalado, desconecte la alimentación en el panel de fusibles o en el disyuntor antes de quitar la placa y cambiarla por otra. Use solo la placa frontal que se incluye. (GE8099-SFA).

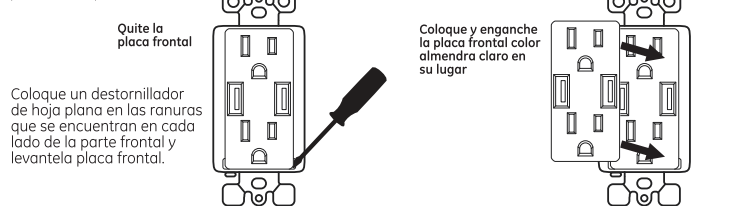

- The USB Receptacle uses back wire clamp connections and each terminal will accept a maximum of two straight #12-#14 AWG copper or copper-clad wires. Do not wrap wires around screw terminals.
- Straighten each conductor and remove 3/4" of insulation from each wire (see Strip Length).
- Insert the green or bare wire(s) into the wire guide labeled **Ground** (green screw) (see illustration below).
- Insert the white wire(s) into the hole(s) labeled **Neutral** (see illustration below).
- Insert the black wire(s) into the hole(s) labeled **HOT** (see illustration below).
- Tighten all screws firmly (14 lbf-in).
- Carefully fold wires into wall box and secure USB receptacle to wall box with screws provided.
- Install wallplate.
- Restore power by flipping the breaker to the "on" position or re-installing the fuse to the circuit.

Carga USB

- 4.8 Amp de salida total le permiten cargar completamente hasta dos tabletas o teléfonos inteligentes al mismo tiempo. Recargue su dispositivo a la velocidad máxima de 2.4 Amp cuando lo conecte a un solo puerto.
- Los puertos USB se utilizan solo para cargar dispositivos electrónicos portátiles. No se ofrecen funciones de transferencia de datos.

Declaración de la FCC:

Este dispositivo cumple con el apartado 15 de las normas de la FCC y con los estándares RSS exentos de licencia de Industry Canada. La operación está sujeta a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencias perjudiciales y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan provocar una operación indeseable.

FCC NOTA: Los cambios o modificaciones a esta unidad que no hayan sido expresamente aprobados por la parte responsable del cumplimiento de las reglas, pueden anular la autoridad del usuario para poder operar el equipo.

NOTA: Este equipo ha sido probado y cumple con los límites para un dispositivo digital de Clase B, de conformidad con la Parte 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencia dañina a la comunicación por radio. Sin embargo, no hay ninguna garantía que no ocurra interferencia en una instalación en particular. Si este equipo causa interferencias perjudiciales a la recepción de radio o televisión, esto se puede comprobar apagando y encendiendo el equipo repetidamente, se le sugiere al usuario tratar de remediar la interferencia tomando una o más de las siguientes medidas:

- Reorientar o reubicar la antena de recepción.
- Aumentar la separación entre el equipo y el receptor.
- Conectar el equipo a un tomacorriente en un circuito distinto de aquel al que está conectado el receptor.
- Consultar al distribuidor o a un técnico de radio / TV para obtener ayuda.

CAN ICES-3(B)/NMB-3(B)

HECHO EN CHINA

GE es una marca comercial de General Electric Company con licencia otorgada a Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

Este producto de Jasco tiene una garantía limitada de 2 años.

Visite www.bjjasco.com para conocer los detalles de la garantía.

¿Preguntas? Comuníquese al 1-800-654-8483 entre las 7:00 a.m. y las 8:00 p.m. CST (hora central estándar).

PRECAUCIÓN

RIESGO DE DESCARGA ELÉCTRICA

- DESCONECTE EL SUMINISTRO ELÉCTRICO DEL TOMACORRIENTE AL APAGAR EL DISYUNTOR O QUITAR EL FUSIBLE ANTES DE CAMBIAR LA PLACA FRONTAL.

ADVERTENCIA

RIESGO DE CHOQUE ELÉCTRICO

- NO LO USE EN LUGARES HÚMEDOS
- NO LO DEJE AL ALCANCE DE LOS NIÑOS
- USE SOLAMENTE EN INTERIORES
- INSERTE COMPLETAMENTE EL ENCHUFE

RIESGO DE INCENDIO

- NO EXCEDA LOS LÍMITES ELÉCTRICOS PERMITIDOS